



Fixed Flat Panel Wall Mount

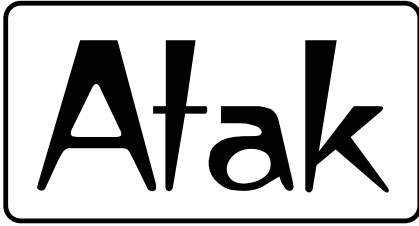

Installation Guide

Model: XD6220 (AXTVKIT)

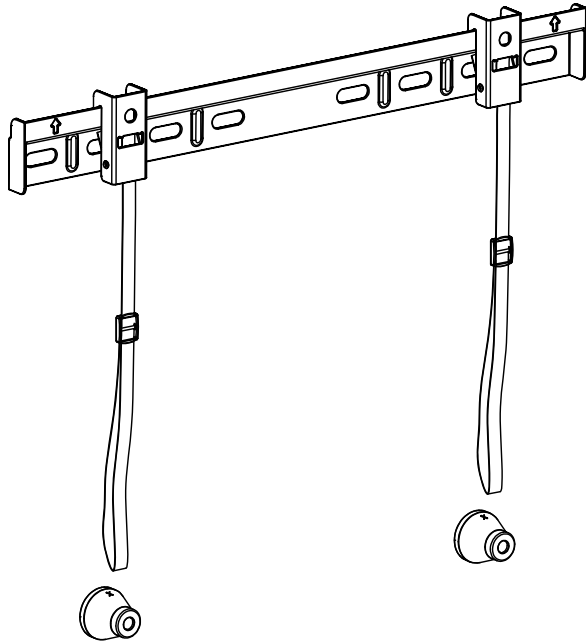

- Supports most 23"-55" Televisions
- Maximum weight capacity: 50 lbs.
- Supports VESA sizes up to: 400x400

**For technical assistance or troubleshooting
please call 1-855-994-2825 or visit www.sibrandssupport.com**



WARNING!
This product Wall Mount frame is intended for use only with an apparatus which has a maximum weight of 50 lbs. See apparatus instructions. Using with an apparatus heavier than the maximum weight indicated may result in instability and cause possible injury.

READ THIS FIRST Read this entire manual! Do not attempt to install this product if you do not understand the instructions. Contact a qualified mount installer if you have any doubts about a safe and secure mount installation, or if you are not sure what specific wall materials you are attaching this mount to. Check all the parts carefully to make sure there are no missing or damaged parts. Improper installation may result in damage to your TV, property, and personal injury.



This product is intended only to mount a television of the indicated size and weight. Using this product to mount televisions heavier than the maximum weight capacity can damage equipment and cause personal injury.

Schoenfeld International Inc. and ATAK are not responsible for personal injury or product damage due to mishandling, incorrect mounting, incorrect assembly, or incorrect use of this product.



CHILD SAFETY

How and where you use your television wall mount is extremely important for Child Safety

As you set up and use your new product, keep all of these safety tips in mind.

- **One size of TV wall mount does not fit all TVs. Use only a TV wall mount rated for the weight of your TV and the size of your screen. Your TV wall mount assembly instructions contains specific information on the maximum weight and screen size combination that your wall mount can safely support. Do not exceed the maximum weight of screen size for any TV wall mount.**
- **Carefully read all of enclosed instructions for proper use of this product. If you have any doubts about safe and secure assembly, please contact a professional.**
- **Don't let children climb on or play with mounts or TVs.**
- **Remember that children can become excited while watching a program, especially on a "larger than life" TV. Make sure to place or install the TV wall mount where it cannot be pushed, pulled on, or knocked down.**
- **Make sure that you route all cords and cables so that they cannot be pulled or grabbed by curious children.**



Always wear safety goggles to when drilling or installing hardware.


Tools

For your convenience, we have included an allen wrench and a socket tool with this mount. For the best assembly experience and mounting safety, we always recommend using full-size tools for each assembly steps.

Below is a recommended tool list you will need for proper and safe installation. See applicable warnings in this manual about certain types of mounting surface materials and the special hardware and tools that should be used.

- **Drill with a specific size drill bit to pre-drill holes in the wall**
- **Stud finder**
- **Tape measure**
- **Pencil**
- **Screw drivers**
- **Socket wrenches**
- **Small hammer**
- **Safety goggles**


● Part List:

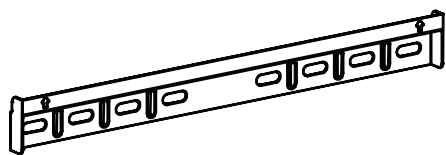

1- Wall Plate
1pc



 2- Bracket
2pcs



3- Wall Spacer
2pcs

● Hardware list:

4--Lag bolt 2pcs	5--Anchor 2pcs	6--M8 washer 2 pcs	7--Allen wrench 1pc	8--Socket tool 1pc

A--M4X12 bolt 4pcs	B--M5X12 bolt 4pcs	C--M6X12 bolt 4pcs

D--M8X25 bolt 4pcs	E--M4X30 bolt 4pcs	F--M5X30 bolt 4pcs	G--M6X35 bolt 4pcs	H--M8X50 bolt 4pcs

I--M5/M4 washer 4pcs	J--M6 washer 4pcs	K--M5/M6 spacer 4pcs	L--M8 spacer 4pcs	M--10mm spacer 4pcs	N--2.5mm spacer 8pcs

The actual appearance of the parts may be different than shown in the illustrations.

Step 1: Attach the left and right brackets to your TV



Do not force the bolts into the mounting holes on your TV. Do not use an electric drill to tighten these bolts on your TV. This could damage the equipment or cause personal injury.

CAUTION: Do not place the TV face down on a hard surface when installing the mounting plate on the TV. Placing the TV face down on a hard surface can result in equipment damage. Use a blanket or other suitable surface.

Check your TV manual to confirm the required bolt diameter according to the size, depth, and position of the mounting holes in your TV.


For correct installation, install the brackets with the hook on each bracket facing down

Center the Brackets (2) vertically on the rear of the TV. Attach the Brackets (2) to the rear of the TV using two of the bolts (A-H) with the proper size washers (I-J) as shown in Fig. 1.

Do not over tighten.

If the back of the TV is not flat, or if the bolts are too long, it may be necessary to use Spacers (K-N) as shown below. Multiple Spacers can be used with each bolt to reach the proper length.

Attach the Wall Spacers (3) to the rear of the TV using two of the bolts (A-H) with the proper size Washers (I-J) and Spacers (K-N) (If Necessary) as shown in Fig. 1.

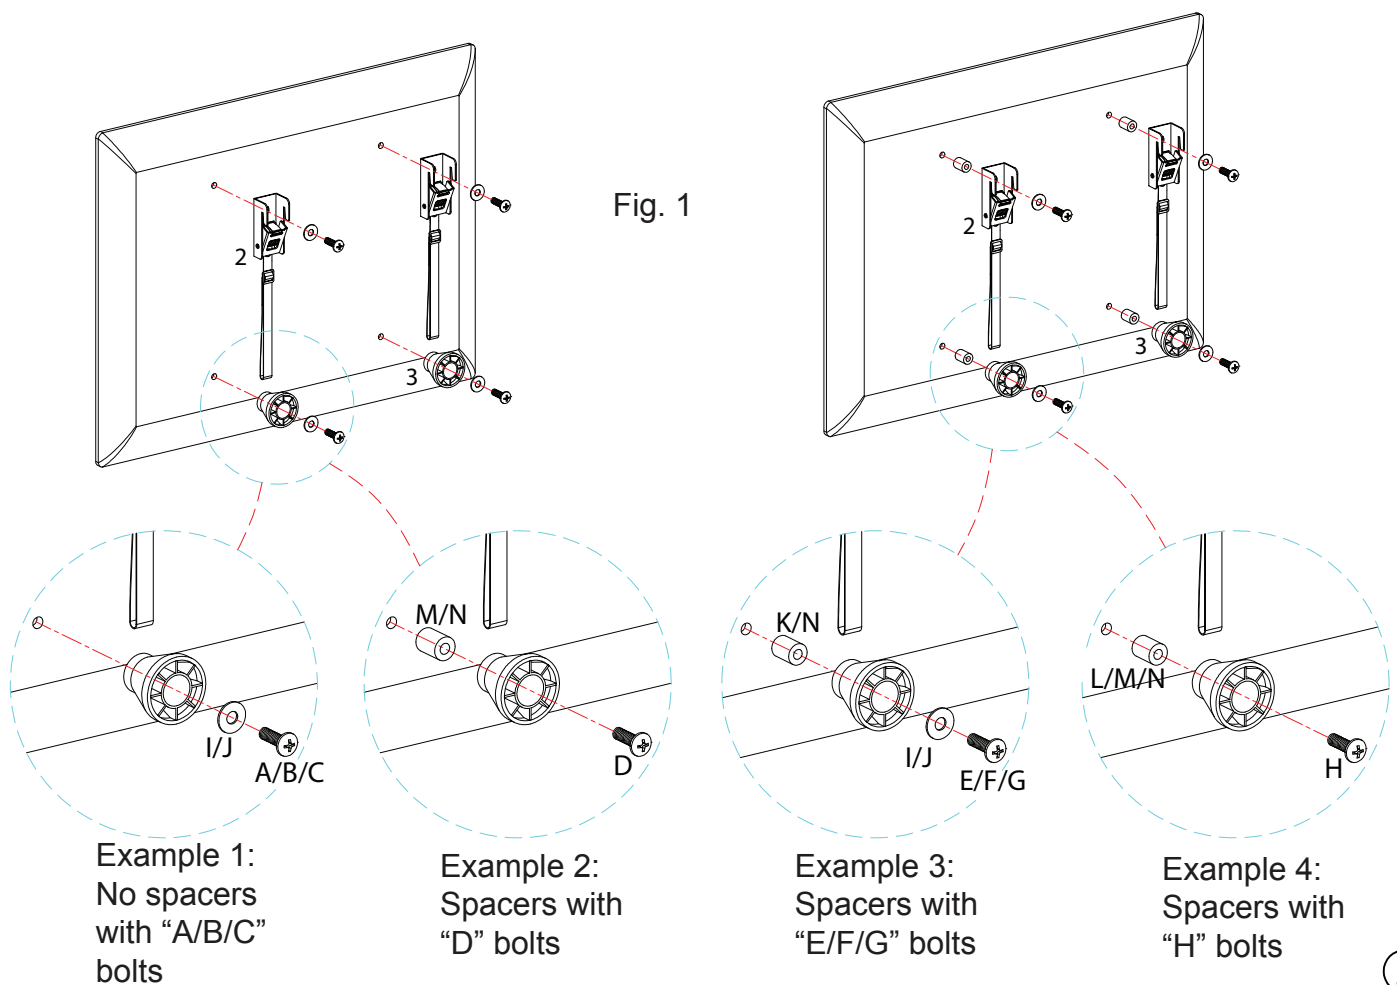

Wood stud walls

1. Use a pencil, awl, or a nail to mark the location of the wall stud centers (Fig 2a) after locating the stud with an electronic stud locator. The distance between marks should not be less than 16 inches (Studs must not be less than 16 inches (40.6cm).)
2. Place the Wall Plate flat against the wall with the center of the Wall Plate in the desired location, aligning the holes in the Wall Plate with the studs (Fig 2b). use the Wall Plate as a template to mark the location of the two mounting holes on the wall. Make sure that the mounting holes are level and are parallel.
3. Use 7/32" (5.5mm) drill bit to pre-drill holes at least 2.5" inches (65mm) deep at the marked locations.
4. Use a wrench, the two Lag Bolts (4) and M8 Washers (6) to attach the Wall Plate to the wall. Do not use wall anchors in wood stud walls.
5. Use the magnet level placed on the front of the Wall Plate to level the mount, repositioning as necessary, then firmly tighten the bolts. Do not overtighten.

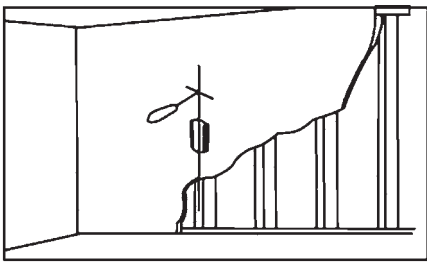


Fig. 2a

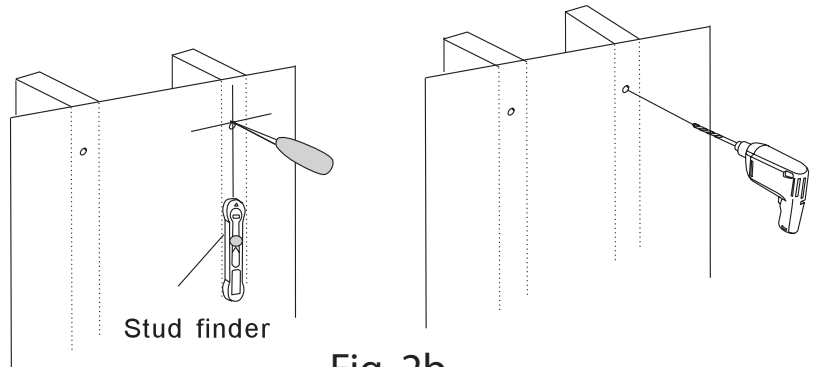


Fig. 2b

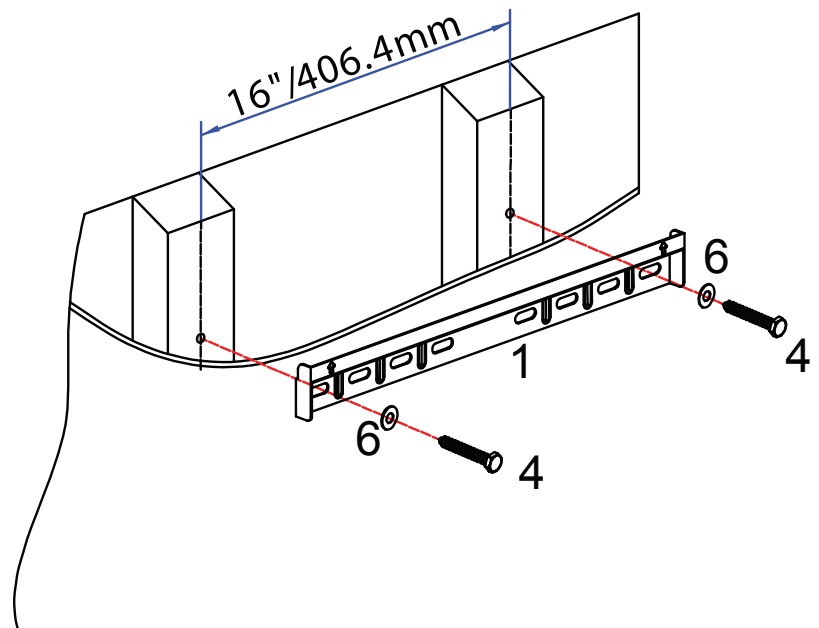
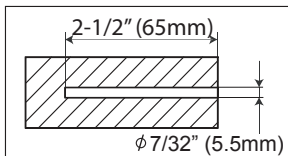


Fig. 2c

Concrete Walls:

1. Place the Wall Plate flat against the wall with the center of the Wall Plate in the desired location, Use the Wall Plate as a template to mark the location of the two mounting holes on the wall. Make sure that the mounting holes are level and are parallel. Make sure the holes are no closer than 16" apart.
2. Use 3/8" (10mm) drill bit to pre-drill holes at least 2.5" inches (65mm) deep at the marked locations. (Fig 3a)
3. Insert a Wall Anchor (5) into each pre-drilled hole and lightly tap it with a hammer until the Wall Anchor is flush with the wall.
4. Use a wrench, the two Lag Bolts (4) and M8 Washers (6) to attach the Wall Plate to the wall.
5. Use the magnet level placed on the front of the Wall Plate to level the mount, repositioning as necessary, then firmly tighten the bolts.


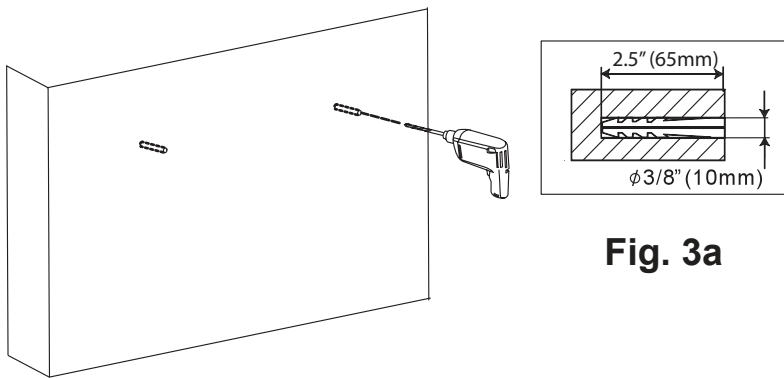


Fig. 3a

Concrete wall

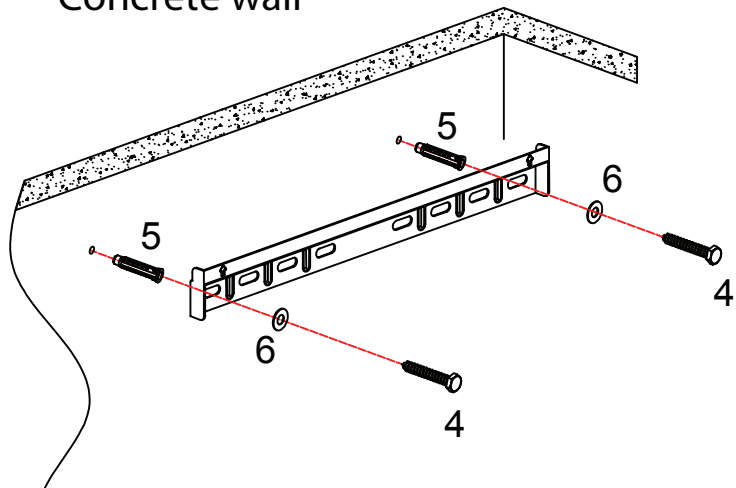

Hang the TV

1. Using two people, lift the television display with the brackets and wall spacers securely attached up to the wall plate.
2. Hook the top of the Brackets (2) onto the top flange of the Wall Plate (Fig. 4), then swing the screen carefully down.
3. As the TV swings down and the lower part of the Brackets come in contact with the Wall Plate, secure each bracket to the Wall Plate by pulling down on the attached ribbon (one Bracket at a time) to open the spring-loaded lock. Release each ribbon to close and secure the lock mechanism. Test each lock by pulling gently upward from the bottom of the TV. If the lock is secure the TV will not pull upward.



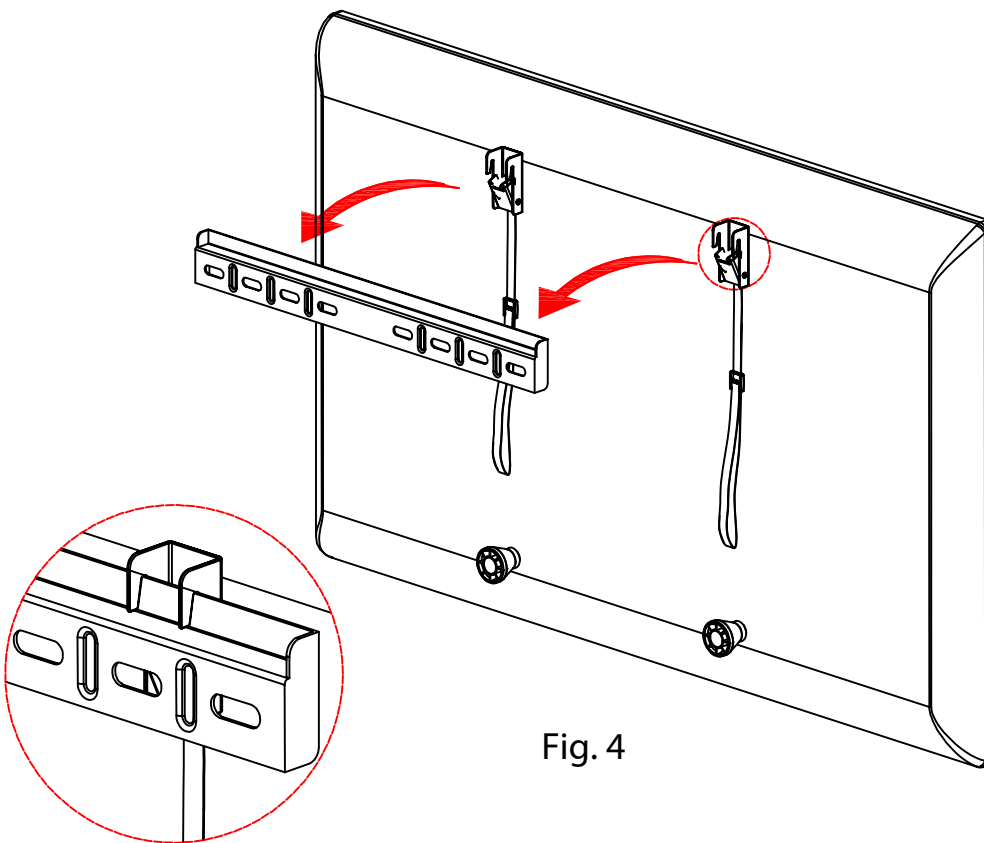


Fig. 4

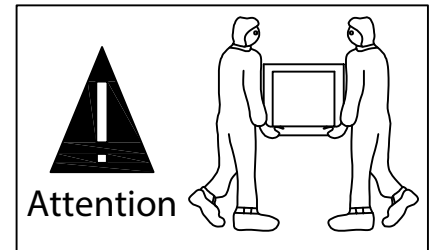

Removing the TV

To remove the TV from the Wall Plate pull down on each ribbon to release the lock mechanism, and then gently lift the TV off the top of the Wall Plate.

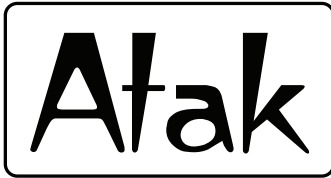

LIMITED SIX-YEAR WALL MOUNT WARRANTY

We warrant this product to you, the original purchaser at the time of purchase printed on a dated store receipt from an authorized ATAK retailer and for a period of six-years thereafter that our wall mount product and all its parts and components are free of defects in material and workmanship under normal use. This warranty is subject to the provisions below. ATAK's sole obligation and the purchaser's exclusive remedy pursuant to these warranties are limited to replacement at ATAK's sole discretion. There are no other warranties except as expressly set forth below either expressed or implied, including any warranty of merchantability for any particular purpose.

Should you be missing any of the assembly parts or components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

Our Customer Support Center is available Monday to Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us please call 1-855-994-2825 or visit www.sibrandssupport.com

This warranty is expressly limited to the replacement of wall mount parts and components described in the parts list located in the Instruction Manual included with the product.

This warranty applies under conditions of normal use.

This warranty does not cover: any product, which has been subject to damage due to improper assembly or disassembly, products which were not assembled, installed, used, or maintained in accordance with the product assembly instructions & warnings, acts of nature, misuse, neglect, accidents, abuse, exposure to elements, outdoor use, extreme temperature ranges, damage during transit, commercial use, modification of, or to any part of the product or attachments to the product not approved by ATAK. Also not covered are costs for assembly/dis-assembly labor, costs incurred in shipping the unit or parts for warranty repair/exchange or any products purchased from unauthorized ATAK sellers. Under no circumstances shall ATAK, be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product. Nor shall ATAK have any responsibility for incidental or consequential damages resulting from the breach of this warranty including but not limited to inconvenience, purchase or rental of replacement products, loss of profits or commercial loss.

We reserve the right to request damaged parts or units be shipped to our offices for inspection or confirmation of any warranty claims.

This warranty does not cover product sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

Schoenfeld International Inc and ATAK

5001 American Boulevard West

Suite 275

Bloomington, MN 55437

©Schoenfeld International Inc, 2018

PN: ATAK XD6220 / AXTVKIT Rev 1.0 July 2018