



BLUETOOTH CLOCK RADIO

Model: BS001CR





**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE
OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR
FUTURE REFERENCE.**

**For technical assistance or troubleshooting please
call 1-855-719-8324 or visit www.sibrandssupport.com**

WARNINGS

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To reduce the risk of electric shock, do not open the cabinet. No user serviceable parts are inside. Refer servicing to qualified personnel.
- This appliance uses a Laser System. To prevent direct exposure to the laser beam do not open the cabinet. Visible and invisible laser radiation is present when the cabinet is open. Avoid direct exposure and do not stare into the beam.
- Batteries should not be exposed to excessive heat such as direct sunlight, fire, or other heat sources.
- Caution: Do not expose this appliance to dripping or splashing liquids. Do not put objects filled with liquid, such as vases on or near the appliance.
- Caution: To turn this appliance off completely, the POWER cord must be unplugged from the wall outlet. The power cord must be easily accessible at all times.

 <p>THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE FRONT OR REAR COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.</p>
--	--	---

FCC WARNINGS

WARNING: Changes or modifications to this unit not expressly approved in this manual could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and/or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the POWER cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as POWER-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



LOCATION OF CONTROLS

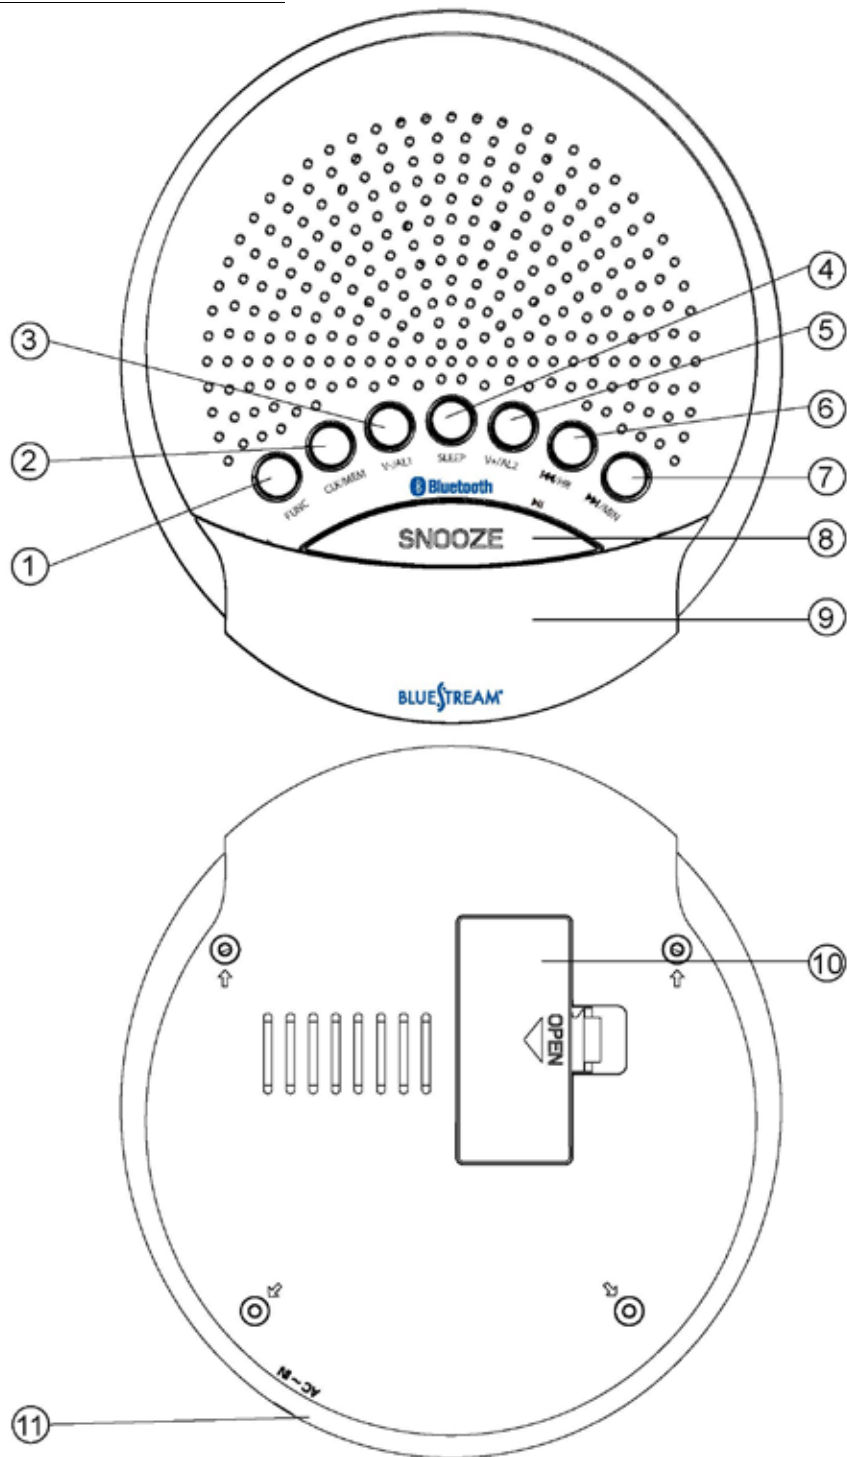

1. FUNCTION button	7. NEXT / MINUTE button
2. CLOCK / MEMORY button	8. SNOOZE button
3. VOLUME DOWN / ALARM-1 button	9. LED Display
4. SLEEP button	10. Battery Door
5. VOLUME UP / ALARM-2 button	11. AC Power Cord
6. PREV / HOUR button	• AC 120V~60Hz to DC 6V 0.4A

NOTE: Some buttons have multiple functions based on if the function requires a “Press” (Press & Immediately Release the button) command or a “Press & Hold” (Press & Hold the button for 1-2 seconds) command.

EXPLANATION OF DISPLAY LIGHTS



LETTER	DESCRIPTION
A	“AM” INDICATOR LIGHT
B	ALARM-1 BUZZER INDICATOR LIGHT
C	ALARM-1 RADIO INDICATOR LIGHT
D	BLUETOOTH INDICATOR LIGHT
E	ALARM-2 BUZZER INDICATOR LIGHT
F	ALARM-2 RADIO INDICATOR LIGHT

NOTE: Some buttons have multiple functions based on if the function requires a “Press” (Press & Immediately Release the button) command or a “Press & Hold” (Press & Hold the button for 1-2 seconds) command.

SETTING THE TIME

NOTE: Before setting the TIME make sure all of the non-clock functions (BLUETOOTH, FM, AM) are turned OFF. If any of the non-clock functions are playing, turn the function OFF by simply pressing & holding the **FUNCTION** button (1).

1. Press & hold the **CLOCK / MEMORY** button (2) until the time flashes on the LED display. Once the time is flashing you can release the **CLOCK / MEMORY** button (2).
2. Press the **PREV / HOUR** button (6) repeatedly until the correct HOUR is shown on the LED display.
 - **NOTE:** The “AM” Indicator Light (A) will turn ON when the hour is set to AM. For PM hours the “AM” Indicator Light (A) will turn OFF.
3. Press the **NEXT / MINUTE** button (7) repeatedly until the correct MINUTE is shown on the LED display.

EXPLANATION OF DISPLAY LIGHTS



LETTER	DESCRIPTION
A	“AM” INDICATOR LIGHT
B	ALARM-1 BUZZER INDICATOR LIGHT
C	ALARM-1 RADIO INDICATOR LIGHT
D	BLUETOOTH INDICATOR LIGHT
E	ALARM-2 BUZZER INDICATOR LIGHT
F	ALARM-2 RADIO INDICATOR LIGHT

NOTE: Some buttons have multiple functions based on if the function requires a “Press” (Press & Immediately Release the button) command or a “Press & Hold” (Press & Hold the button for 1-2 seconds) command.

SETTING THE ALARM

CAUTION: Before setting the Alarm make sure the correct **TIME** is shown on the LED Display.

NOTE: Before setting the **TIME** make sure all of the non-clock functions (BLUETOOTH, FM, AM) are turned OFF. If any of the non-clock functions are playing, turn the function OFF by simply pressing & holding the **FUNCTION** button (1).

1. Press & hold the **VOLUME DOWN / ALARM-1** button (3) until the time flashes on the LED display and the **ALARM-1 BUZZER Indicator Light (B)** flashes. Once the time is flashing you can release the **VOLUME DOWN / ALARM-1** button (3).
2. Press the **PREV / HOUR** button (6) repeatedly until the correct **HOUR** is shown on the LED display.
 - **NOTE:** The “AM” Indicator Light (A) will turn ON when the hour is set to AM. For PM hours the “AM” Indicator Light (A) will turn OFF.
3. Press the **NEXT / MINUTE** button (7) repeatedly until the correct **MINUTE** is shown on the LED display.
4. After setting the **HOURS & MINUTES** press the **VOLUME DOWN / ALARM-1** button (3) to confirm the **ALARM-1** time.
5. The clock will automatically set the Alarm-1 for **BUZZER** and the **ALARM-1 BUZZER Indicator Light (B)** will turn ON.
6. To choose to wake to **RADIO** simply press the **VOLUME DOWN / ALARM-1** button (3) until the **ALARM-1 RADIO Indicator Light (C)** turns ON.
7. To turn the **ALARM OFF** press the **VOLUME DOWN / ALARM-1** button (3) until both the **ALARM-1 Indicator Lights (B & C)** turn OFF.

NOTE: Some buttons have multiple functions based on if the function requires a “Press” (Press & Immediately Release the button) command or a “Press & Hold” (Press & Hold the button for 1-2 seconds) command.

SETTING THE SECOND ALARM

NOTE: This Alarm Clock can be set for two separate Alarm times.

NOTE: Before setting the TIME make sure all of the non-clock functions (BLUETOOTH, FM, AM) are turned OFF. If any of the non-clock functions are playing, turn the function OFF by simply pressing & holding the **FUNCTION** button (1).

1. Press & hold the **VOLUME UP / ALARM-2** button (5) until the time flashes on the LED display and the **ALARM-2 BUZZER Indicator Light (E)** flashes. Once the time is flashing you can release the **VOLUME UP / ALARM-2** button (5).
2. Press the **PREV / HOUR** button (6) repeatedly until the correct HOUR is shown on the LED display.
 - **NOTE:** The “AM” Indicator Light (A) will turn ON when the hour is set to AM. For PM hours the “AM” Indicator Light (A) will turn OFF.
3. Press the **NEXT / MINUTE** button (7) repeatedly until the correct MINUTE is shown on the LED display.
4. After setting the HOURS & MINUTES press the **VOLUME UP / ALARM-2** button (5) to confirm the ALARM-2 time.
5. The clock will automatically set the Alarm-2 for BUZZER and the **ALARM-2 BUZZER Indicator Light (E)** will turn ON.
6. To choose to wake to **RADIO** simply press the **VOLUME UP / ALARM-2** button (5) until the **ALARM-2 RADIO Indicator Light (F)** turns ON.
7. To turn the ALARM OFF press the **VOLUME UP / ALARM-2** button (5) until both the **ALARM-1 Indicator Lights (E & F)** turn OFF.

SNOOZE

Once the alarm sounds you can press the **SNOOZE** button (4) and the alarm will temporarily be silenced. After Nine Minutes have passed the Alarm will sound again.

STOPPING THE ALARM

To permanently stop the alarm from sounding simply press the **FUNCTION** button (1) and the alarm will automatically stop.

- **NOTE:** The Alarm-1 and/or Alarm-2 setting will still be ON and set for the same time for the next day.

FUNCTION

The **FUNCTION** button (1) will turn the non-clock functions ON & cycle through the different function options (BLUETOOTH, FM, AM).

- To turn the non-clock functions ON, simply press the **FUNCTION** button (1) repeatedly until you arrive at the desired function (BLUETOOTH, FM, AM)
- To turn the non-clock functions OFF, press & hold the **FUNCTION** button (1) until the LED display shows only the current time.

VOLUME

- To Increase Volume - Press the **VOLUME UP / ALARM-2** button (5)
- To Decrease Volume - Press the **VOLUME DOWN / ALARM-1** button (3)

EXPLANATION OF DISPLAY LIGHTS



LETTER	DESCRIPTION
A	“AM” INDICATOR LIGHT
B	ALARM-1 BUZZER INDICATOR LIGHT
C	ALARM-1 RADIO INDICATOR LIGHT
D	BLUETOOTH INDICATOR LIGHT
E	ALARM-2 BUZZER INDICATOR LIGHT
F	ALARM-2 RADIO INDICATOR LIGHT

NOTE: Some buttons have multiple functions based on if the function requires a “Press” (Press & Immediately Release the button) command or a “Press & Hold” (Press & Hold the button for 1-2 seconds) command.

PAIRING TO A BLUETOOTH DEVICE

1. Turn your Bluetooth device **OFF** entirely and then turn it back **ON** to refresh the device’s Bluetooth memory.
2. Find the Bluetooth menu in your device and make sure the Bluetooth function is turned **ON** (refer to your device’s user manual for instructions on finding the Bluetooth menu).
3. Press the **FUNCTION** button (1) until “BT” is shown on the LED Display and the **BLUETOOTH Indicator Light (D)** flashes to indicate the clock is ready to be paired.
4. On your device, perform a Bluetooth “device discovery” to add the **BS001CR** as a new device.
5. When the speaker is discovered your device will display “**BS001CR**” in the Bluetooth menu.
6. If your Bluetooth device asks for a password, enter “0000” and the device will now pair with the **BS001CR** and be ready to use.
NOTE: The **BLUETOOTH Indicator Light (D)** will turn solid BLUE when the speaker has successfully paired with your device
7. If supported by your device’s menu, set the **BS001CR** as “set as authorized” or “add to trusted devices”.

NOTE: Some buttons have multiple functions based on if the function requires a “Press” (Press & Immediately Release the button) command or a “Press & Hold” (Press & Hold the button for 1-2 seconds) command.

LISTENING TO A BLUETOOTH DEVICE

After successfully pairing your Bluetooth device with the **BS001CR**, you can begin playing music simply by choosing the song you wish to hear on your device's menu system (refer to your device's user manual for instruction on playing music).

To Play or Pause music press the **SNOOZE** button **(4)**

To Skip to the Next song press the **NEXT / MINUTE** button **(7)**

To Skip to the Previous song press the **PREV / HOUR** button **(6)**

NOTE: All Playback controls (Play, Pause, Skip + / -, etc.) can also be controlled directly on your Bluetooth device.

LISTENING TO RADIO

1. Press the **FUNCTION** button **(1)** repeatedly until the LED Display shows a FM Radio frequency (such as “93.3” or “103.3”).
2. To listen to AM Radio simply press the **FUNCTION** button **(1)** until the LED Display shows an AM Radio frequency (such as “880” or “1040”).
3. To change to a different Radio Station (Frequency) press the **NEXT / MINUTE** button **(7)** to tune to a higher numbered station, or press the **PREV / HOUR** button **(6)** to tune to a lower numbered station.

- **TIPS FOR BEST RECEPTION**

- The AM & FM antennas are built-in to the cabinet of this player. To improve reception of radio stations simply move the entire player to another location until reception improves.

RADIO PRESETS

This Alarm Clock can store 10-FM & 10-AM radio stations in the Preset memory. To store preset stations follow the steps below.

1. Use the **NEXT / MINUTE (7)** or **PREV / HOUR (6)** buttons to tune to the desired radio station.
2. Press & hold the **CLOCK / MEMORY** button **(2)** until “**P01**” flashes on the LED Display.
3. Use the **NEXT / MINUTE (7)** or **PREV / HOUR (6)** buttons to choose which preset (P01 – P10) you wish to use for the current Radio Station.
4. Press the **CLOCK / MEMORY** button **(2)** to set the current Radio Station to the selected preset shown on the LED Display.
5. Repeat steps 1-4 to set additional presets into the memory.

To tune directly to your Radio Presets simply press the **CLOCK / MEMORY** button **(2)** repeatedly to cycle through the Presets stored in the memory.

SLEEP FUNCTION

This Alarm Clock can be set to play music for a set amount of time (10-60 minutes) and then automatically turn OFF using the SLEEP Timer.

To turn the SLEEP Timer function **ON** simply press the **SLEEP** button **(4)** and “90” will show on the LED Display indicating the music will automatically turn **OFF** after 90 minutes.

To adjust the amount of time before the music will turn OFF, press the **SLEEP** button **(4)** repeatedly until the correct amount of time (90 – 80 -70 – 60 – 50 – 40 – 30 – 20 – 10 minutes) is shown on the LED Display.

To turn the SLEEP Timer OFF continue pressing the **SLEEP** button **(4)** until the LED Display shows “**OFF**”.

BATTERY INSTALLATION FOR POWER BACKUP - Requires 2 AAA Batteries (Not Included)

In case of a Power failure, the Battery Backup will keep the Clock & Alarm times accurate until the main power has been restored.

During a power failure the LED display will remain OFF until power has been restored.

NOTE: Batteries are not required for normal use of this clock. The purpose of the Battery Backup is to insure the correct Time & Alarm settings are stored in the Clock Memory in the event of a power failure.

- Open the Battery Compartment by gently pushing the tab on the compartment door in the direction indicated on the bottom of the clock.
- Insert 2 AAA batteries (not included) following the + / - polarity as indicated in the compartment.
- Replace the door to the Battery Compartment and make sure it properly clicks in place.

NOTE: Do not force the door as breakage may occur.

TROUBLESHOOTING

Symptom	Possible Cause	Solution
Alarm did not sound	- Alarm was not properly turned ON. - Alarm was not set to the correct Time (AM / PM)	- Check the LED Display Lights to insure the correct Alarm is turned ON - Check the Alarm Time reset as necessary
No sound	- Clock not in correct Function. - Volume set at minimum	- Press the FUNCTION button (1) to the desired Function (Bluetooth, FM, AM). - Increase Volume.
Time is Flashing	- Power Loss	- Reset the Time



LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized BLUESTREAM dealer.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the ninety-day warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-719-8324, or visit www.sibrandssupport.com.

This warranty applies only under conditions of normal use. Our products are not intended for outdoor use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as smartphones, tablets, memory storage, and/or other devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall BLUESTREAM be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL BLUESTREAM BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

This page is intentionally left blank

Schoenfeld International Inc. and BLUESTREAM
5001 American Boulevard West
Suite 275
Bloomington, Minnesota 55437

©Schoenfeld International Inc., 2015
BS001CR Ver. 1.0 March 2015