

BLUESTREAM[®]

BLUETOOTH BOOMBOX

Model: BS2083BB





**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE
OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR
FUTURE REFERENCE.**

**For technical assistance or troubleshooting
call 1-855-719-8324 or visit www.sibrandssupport.com**

WARNINGS

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To reduce the risk of electric shock, do not open the cabinet. No user serviceable parts are inside. Refer servicing to qualified personnel.
- This appliance uses a Laser System. To prevent direct exposure to the laser beam do not open the cabinet. Visible and invisible laser radiation is present when the cabinet is open. Avoid direct exposure and do not stare into the beam.
- Batteries should not be exposed to excessive heat such as direct sunlight, fire, or other heat sources.
- Caution: Do not expose this appliance to dripping or splashing liquids. Do not put objects filled with liquid, such as vases on or near the appliance.
- Caution: To turn this appliance off completely, the POWER cord must be unplugged from the wall outlet. The power cord must be easily accessible at all times.

 <p>THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE FRONT OR REAR COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.</p>
--	--	---

FCC WARNINGS

WARNING: Changes or modifications to this unit not expressly approved in this manual could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFETY INSTRUCTIONS


- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and/or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the POWER cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as POWER-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




LOCATION OF CONTROLS

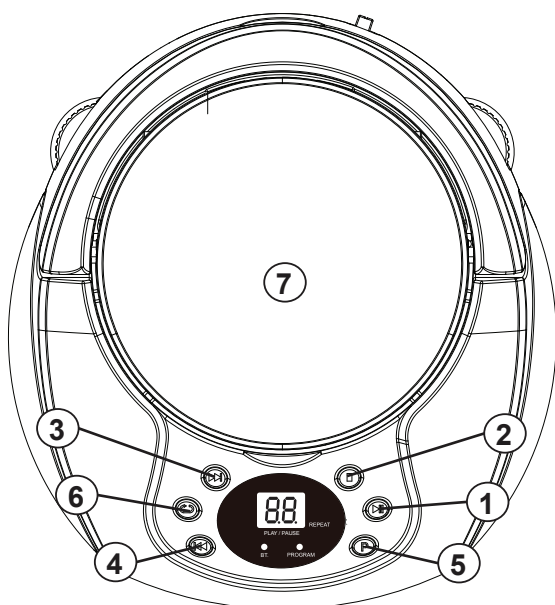


FRONT / TOP

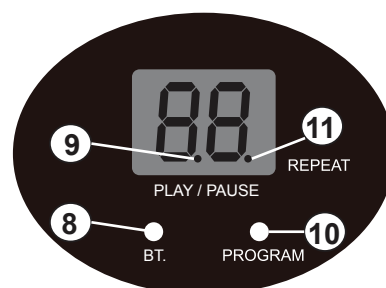 

DISPLAY

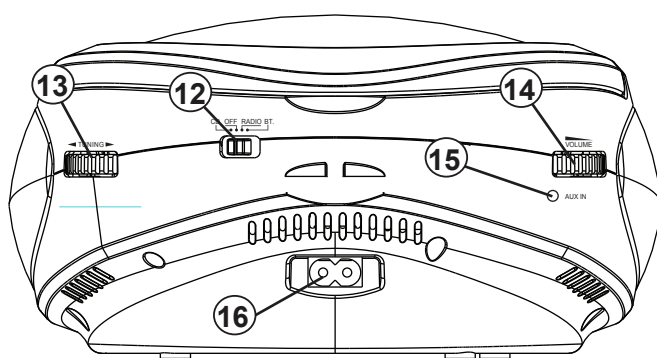 

REAR

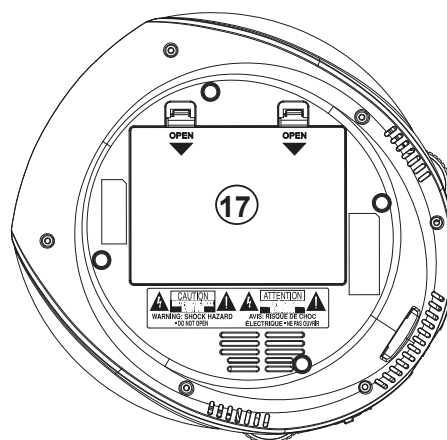 

BOTTOM

1. PLAY / PAUSE button	10. PROGRAM Indicator Light
2. STOP button	11. REPEAT Indicator Light
3. NEXT / F.FWD button	12. FUNCTION Switch (CD / OFF / RADIO / *BT)
4. PREV / F.REV button	13. RADIO Tuning Knob
5. PROGRAM button	14. VOLUME Knob
6. REPEAT button	15. AUX-IN Jack
7. CD Door	16. Power Cord Input (AC 120V~60Hz)
8. BLUETOOTH Indicator Light	17. Battery Compartment
9. PLAY / PAUSE Indicator Light	

*BT = BLUETOOTH

POWER

AC POWER (Wall Outlet)

1. Plug the supplied AC Power Cord into the **Power Cord Input (16)** on the rear of the unit.
2. Insert the wall plug of the AC Power Cord into an electrical wall outlet.

BATTERY POWER

1. Open the **Battery Compartment (17)** by gently pushing the tabs on the compartment door in the direction indicated on the bottom of the unit.
2. Insert 6 'C' size batteries (not included) into the **Battery Compartment (17)**. Be sure to place the batteries in the same polarity (+ or -) direction indicated on the engraved diagram inside the **Battery Compartment (17)**.
3. Replace the door to the **Battery Compartment (17)** by carefully sliding it back into place.

VOLUME

The volume is adjusted by turning the **VOLUME Knob (14)** on the left side of the unit.

- To Increase the Volume: Rotate the **VOLUME Knob (14)** toward the Rear of the unit.
- To Decrease the Volume: Rotate the **VOLUME Knob (14)** toward the Front of the unit.

PAIRING TO A BLUETOOTH DEVICE

1. Turn your Bluetooth device **OFF** entirely and then turn it back **ON** to refresh the device's Bluetooth memory.
2. Find the Bluetooth menu in your device and make sure the Bluetooth function is turned **ON** (refer to your device's user manual for instructions on finding the Bluetooth menu).
3. Adjust the **FUNCTION Switch (12)** to the **BT** position. The **BLUETOOTH Indicator Light (8)** will blink BLUE, indicating the boombox is ready to be paired.
4. On your device, perform a Bluetooth "device discovery" to add the **BS2083BB** as a new device.
5. When the speaker is discovered your device will display "**BS2083BB**" in the Bluetooth menu.
6. If your Bluetooth device asks for a password, enter "0000" and the device will now pair with the **BS2083BB** and be ready to use.
NOTE: The **BLUETOOTH Indicator Light (8)** will turn solid BLUE when the speaker has successfully paired with your device.
7. If supported by your device's menu, set the **BS2083BB** as "set as authorized" or "add to trusted devices".

PLAYING MUSIC

After successfully pairing the speaker with your Bluetooth device, you can begin playing music simply by choosing the song you wish to hear on your device's menu system (refer to your device's user manual for instruction on playing music).

NOTE: All Playback controls (Play, Pause, Skip + / -, etc.) can also be controlled directly on your Bluetooth device.

PLAYING A CD

1. Open the **CD Door (7)** by gently lifting the door with your thumb and index finger.
2. Insert a CD with the label side facing UP.
3. Close the **CD Door (7)** by gently pressing down on the door with your finger.
4. Adjust the **FUNCTION Switch (12)** to the **CD** position. The player will automatically turn ON and the total number of tracks (songs) on the CD will be shown on the Display.
5. Press the **PLAY / PAUSE** button **(1)** to start playing the CD. The **PLAY / PAUSE Indicator Light (9)** will automatically turn on.
6. Press the **PLAY / PAUSE** button **(1)** again to momentarily pause playback. The **PLAY / PAUSE Indicator Light (9)** will automatically start blinking. To resume playback press the **PLAY / PAUSE** button **(1)** again.
7. To Stop playing the CD press the **STOP** button **(2)**.

SKIPPING TRACKS (SONGS)

- To skip to the next track press the **NEXT / F.FWD** button **(3)**
- To move to the beginning of the current track press the **PREV / F.REV** button **(4)**
- To skip to a previous track press the **PREV / F.REV** button **(4)** multiple times in a row until the desired track is shown on the Display.

SEARCHING TRACKS

- While playing a CD press and hold the **NEXT / F.FWD** button **(3)** to scan Fast Forward through the current track. Release the button when you reach the desired portion of the track you want to hear.
- Press and hold the **PREV / F.REV** button **(4)** to Fast Reverse through the current track. Release the button when you reach the desired portion of the track you want to hear.

PROGRAMMED PLAYBACK

Up to 20 tracks of a CD can be programmed to play in any desired order.

1. To set a Program order, first make sure the CD is not currently playing by pressing the **STOP** button **(2)**
2. Press the **PROGRAM** button **(5)**. The **PROGRAM Indicator Light (10)** will automatically start blinking, and the Display will start blinking "01"
3. Press the **NEXT / F.FWD (3)** or **PREV / F.REV (4)** button to until the number of the first track you want to program is shown in the Display.
4. Press the **PROGRAM** button **(5)** to program the track. The Display will automatically start blinking "02".
5. Repeat steps 3 & 4 to program up to 20 different tracks.
6. When you have finished selecting tracks, press the **PLAY / PAUSE** button **(1)** to start playing the CD in the order you have programmed. The **PROGRAM Indicator Light (10)** and **PLAY / PAUSE Indicator Light (9)** will both turn ON.
7. To stop Programmed Playback press the **STOP** button **(2)** twice. The **PROGRAM Indicator Light (10)** will automatically turn OFF.

REPEAT PLAYBACK

- To Repeat a Single Track press the **REPEAT** button **(6)** once. The **REPEAT Indicator Light (11)** will automatically start blinking.
- To Repeat the Entire CD press the **REPEAT** button **(6)** twice. The **REPEAT Indicator Light (11)** will automatically turn ON.
- To cancel Repeat Playback press the **REPEAT** button **(6)** continuously until the **REPEAT Indicator Light (11)** turns OFF.

PLAYING A NON-BLUETOOTH iPod, MP3 PLAYER, or OTHER DEVICE

1. Plug one end of a 3.5mm stereo audio cable (not included) into the **AUX-IN JACK (15)** on the left side of the player.
 - NOTE: The player will automatically stop BLUETOOTH, CD or RADIO playback and switch to the AUX-IN connection.
2. Plug the other end of the cable into the headphone jack or audio output of your external device.
3. Adjust the volume on your external device to an acceptable level.
4. Press PLAY on your external device to begin listening.
 - NOTE: All playback controls (Play/Pause, Stop, Next/Previous, must be controlled on your external device)
5. To resume BLUETOOTH, CD, or RADIO playback, simply unplug the 3.5mm stereo audio cable from the **AUX-IN JACK (15)**.

LISTEN TO AM/FM RADIO

1. Adjust the **FUNCTION SWITCH (12)** to the **RADIO** position.
 2. The FM Radio will automatically begin playing.
 3. Press the **PLAY / PAUSE** button (1) to switch between the AM & FM tuners.
 4. Slowly adjust the **TUNING KNOB (13)** to select the desired Radio station.
- **TIPS FOR BEST RECEPTION**
 - The AM & FM antennas are built-in to the cabinet of this player. To improve reception of radio stations simply move the entire player to another location until reception improves.

TROUBLESHOOTING

Symptom	Possible Cause	Solution
Noise or sound distorted on AM or FM broadcast	<ul style="list-style-type: none">- Station not tuned properly for AM or FM.- FM: Player is not positioned correctly- AM: Player is not positioned correctly	<ul style="list-style-type: none">- Retune the AM or FM broadcast station.- FM: Reposition the unit until the best reception is obtained.- AM: Reposition the unit until the best reception is obtained.
AM or FM no sound	<ul style="list-style-type: none">- Player not in "RADIO" mode.- Volume set at minimum- 3.5mm cable is plugged into the AUX-IN JACK (15)	<ul style="list-style-type: none">- Slide Function Switch (12) to "RADIO" position.- Increase Volume.- Unplug the 3.5mm cable
CD player will not play	<ul style="list-style-type: none">- Unit not in CD mode.- 3.5mm cable is plugged into the AUX-IN JACK (15)- CD is not loaded properly.- If the CD is CD-R, the media used may not be compatible with the player.	<ul style="list-style-type: none">- Select CD function mode.- Unplug the 3.5mm cable- Load CD with label side up.- Burn a better quality blank CD and retest.
CD skips while playing	<ul style="list-style-type: none">- Disc is dirty or scratched.	<ul style="list-style-type: none">- Wipe CD with clean cloth or use another disc.
Intermittent sound from CD player	<ul style="list-style-type: none">- Dirty or defective disc- Player is subject to excessive shock or vibration	<ul style="list-style-type: none">- Clean or replace the defective disc.- Relocate the player away from shock or vibration.
Sound appears distorted at high volume setting	<ul style="list-style-type: none">- Volume control is set to maximum.	<ul style="list-style-type: none">- Adjust Volume Control to a lower comfortable level.



LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized BLUESTREAM dealer.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the ninety-day warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-719-8324, or visit www.sibrandssupport.com.

This warranty applies only under conditions of normal use. Our products are not intended for outdoor use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as smartphones, tablets, memory storage, and/or other devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall BLUESTREAM be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL BLUESTREAM BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

Schoenfeld International Inc. and BLUESTREAM

5001 American Boulevard West
Suite 275
Bloomington, Minnesota 55437

©Schoenfeld International Inc., 2015
BS2083BB Ver. 1.0 March 2015