

BLUESTREAM

INSTRUCTION MANUAL BLUETOOTH HEADPHONES MODEL: BS301HPBT / BS302HPBT



**For technical assistance or troubleshooting
call 1-855-719-8324 or visit www.sibrandssupport.com**

CHARGING

To charge the headphones simply insert the micro USB end of the supplied cable into the USB CHARGING PORT and the standard USB end into a USB port on a USB charger or computer. The LED INDICATOR will turn Red when the headphones are charging. The LED INDICATOR will turn Off when the headphones are fully charged.

POWER

To turn the headphones ON, press and hold the POWER button until you hear the start up chime. The LED INDICATOR will begin flashing RED & BLUE.

To turn the headphones OFF, press and hold the POWER button until you hear the shut-down chime. The LED INDICATOR will turn OFF.

PAIRING TO YOUR BLUETOOTH DEVICE

1. Turn your Bluetooth device OFF entirely and then turn it back ON to refresh the device's Bluetooth memory.
2. Find the Bluetooth menu in your device and make sure the Bluetooth function is turned ON (refer to your device's user manual for instructions on finding the Bluetooth menu).
3. Turn the Headphones ON and unplug the headphone cable from the 3.5mm INPUT if necessary.
4. On your device, perform a Bluetooth "device discovery" to add the BS301HPBT/BS302HPBT as a new device.
5. When the headphones are discovered your device will display "**BS301HPBT/BS302HPBT**" in the Bluetooth menu.
6. After selecting "**BS301HPBT/BS302HPBT**" from the Bluetooth menu the LED indicator will turn BLUE and there will be a sound chime to indicate that the Bluetooth Pairing was successful.
7. If supported by your device's menu, set the BS301HPBT/BS302HPBT as "set as authorized" or "add to trusted devices"

PLAYING MUSIC

After successfully pairing the headphones with your Bluetooth device, you can begin playing music simply by choosing the song you wish to hear on your device's menu system (refer to your device's user manual for instructions on playing music).

Note: the LED INDICATOR slowly flashes Blue during playback.

PLAYBACK & VOLUME CONTROLS

All playback controls (Play, Pause, Next/Previous song, etc.) can be controlled either directly on your device, or on the buttons on the headphones.

NOTE: the buttons on the headphones will only operate when connected to your device via Bluetooth mode. The buttons will not function when the headphones are connected with the 3.5mm headphone cable

- **PLAY** – press the PLAY / PAUSE button once to begin playing music.
- **PAUSE** – press the PLAY / PAUSE button again to pause playback. Press PLAY / PAUSE again to resume.
- **GO TO THE NEXT SONG/TRACK** – press the NEXT SONG / VOLUME DOWN button
- **GO TO THE PREVIOUS SONG/TRACK** – press the PREVIOUS SONG / VOLUME UP button
- **VOLUME UP** – press and hold the PREVIOUS SONG / VOLUME UP button
- **VOLUME DOWN** – press and hold the NEXT SONG / VOLUME DOWN button
 - **NOTE:** You can also adjust the using the volume controls on your connected device.

ANSWERING & ENDING PHONE CALLS

When connected to a Bluetooth enabled smartphone the BS101HPBT/BS201HPBT can be used as a mobile headset.

To Answer an incoming call – Press the PLAY / PAUSE button

To End a call – Press the PLAY / PAUSE button again

NOTE: the buttons on the headphones will only operate when connected to your device via Bluetooth mode. The buttons will not function when the headphones are connected with the 3.5mm headphone cable

USING A HEADPHONE CABLE

If your device does not have Bluetooth, or the battery on the headphones is low/dead, you can still listen to the headphones by connecting the supplied 3.5mm headphone cable to the 3.5mm INPUT on the headphones and the headphone jack on your device.

NOTE: to save battery life, the headphones automatically turn OFF when using the 3.5mm headphone cable.

When the headphone cable is inserted into the 3.5mm INPUT the headphones will automatically turn off the Bluetooth function and switch to the 3.5mm INPUT mode.

NOTE: the 3.5mm audio cable must be removed to use Bluetooth, MP3, & FM Radio Modes.

NOTE: the buttons on the headphones will only operate when connected to your device via Bluetooth mode. The buttons will not function when the headphones are connected with the 3.5mm headphone cable

USING A microSD CARD

The BS301HPBT/BS302HPBT can play mp3 files directly from a microSD card.

To play music from a microSD card simply insert the card into the microSD card slot. The headphones will automatically switch to MP3 Mode and begin playing the first song on the card. Use the buttons on the headphones to play/pause music and skip to the previous/next track on the card.

When you are finished listening to the microSD card simply remove the card from the headphones, or press the MODE button to switch to either the Bluetooth or FM Radio modes.

LISTENING TO FM RADIO

The BS301HPBT/BS302HPBT has a built-in FM radio tuner.

To listen to FM radio press the MODE button until you hear the chime for FM mode. You will hear either a previously tuned radio station, or static.

Press the PLAY / PAUSE button to begin an auto-search for available radio stations. After the auto-search has completed you will hear the first available FM radio station.

Press the NEXT SONG / VOLUME DOWN button to tune up to the next radio station.

Press the PREVIOUS SONG / VOLUME UP button to tune down to the previous radio station.

When you are finished listening to the FM radio, simply press the MODE button to switch to a different mode (Bluetooth or MP3).



LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized BLUESTREAM dealer.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the ninety-day warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-719-8324 or visit us at www.sibrandssupport.com.

This warranty applies only under conditions of normal use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall BLUESTREAM be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL BLUESTREAM BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.