

40E650HD

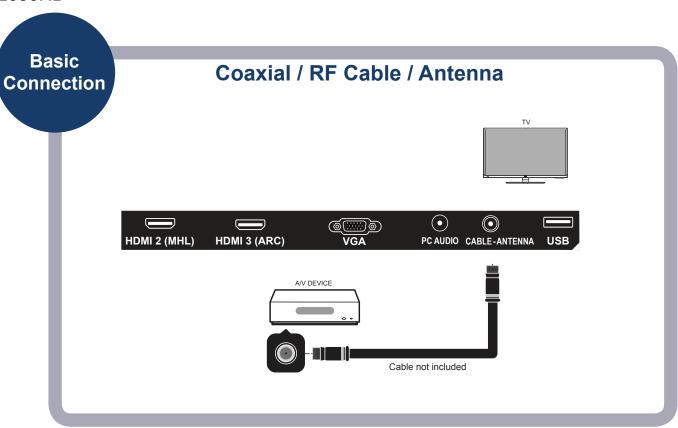

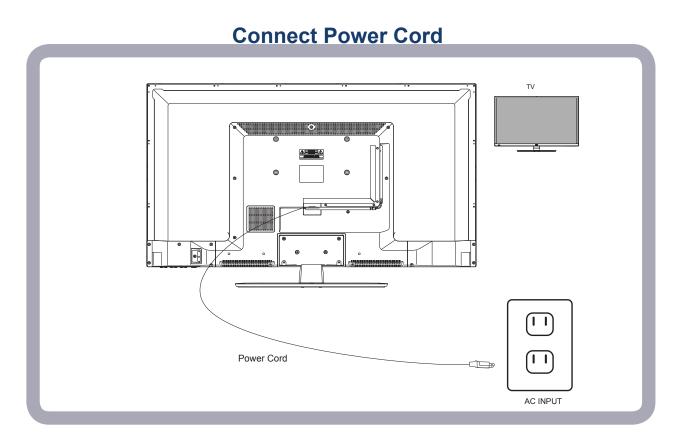


Press the POWER button on the remote control to turn on the TV

QUICK START GUIDE

Simple Steps for Connecting your TV to A/V Devices



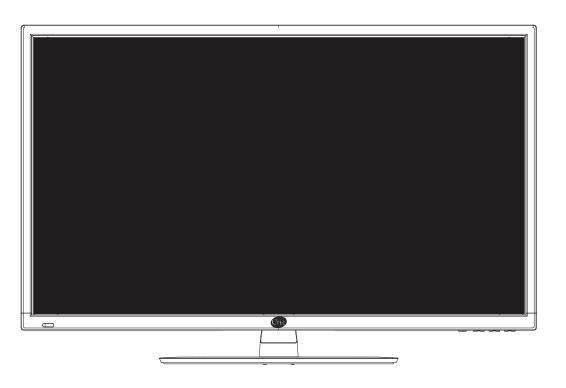

IMPORTANT NOTE:

During setup, do NOT run the "Channel Auto Scan" function if your TV is connected to a Cable or Satellite set top box.

For technical support, the ETEC Technical Support Center is available 10:00AM to 7:00PM (Monday to Saturday) for technical assistance or troubleshooting. To contact us by phone, please call 1-855-994-3832.

A/V Devices Include:


- Blu-ray[®] Disc Players
- DVD Players
- Cable, Satellite, or Set-Top Boxes
- VCRs
- Game Consoles

If you need additional help, please consult your user manual.

"HDMI", the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC."


"Blu-ray Disc" is a trademark of Blu-ray Disc Association, registered in the U.S. and other countries. All other trademarks are the property of their respective owners.


Insert the TV into the base and securely attach. Install the batteries in the Remote Control

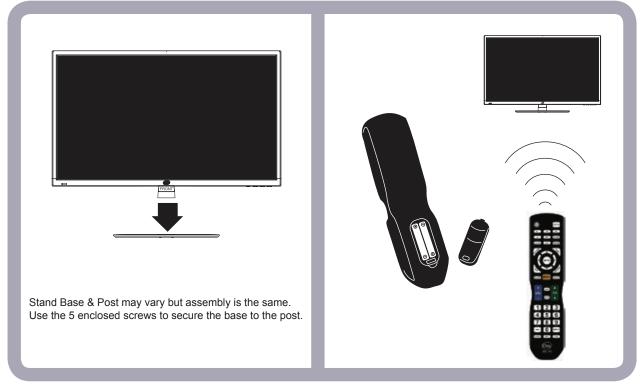

To operate this TV using the remote control provided by your Cable / Satellite provider, follow the programming instructions included with the providers' remote control and input the following codes when prompted;

- -For Comcast or DirecTV remote controls, input the code- 10030
- -For AT&T (U-verse) Remote Controls, input the code- 1043
- -For RCA Universal Remote Controls, input the code- 0030
- -For Dish Network Remote controls, input the code- 506

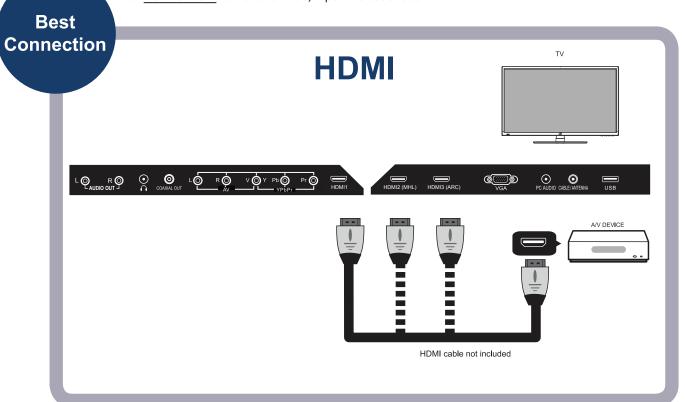

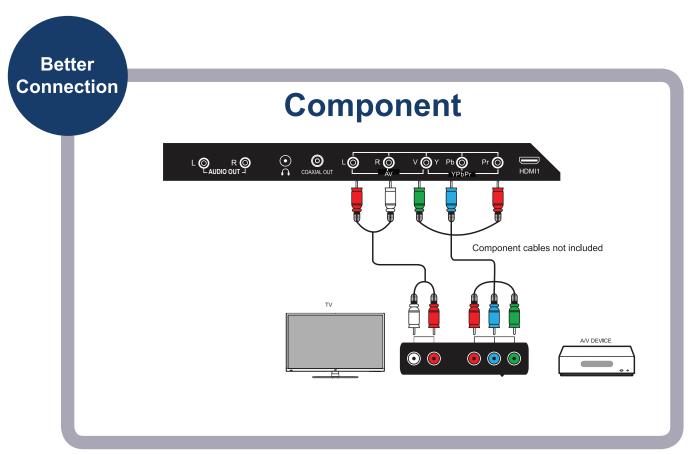

For technical support, the ETEC Technical Support Center is available 10:00AM to 7:00PM (Monday to Saturday) for technical assistance or troubleshooting. To contact us by phone, please call 1-855-994-3832.

