



7A700  
Ver 1.0



# **7" PORTABLE TELEVISION INSTRUCTION MANUAL**

**MODEL: 7A700**

**For technical assistance or troubleshooting  
please call 1-855-994-2825 or visit [www.sibrandssupport.com](http://www.sibrandssupport.com)**

# Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture.
16. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
17. The mains plug or appliance coupler shall remain readily operable.
18. **Use in outdoors:** This TV is not designed for outdoors installation. Do not expose the TV to rain, as it may result in a fire or an electric shock. Also, do not expose the TV to direct sunlight, as it may heat up and become damaged.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



## **Safety:**

TO REDUCE THE RISK OF ELECTRICAL SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS ARE INSIDE. REFER TO QUALIFIED SERVICE TECHNICIAN ONLY.



**Dangerous Voltage:** The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the users.



**Instruction:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

# Safety Instructions

Please read these instructions carefully.

This product complies with all applicable US federal safety requirements, as well as those of the Canadian Standards Association.

## **1. Cleaning**

Always unplug the TV before cleaning. Do not use liquid or aerosol cleaners. Use a soft, slightly damp cloth to clean.

## **2. Water and Moisture**

Do not use this TV near water. Avoid using this TV in an excessively damp environment.

## **3. Stand**

This TV should always be placed on a solid, sturdy surface.

## **4. Ventilation**

To prevent overheating, do not block or obstruct the vent openings on the TV's back panel. Also, avoid placing this TV in a confined area with poor air flow.

## **5. Power Sources**

This TV should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your electronics retailer or local power company.

## **6. Power Cord Polarization**

This TV is equipped with a three-wire grounding type plug, a plug with a third (grounding) pin. As a safety feature, this plug will only fit into a grounded power outlet. If you are unable to insert the plug into the outlet, contact your electrician to replace the obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

## **7. Power Cord Protection**

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the TV.

## **8. Lightning**

 
To protect the TV during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the TV from lightning and power-line surges.

# Safety Instructions

## 9. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the TV be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built up static charges. Article 810 of the National Electrical Code (U.S. A.), ANSI / NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

*Example of Grounding According to National Electrical Code Instructions*

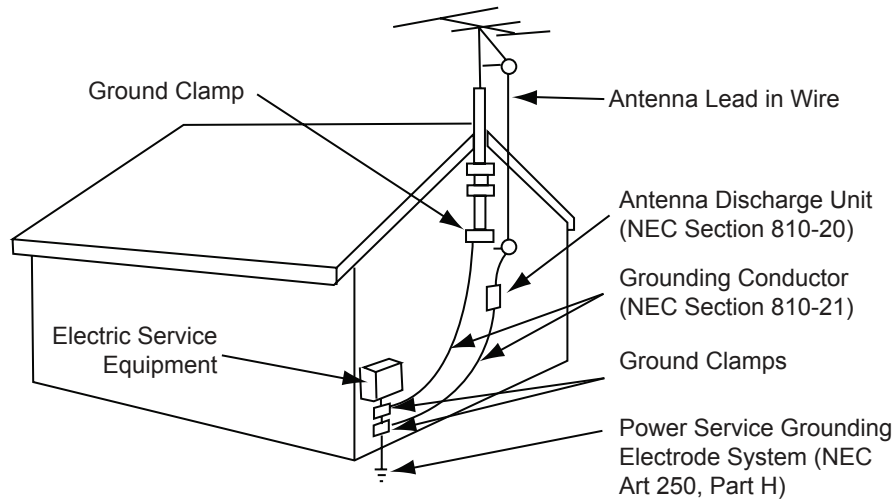

NEC - National Electrical Code

## 10. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall on to power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

## 11. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

## 12. Object and Liquid Entry

Never push objects of any kind into this TV through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on or inside the TV.

## 13. Servicing

Do not attempt to service this TV yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to a qualified service technician.

## 14. Damage Requiring Service

Unplug from the wall outlet and refer servicing to a qualified service technician under the following conditions:

- If the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the TV has been exposed to rain or water.
- If the TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the TV has been dropped or the cabinet has been damaged.
- If the TV exhibits a distinct change in performance.



# Safety Instructions

## **15. Replacement Parts**

When replacement parts are required, be sure that only an authorized service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards and void any warranty.

## **16. Safety Check**

Upon completion of any service or repairs to this TV, ask the service technician to perform safety checks to determine whether the product is in proper operating condition.

## **17. Heat**

The TV should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

## **NOTE TO CABLE / TV INSTALLER:**

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground should be connected to the grounding system of the building, as close to the point of the cable entry as practical.

## **FCC REGULATORY INFORMATION:**

This television has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This television generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this television does cause interference to other electronic equipment, which can be determined by turning the television off and on, then the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and television.
- Connect the equipment into an outlet on a circuit different from that to which the television is connected.
- Consult your dealer or an experienced radio / TV technician for assistance.

Any changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

# Table of Contents

Important Safety Instructions.....	2
Table of Contents .....	6
Introduction.....	7
Charging the Battery.....	8
Installing the Base .....	8
<b>Remote Control</b>	
Overview.....	9
<b>TV Overview</b>	
Top Panel.....	10
Side Panels .....	11
<b>Installation</b>	
Connect the Telescoping Antenna.....	12
Connect Digital Cable Box, Satellite Receiver, & DVD player with Composite cables (yellow, red, & white) .....	12
<b>TV Setup</b>	
Initial Setup Wizard .....	13
<b>Picture Settings</b>	
Contrast.....	15
Brightness .....	15
Color.....	15
Tint.....	15
Sharpness .....	15
Color Temp .....	15
<b>Audio Settings</b> .....	16
<b>Date &amp; Time Settings</b> .....	16
<b>Setup Settings</b>	
Menu Languages.....	17
Transparent .....	17
OSD Timeout.....	17
<b>Closed Captions</b> .....	17
<b>Parental Control</b> .....	18
<b>Channel Settings</b>	
Favorite .....	19
Show / Hide .....	19
TV Channel Setup & Channel Auto Scan.....	20
<b>USB &amp; microSD Playback</b> .....	21
<b>Troubleshooting</b> .....	22

# Introduction

## What's In The Box

The 7A700 package includes the following items. Save the carton & packing for future shipping

- **Remote Control**
- **AC 100-240V~50/60Hz to DC 12V 0.8A Adapter**
- **12V Auto / Boat Adapter / Charger**
- **Detachable Telescoping Antenna**
- **RF Coaxial Extension Cable**
- **Audio / Video Cable - 3.5mm to Three Female RCA (Red/White/Yellow) Jacks**
- **Pedestal Base**
- **Kickstand Base**

## Charging the Battery

This portable television has a built-in rechargeable lithium-ion battery. The battery can be charged by either the AC 100-240V to DC 12V Power Adapter or the 12V Auto / Boat Adapter.

Before using the television it is recommended to completely charge the battery by following the steps below.

### Home Electrical Outlet Use:

1. Plug the supplied AC 100-240V to DC 12V Power Adapter Jack into the **12V DC Input (10)**.
2. Insert the wall plug of the Power Adapter into an electrical wall outlet.
3. The **Power Indicator LED (7)** will turn ON during charging.
4. Once the battery is fully charged the **Power Indicator LED (7)** will turn OFF.

### Auto-Boat Outlet Use:

**NOTE: For the TV to Charge using the Auto / Boat Adapter / Charger, the TV must be turned OFF.**

1. Plug the supplied 12V Auto-Boat Power Adapter Jack into the **12V DC Input (10)**.
2. Insert the car-boat outlet plug of the Power Adapter into a 12V car-boat outlet.
3. The **Power Indicator LED (7)** will turn ON during charging.
4. Once the battery is fully charged the **Power Indicator LED (7)** will turn OFF.

**NOTE:** A “**LOW BATTERY!**” message will flash on the TV screen when the battery needs to be charged.

 
 
# Installing the Base

## INSTALLING THE PEDESTAL BASE

1. Loosen the square washer on the front of the base by turning the washer counterclockwise.



**NOTE: Do not remove the washer from the base.**

2. Carefully slide the square washer into the channel on the rear of the TV.
3. Secure the base to the TV by turning the tension knob on the rear of the base clockwise.

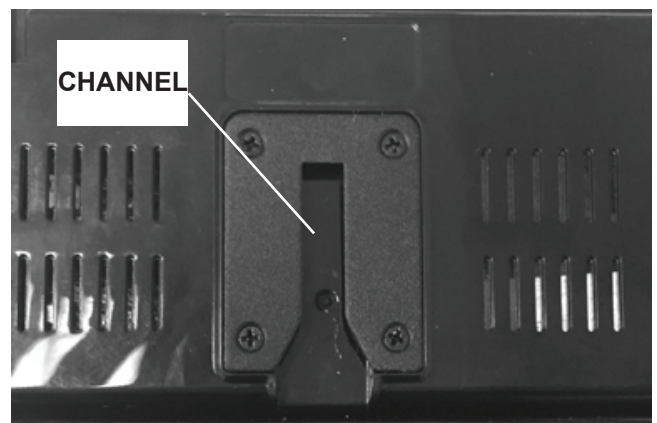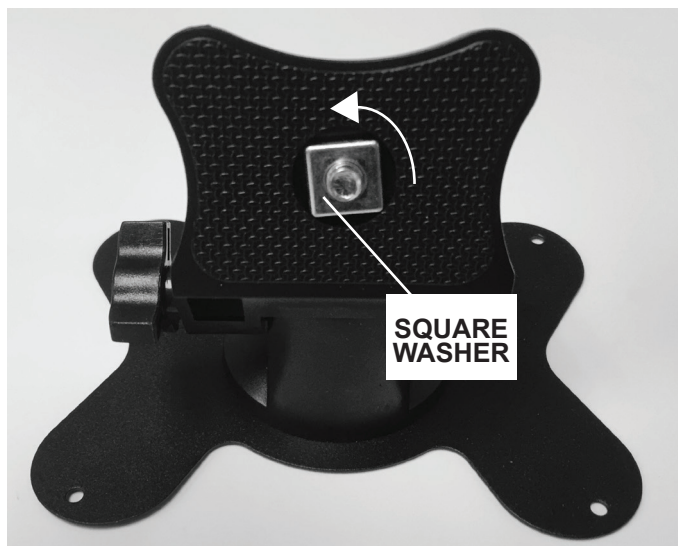


## INSTALLING THE KICKSTAND BASE

  
1. Locate the arrow on the rear of the Kickstand Base.
2. Keeping the arrow pointed UP, carefully slide the Kickstand Base into the channel on the rear of the TV.

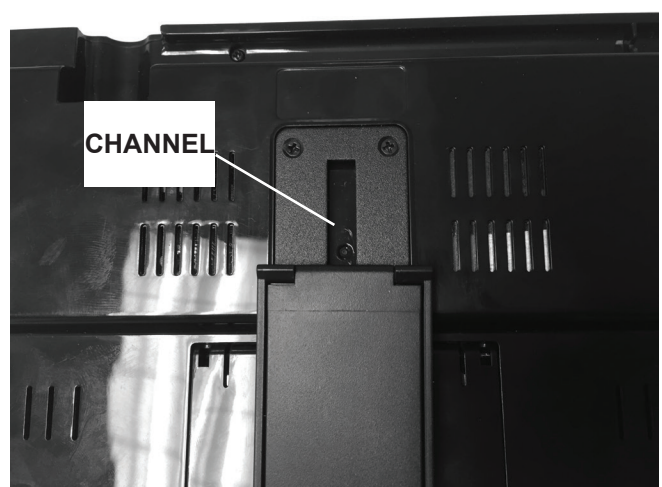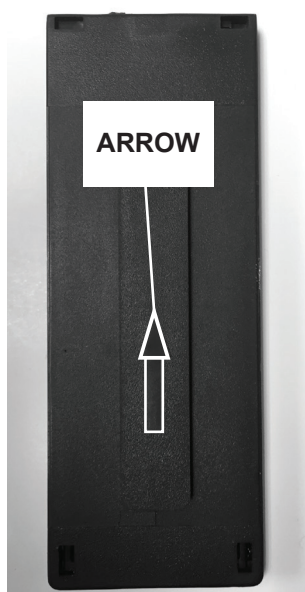


# Remote Control

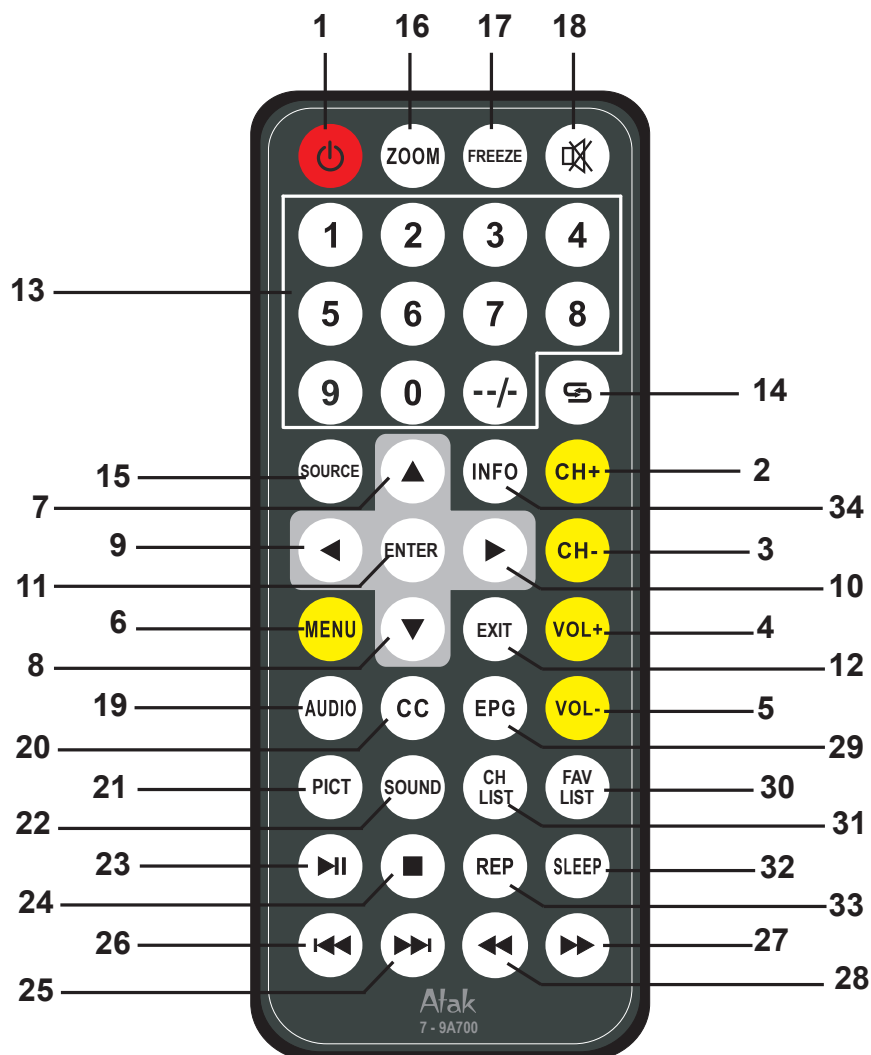 

1. **POWER** Button
2. **CHANNEL UP** Button
3. **CHANNEL DOWN** Button
4. **VOLUME UP** Button
5. **VOLUME DOWN** Button
6. **MENU** Button
7. **NAVIGATION UP** Button
8. **NAVIGATION DOWN** Button
9. **NAVIGATION LEFT** Button
10. **NAVIGATION RIGHT** Button
11. **ENTER** Button
12. **EXIT** Button
13. **NUMBER** Buttons
14. **PREVIOUS CHANNEL** Button
15. **SOURCE** Button
16. **ZOOM** Button
17. **PICTURE FREEZE** Button
18. **MUTE** Button
19. **AUDIO** Button
20. **CLOSED CAPTION** Button
21. **PICTURE** Button
22. **SOUND** Button
23. **PLAY / PAUSE** Button
24. **STOP** Button
25. **NEXT** Button
26. **PREVIOUS** Button
27. **F. FWD** Button
28. **F. REV** Button
29. **ELECTRONIC PROGRAM GUIDE (EPG)** Button
30. **FAVORITE CHANNELS LIST** Button
31. **ALL CHANNELS LIST** Button
32. **SLEEP** Button
33. **REPEAT** Button
34. **INFO** Button

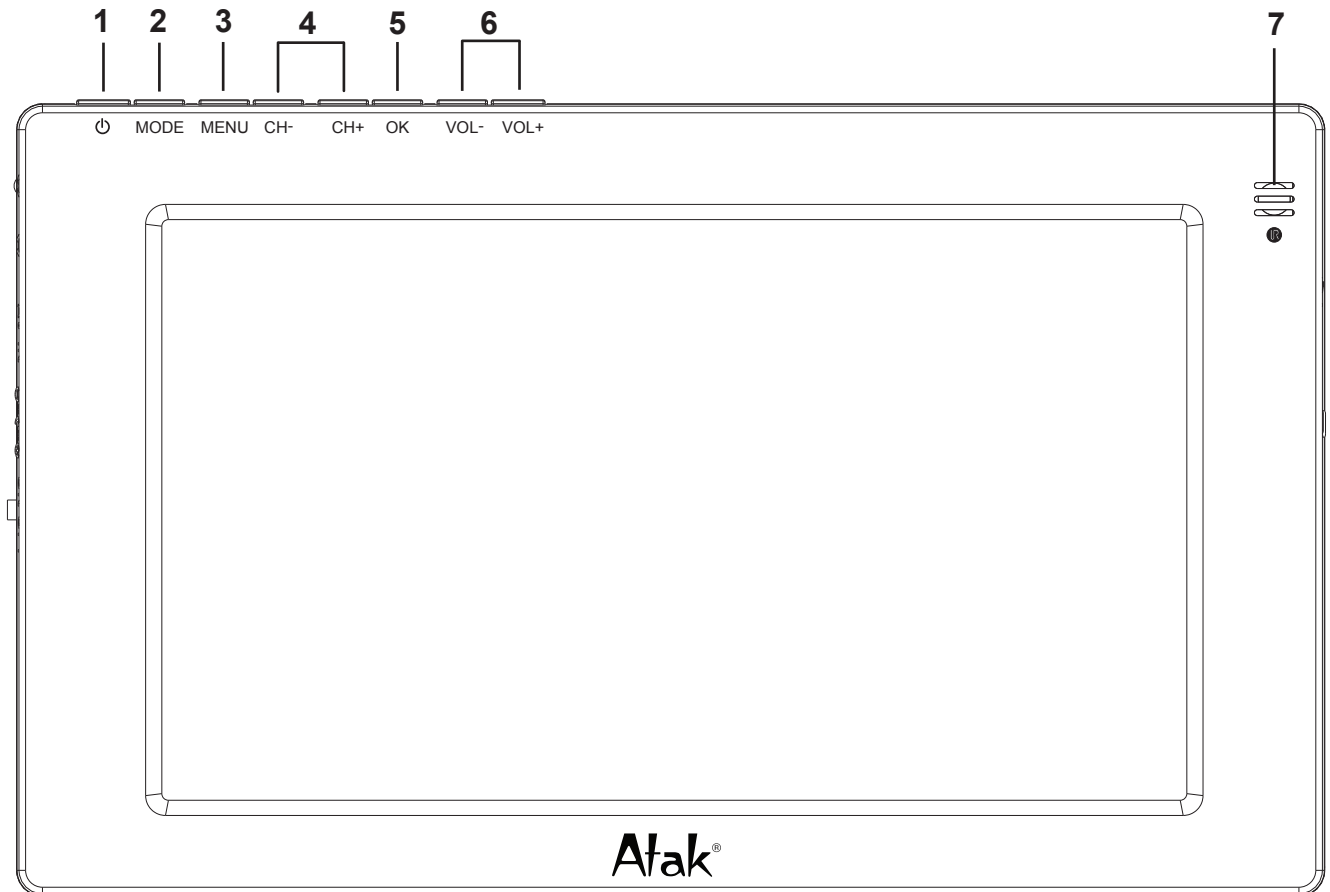 

1. **POWER** Button: Press the **POWER** button to turn the TV ON / OFF (Standby).
2. **MODE** Button: Press the **MODE** button to display the INPUT SOURCE menu.
3. **MENU** Button: Press the MENU button to display the Setup Menu.
4. **CH + / -** Buttons: Press the **CHANNEL + / -** Buttons to select a TV channel.
5. **OK** Button: Press the **OK** button to confirm a selected option when using the on-screen menus
6. **VOL + / -** Buttons: Press the **VOL + / -** to adjust the Volume up or down.
7. **IR Receiver**: Receives commands from the Remote Control. When using the Remote Control, point the Remote at this location and press the desired button.

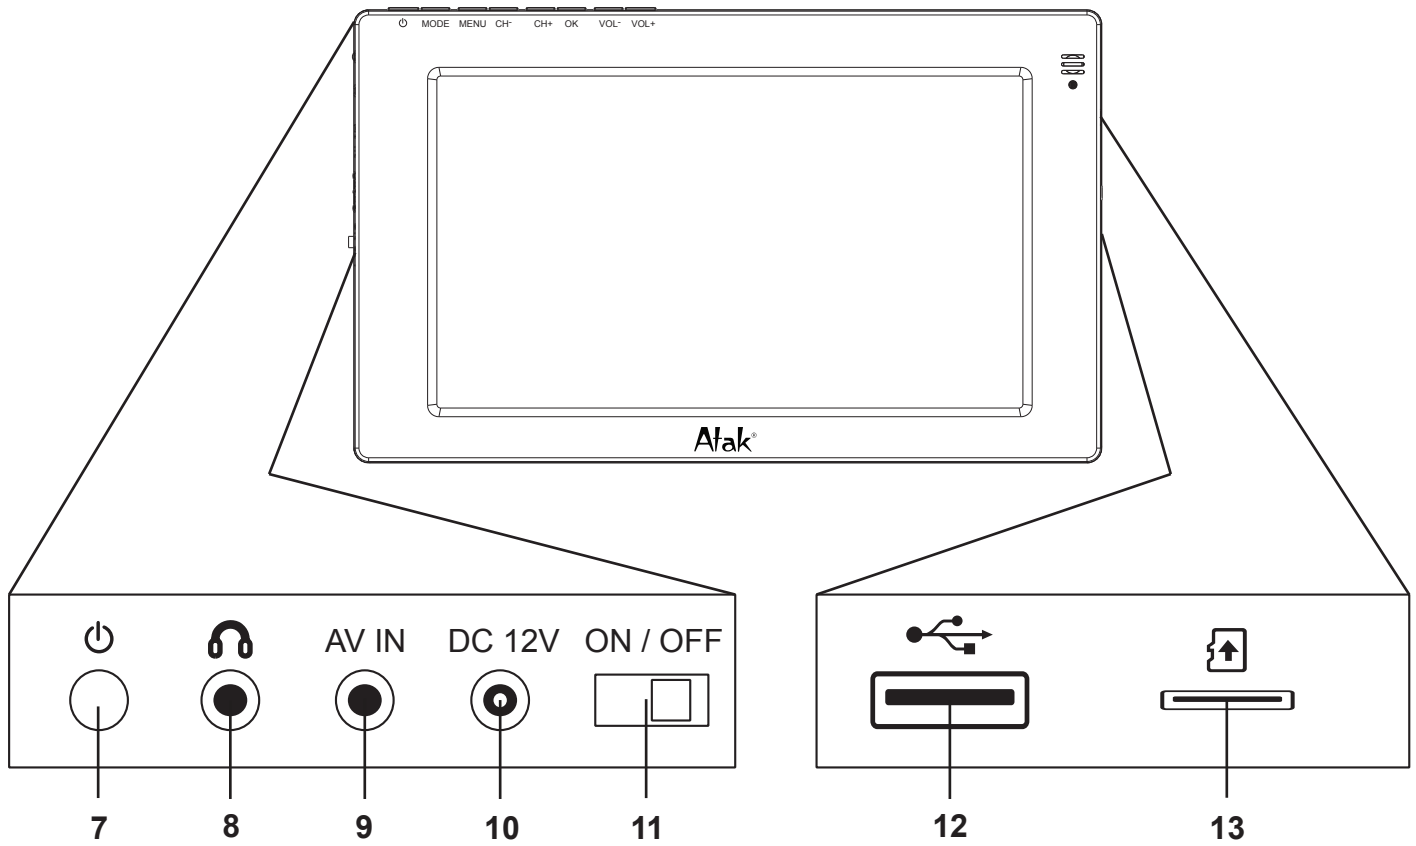 

**7. POWER INDICATOR LED**

**8. HEADPHONE JACK**

**9. AV INPUT**

**10. 12V DC INPUT**

**11. ON / OFF SWITCH**

 
**12. USB PORT**

**13. microSD CARD SLOT**



# Installation

## Connecting to Antenna

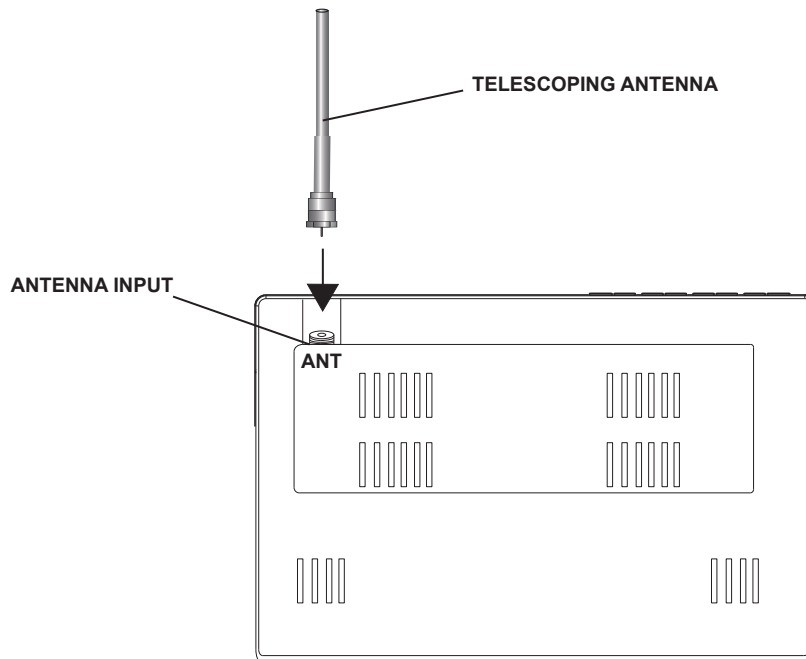


Insert the supplied Telescoping Antenna to the ANTENNA INPUT on the Rear of the TV.  
Finger tighten by gently turning the Antenna clockwise. Do not over-tighten.

**Note: Reception quality is determined by your location, geographical terrain, and distance from the local broadcast transmitter.**
 
# Installation

## Connecting to Composite Input

- Insert the supplied AUDIO/VIDEO CABLE to the **AV IN (9)** on the Left Side of the TV.
- Insert a RED, WHITE, & YELLOW AV Cable (Not Included) and into the matching colors on the AUDIO/VIDEO CABLE ADAPTER.
- Insert the RED, WHITE, & YELLOW AV Cable (Not Included) into the matching colors on the external device.

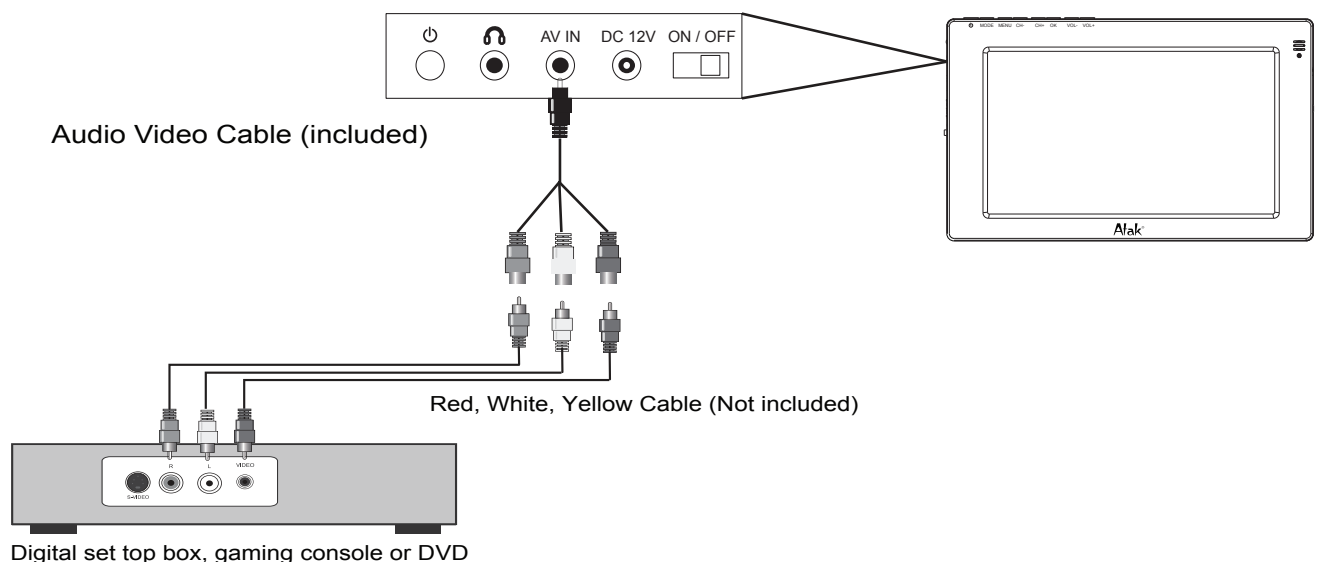

### INITAL SETUP WIZARD

After connecting the Antenna, turn the television ON using the **ON / OFF SWITCH (11)**.

The quick Setup Wizard will display on-screen to help guide you through the 3 steps listed below:

NOTE: the Setup Wizard only appears when turning on the TV for the first time.

### How to Navigate the Setup Menus:

Use the ▲▼ arrow buttons on the remote to move to the menu selection.

Use the ◀▶ arrow buttons on the remote to choose the desired menu option.

### STEP 1: Choosing a Menu Language

 


Use the ▲▼ arrow buttons to select **Menu Language**.

Use the ◀▶ arrow buttons to select **English - Francais - Espanol**.

Use the ▼ arrow button to select **Go to next step** and press the **ENTER** button to complete the step.

### STEP 2: Setting the Time

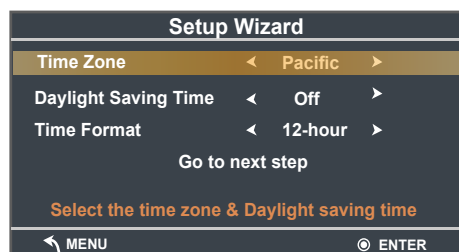

Use the ▲▼ arrow buttons to select **Time Zone**, **Daylight Saving Time**, and **Time Format** selections.


Use the ◀▶ arrow buttons to select the desired setting.

Use the ▼ arrow button to select **Go to next step** and press the **ENTER** button to complete the step.

**IMPORTANT NOTE:** If your TV is connected to a Cable or Satellite set top box **DO NOT** run the “Channel Auto Scan” in **STEP 3**.

### STEP 3: Setting Air/Cable and Channel Auto Scan

 **Note:** Your type of television connection will determine if you should complete the Channel Auto Scan part of this step.

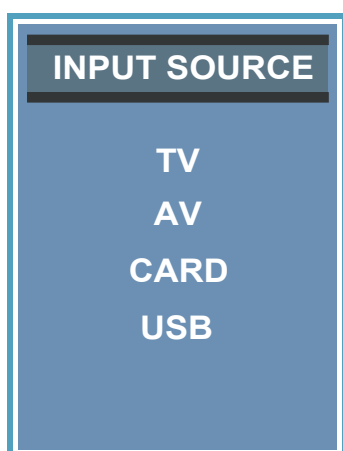

Use the ◀ ▶ arrow buttons to select **Air** or **Cable** based on your type of connection (Antenna or Cable without a set top box).


#### For Cable/Satellite Connections WITH a set top box:

 Press the **EXIT** button on the remote control to exit the **Setup Wizard**.

**NOTE:** You will see the message “PLEASE RUN AUTO SCAN” on the screen. **Ignore this message as this is not necessary when using a set top box.**

Press the **SOURCE** button on the remote control to display the **Input Source** screen illustrated to the left.

Use the ▲ ▼ arrow buttons to highlight the input where the set top box was installed. Press **ENTER** to select the desired input.

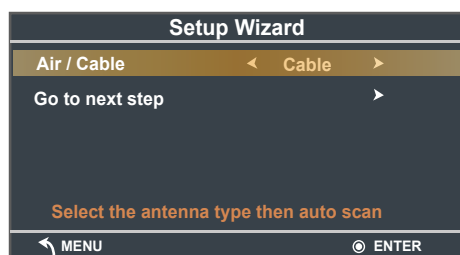


Initial Setup is now complete. You may now begin enjoying your TV, or make further adjustments to the TV settings which are explained in the following pages of this manual.

#### For Antenna & Cable Connections WITHOUT a set top box:

 Use the ▼ arrow button to select **Go to next step** and press the **ENTER** button to begin the **Channel Auto Scan**.

**Channel Auto Scan** may take several minutes to complete.

Once **Channel Auto Scan** has ended, Initial Setup is complete. You may now begin enjoying your TV, or make further adjustments to the TV settings which are explained in the following pages of this manual.

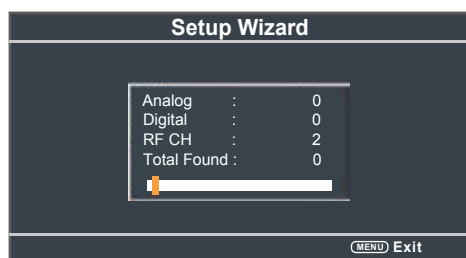

# Menu Adjustments

## Picture Setting

The **Picture** menu offers options to enhance and refine the picture displayed on your TV based on ambient room light and personal preferences. Adjustment options include Picture Mode, Color Mode, Zoom, Noise Reduction & DLC.

### How to Navigate:

Press the **MENU** button on the remote control. Navigate using the ▲ ▼ arrow buttons to select **PICTURE**. Press the ► arrow button to highlight **Picture Mode**, then press the ► arrow button to select your viewing preference from 4 options: Standard - Dynamic - Soft - Personal. The Standard setting is recommended for most brightly lit viewing environments. Depending on the ambient light level in the room, you may find one of the other Picture settings more pleasing.

To make more critical adjustments based on your own preferences select the **Personal** mode.

- **Contrast**

Press down ▼ arrow button to highlight **Contrast**. Navigate using the ◀ ▶ arrow buttons to increase or decrease contrast intensity.

- **Brightness**

Press down ▼ arrow button to highlight **Brightness**. Navigate using the ◀ ▶ arrow buttons to increase or decrease overall brightness.

- **Sharpness**

Press down ▼ arrow button to highlight **Sharpness**. Navigate using the ◀ ▶ arrow buttons to soften or view crisper edges in the picture.

- **Tint**

Press down ▼ arrow button to highlight **Tint**. Navigate using the ◀ ▶ arrow buttons to adjust colors toward green or reddish tint.

- **Color**

 
 
Press down ▼ arrow button to highlight **Color**. Navigate using the ◀ ▶ arrow buttons to increase or decrease color intensity.

- **Color Mode**

Press down ▼ arrow button to highlight your **Color Mode** preference. Navigate using the ◀ ▶ arrow buttons to select Cool (more bluish tone), Normal or Warm setting.

- **Zoom Mode**

Press down ▼ arrow button to highlight your **Zoom Mode** preference. Navigate using the ◀ ▶ arrow buttons to select buttons to select the zoom mode that is most pleasing

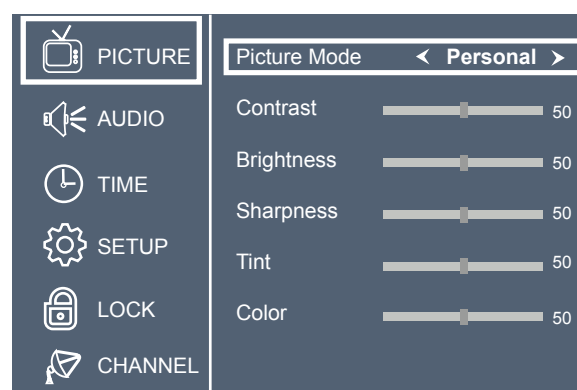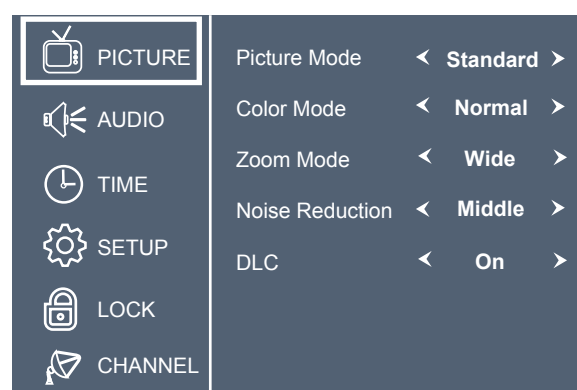

Note: When adjustments are completed, you may select another menu by pressing the **Menu** button.

Menu Adjustments

Audio Settings

The **Audio** menu offers options to make sound enhancements while listening through the built-in speakers or to headphones connected to the headphone jack.

How to Navigate:

Press the **MENU** button on the remote control. Navigate using **▲ ▼** arrow buttons to select **Audio**. Press the **▼** arrow button to highlight **Sound Mode**, then press the **▶** arrow button to select your sound preference from 5 factory options: Standard - Music - Movie - Sports - Personal

• **Sound Mode**

Press down **▼** arrow button to highlight **Sound Mode**.  
Press **◀ ▶** button to select Music - Movie - Sports - Personal - Standard.

 
- Music: Preserves the original sound. Good for musical programs.
- Movie: Enhances treble and bass for a rich sound experience.
- Sports: Enhances vocals for TV audio.
- Personal: Select to customize audio settings.
- Standard: Produces a balanced sound in all environments.

• **Audio Only**

Press down **▼** arrow button to highlight **Audio Only**.  
Press **◀ ▶** buttons to select (Off-On)

• **AVC (Automatic Volume Control)**

This feature helps prevent large fluctuations in volume levels.  
Press down **▼** arrow button to highlight **AVC**.  
Press **◀ ▶** button to select (Off - On)

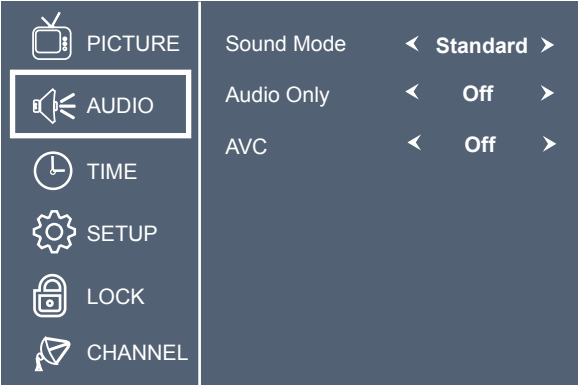

Menu Adjustments

 
Date & Time Settings

The **Time** menu includes adjustment of settings for your local time zone and daylight savings time. The clock will adjust automatically after the initial Channel Auto Scan of available broadcast channels in your area.

How to Navigate:

Press the **MENU** button on the remote control. Navigate using arrow **▲ ▼** buttons to select **Time**.  
Press the **▶** arrow button to enter the submenu. When you wish to exit the submenu simply press the **MENU** button.

- Press down **▼** arrow button to highlight **Sleep Timer** then press the **▶** arrow button to select time to view before the television timer turns the set off: 5 Min - 10 Min - 15 Min - 30 Min - 60 Min - 90 Min - 120Min - 180 Min - 240 Min - OFF.
- Press down **▼** arrow button to highlight **Time Zone** then press the **▶** arrow button to select between: Eastern - Central - Mountain - Pacific - Alaska - Hawaii - Samoa - Newfoundland - Atlantic.
- Press down **▼** arrow button to highlight **Daylight Savings Time**. Navigate using the **◀ ▶** arrow buttons to select On or Off.
- Press down **▼** arrow button to highlight **Time Format**. Navigate using the **◀ ▶** arrow buttons to select either 12-hour or 24-hour.
- Press down **▼** arrow button to highlight **Auto Sync**. Navigate using the **◀ ▶** arrow buttons to turn this feature On or Off.

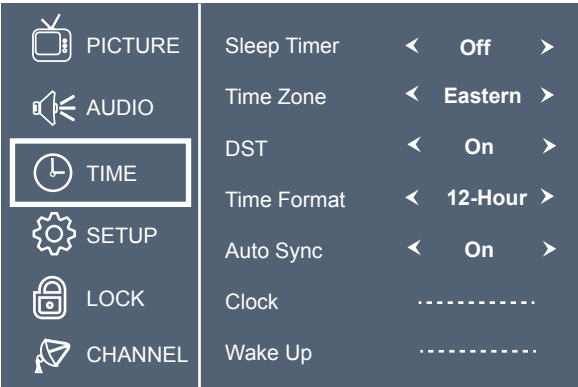

- Press down **▼** arrow button to highlight **Clock**.  
Navigate using the **◀ ▶** arrow buttons to adjust the time.
- Press down **▼** arrow button to highlight **Wake Up**.  
Navigate using the **◀ ▶** arrow buttons to set an alarm.

Menu Adjustments

Setup Settings

In the **Setup** menu you may change the initial set up of preferences that include settings for language, menu display, closed captions, resetting your TV back to its factory default status, or repeat the Setup Wizard.

How to Navigate:

Press the **MENU** button on the remote control. Navigate using arrow **▲ ▼** buttons to select **Setup**. Gain access to display options by pressing the down **▼** arrow button to highlight **Menu Language** or other options, then press **▶** arrow button on your remote to select.

• Menu Languages

Languages include English, Français, Español.

• Transparent

 
Navigate using the **◀ ▶** arrow buttons to adjust the transparency of the on screen display menu.

• Restore Default

Press the **▶** arrow button to automatically reset all settings back to their original factory settings. The TV will request confirmation.

• Setup Wizard

Set the first time installation options. Press the **ENTER** or **▶** button to enter.

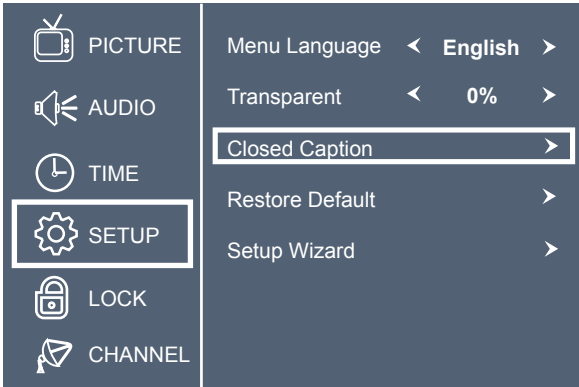

Menu Adjustments

Closed Captions

The **Setup** menu includes adjustments for activating the **Closed Caption** text feature for display on-screen and customizing CC display types and font styles.

How to Navigate:

Press the **MENU** button on the remote control. Navigate using arrow **▲ ▼** buttons to select **Setup**. Press the **▶** arrow button to enter the submenu. When you wish to exit the submenu simply press the **MENU** button.

 
• Press the down **▼** arrow button to highlight **Closed Caption** then press the **▶** arrow button to highlight **CC Mode**.

• Navigate using the **◀ ▶** arrow buttons to select CC OFF - CC ON - CC ON MUTE.

• Press the down **▼** arrow button to highlight **Basic Selection** Navigate using the **◀ ▶** arrow buttons to select CC1-4, or TEXT 1-4.

• Press the down **▼** arrow button to highlight **Service**. Navigate using the **◀ ▶** arrow buttons to select 1-6 or OFF.

• Press the down **▼** arrow button to highlight **Option**. Press the **▶** arrow button to enter a menu with options to customize text fonts, colors, and opacities.

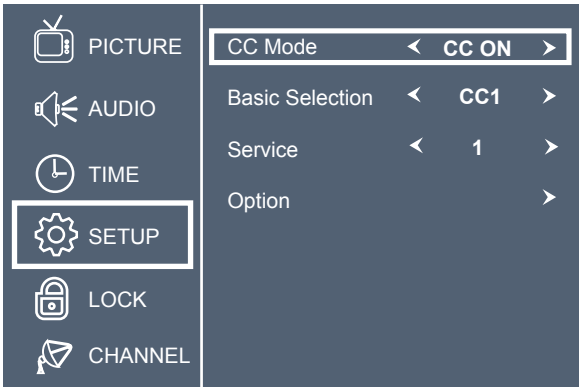

Note: When adjustments are completed, you may select another menu by pressing the **Menu** button.

# Menu Adjustments

 
# Parental Control

In the **Lock** menu, you may block television and movie programming based on TV ratings and Motion Picture Association guidelines. To gain access and select your preferences within the Parental menu make certain your input is set to TV.

### How to Navigate:


Press the **MENU** button on the remote control. Navigate using arrow **▲ ▼** buttons to select **Lock**. Gain access to parental rating options by pressing the down **►** arrow button to highlight **Enter Password**. Enter your 4 digit code (factory default code is "0000") unless previously changed.

- To change the password, press the **►** arrow button to display a screen to set a new password. You will first be required to enter the old password, then enter the new password, then confirm again. (not illustrated)
- To make changes to the parental controls, highlight **System Lock** then press the **►** arrow button to turn the lock ON.
- To block access to either TV or the AV Input, choose **Input Block** then use the **►** arrow button to confirm your selections.
- To set parental controls for television programming or DVD movies, press the **▼▲** arrow buttons to highlight **US**. Navigate using the **◀►** buttons to highlight **TV / MPAA** menus.

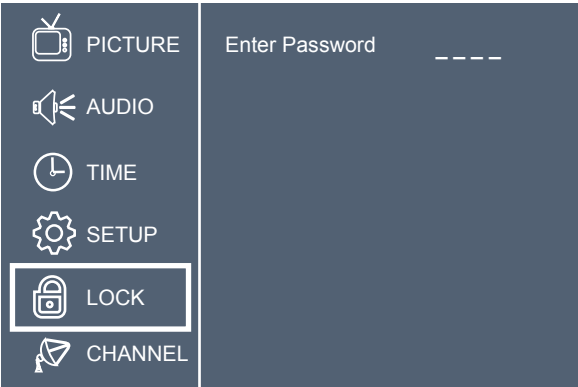


- Highlight TV, then press the **►** arrow button to highlight the TV Ratings and press **ENTER** to select your preference.

 - TV-Y** Appropriate for all children
- TV-Y7** Appropriate for children over 7
- TV-G** General Audience
- TV-PG** Parental Guidance Suggested
- TV-14** Parents Strongly Cautioned
- TV-MA** Mature Audience Only

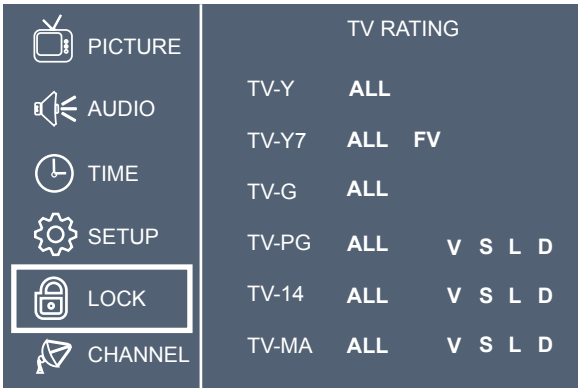

- Highlight MPAA, then press the **►** arrow button to enter the MPAA menu. Press the **▲** arrow button repeatedly until you reach the maximum allowed rating.

 - G** General Audience
- PG** Parental Guidance Suggested
- PG-13** Parents Strongly Cautioned
- R** Restricted
- NC-17** No One Under 17 Permitted
- X** Adults Only

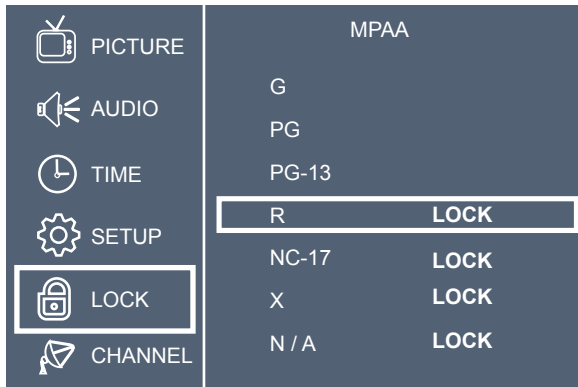



# Menu Adjustments

## Channel Settings

The Channel menu provides the setup / changes to your television provider to receive broadcast channels, store your favorite channels, and the option to show / hide channels in memory.

 
### How to Navigate:

Press the **MENU** button on the remote control. Navigate using arrow **▲ ▼** buttons to select **Channel**

Press the **▶** arrow button to enter the submenu. When you wish to exit the submenu simply press the **MENU** button.

- **Air / Cable**


Press the **▶** arrow button to choose AIR or CABLE based on your TV provider.

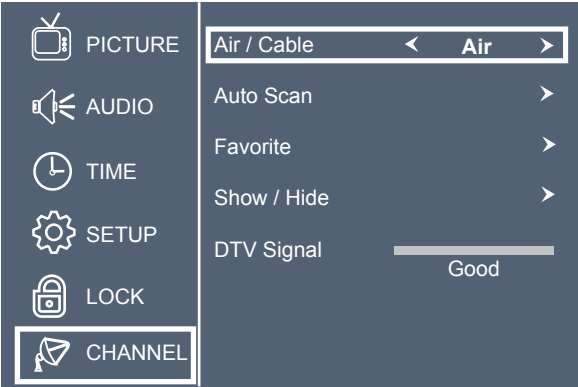


- **Favorite**


Press the **▶** arrow button to enter the Favorites List Menu. Navigate using the **▲ ▼** arrow buttons to highlight your favorite channels. Press **ENTER** on a highlighted channel to mark or unmark that channel as a Favorite. A heart symbol will appear next to all channels marked as Favorites.

 **NOTE:** to access your Favorites simply press the **FAVORITE CHANNELS LIST** button (30) on the Remote Control.

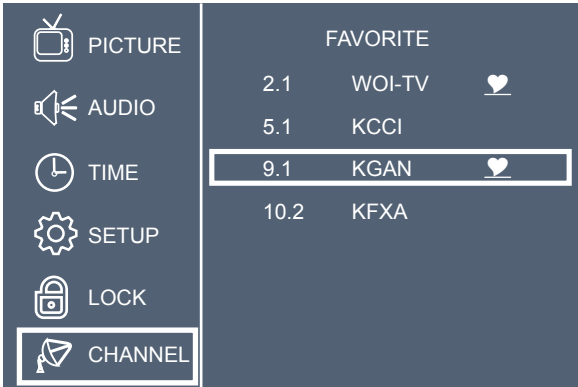

- **Show / Hide**

 Press the **▶** arrow button to enter the Show / Hide Menu. Navigate using the **▲ ▼** arrow buttons to highlight channels you wish to add or remove from the list of available channels. Press **ENTER** on a highlighted channel to Show or Hide the highlighted channel. Channels marked with a  will be removed from the list of available channels.

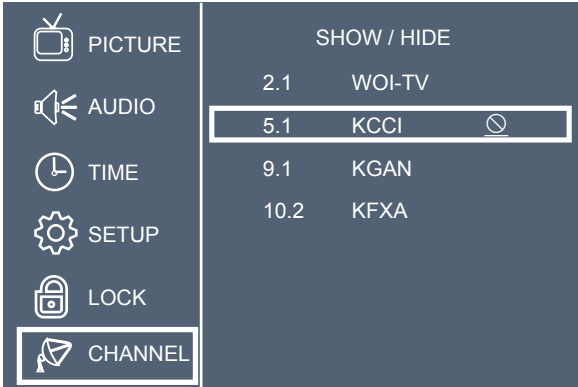

# TV Settings

## TV Provider Changes & Channel Auto Scan After Initial Setup

 
 
To make changes your TV provider or re-scan for available broadcast channels in your area, select the **Channel Menu**.

Note: **For Cable or Satellite users with a set-top box, there is no need to run Channel Auto Scan.** Connect your set top box to the **AV INPUT (9)**, press the **SOURCE** button (15) on the Remote, and choose the **AV** input from the **INPUT SOURCE LIST**.

### To enter the Channel Menu:

- Press the **MENU** button
- Using the **▲ ▼** arrow buttons; scroll to highlight **Channel**
- Press the down **►** arrow buttons to highlight **Air / Cable**

### Air Mode

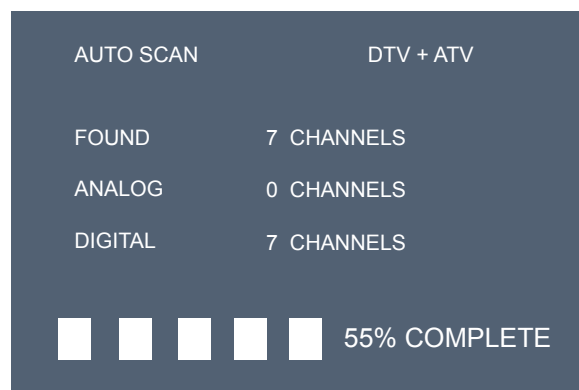
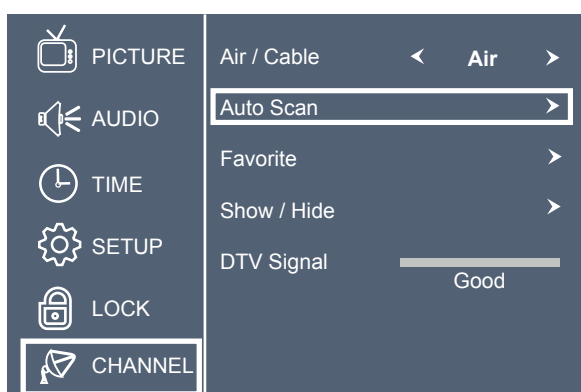


Select **Air** when TV is connected to either the provided Telescoping Antenna, or a separate indoor / outdoor antenna.

- Press the **◀ ►** arrow button to highlight **Air**.
- Press the **▼** arrow button to highlight **Auto Scan** and press **ENTER**. Press the **►** arrow button to highlight **YES** and press **ENTER** to begin **Auto Scan**.

NOTE: **Channel Auto Scan** may take several minutes to complete.

### Cable Mode

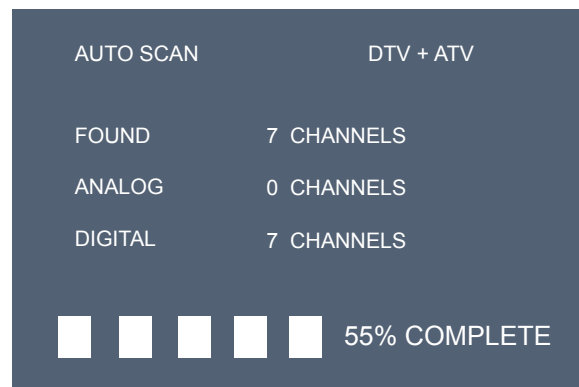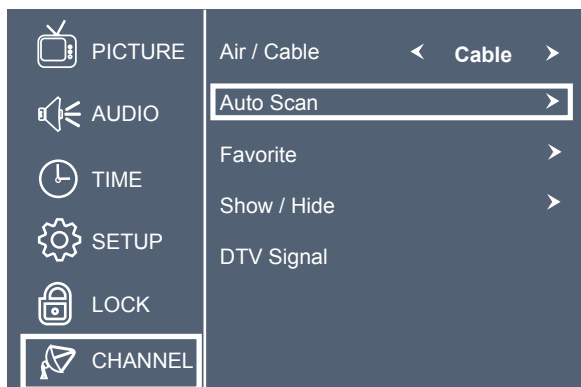  


Select **Cable** if you subscribe to a pay television service without a set top box.

- Press the **◀ ►** arrow buttons to highlight **Cable**
- Press the **▼** arrow button to highlight **Auto Scan** and press **ENTER**. Press the **►** arrow button to highlight **YES** and press **ENTER** to begin **Auto Scan**.


NOTE: **Channel Auto Scan** may take several minutes to complete.

# USB & microSD Playback

 
1. Press the **SOURCE** button on the remote to display the SOURCE MENU.  
Use the **▲ ▼** buttons to highlight **CARD** or **USB** and press **ENTER**.

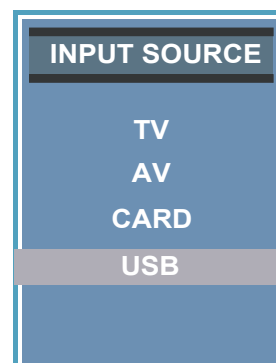

 2. Use the **◀ ▶** buttons to highlight PHOTO, MUSIC, MOVIE or TEXT and press **ENTER** to see a list of the available items.

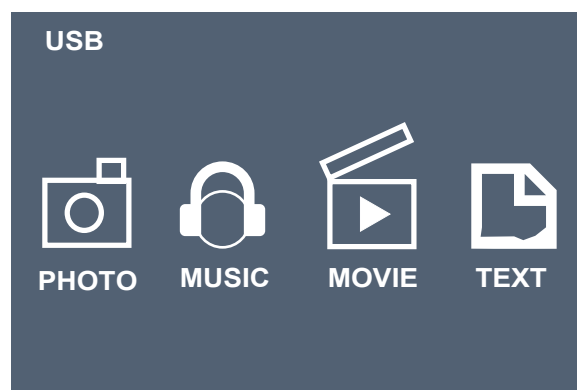

 3. Use the **▲ ▼ ◀ ▶** buttons to highlight Media in the list and press **ENTER** to begin view or listen to the selected file.

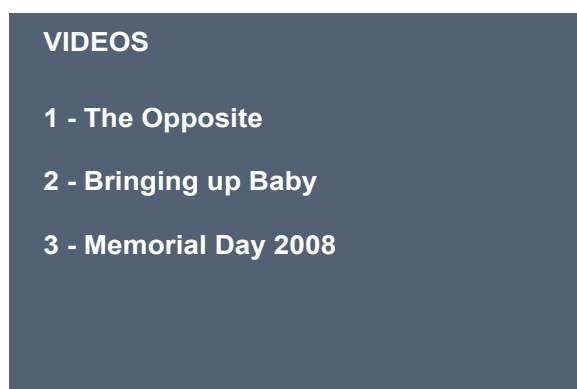


4. Use the **▲ ▼ ◀ ▶** buttons to highlight the different playback functions (Play, Pause, Next, etc.) then press **ENTER** to select the highlighted function.

5. Press the **EXIT** button to stop playback and return to the previous screen.

# Troubleshooting

 Symptom	Possible Solutions
Cannot receive certain channels through the antenna	<ul style="list-style-type: none"> <li>Perform Channel Scan to add channels into the TV tuner memory. See page 20.</li> <li>Readjust your antenna and retry Auto Channel Scan.</li> <li>Signal from the TV station may be weak in your area.</li> </ul>
No color	<ul style="list-style-type: none"> <li>Check the video installation of your external A / V equipment.</li> </ul>
Video noise or choppy picture	<ul style="list-style-type: none"> <li>Readjust antenna. Keep TV away from noise sources, neon lights, and microwave appliances.</li> </ul>
TV blocked on certain channels	<ul style="list-style-type: none"> <li>Perform Channel Scan to add channels into the TV tuner memory. See page 20.</li> <li>Check whether the channel was deleted. See page 19.</li> <li>Check parental control settings. See page 18.</li> <li>Restore default settings. See page 17.</li> </ul>
Cannot use certain functions	<ul style="list-style-type: none"> <li>If the item chosen in a menu is shown in gray text, that item cannot be selected in the current input.</li> </ul>
No sound	<ul style="list-style-type: none"> <li>Check that connected audio cables are completely inserted.</li> <li>Verify you have selected the correct audio source from your amplifier.</li> <li>Mute function may be enabled, press mute on the remote.</li> </ul>
Black box on screen	<ul style="list-style-type: none"> <li>The "Text" option is enabled and no text is available.</li> <li>Press the CC button on the remote control to turn off.</li> </ul>
No power	<ul style="list-style-type: none"> <li>Batteries in the remote control may need replacing.</li> <li>Re-attach AC plug to wall outlet.</li> </ul>
No picture	<ul style="list-style-type: none"> <li>Digital TV channel signal maybe weak, try another channel.</li> <li>Press <b>SOURCE</b> button to verify the desired input is selected.</li> <li>Re-connect the antenna or cable wiring.</li> <li>Restore default settings. See page 17.</li> </ul>
Remote control does not function	<ul style="list-style-type: none"> <li>Replace batteries with new ones.</li> <li>Check that battery polarity is correct.</li> <li>Point remote directly at the TV's IR receiver. See page 10.</li> </ul>

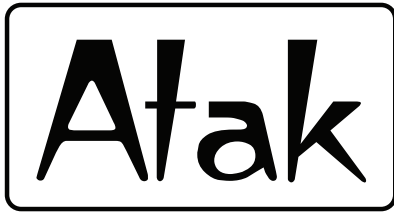

## **90-DAY LIMITED TELEVISION WARRANTY**

We warrant this product to be free from defects in material and workmanship under normal use for a 90-day period from the original date of purchase from an authorized ATAK dealer. We will repair or replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, submit proof of purchase (sales slip) along with the TV and all accessories.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

During the 90 - day period from the original purchase date, we will service or exchange the TV, at no charge. To obtain warranty service or replacement within the duration of the one-year warranty, please return the product and all accessories to the original place of purchase.

For technical support, visit our website, [www.sibrandssupport.com](http://www.sibrandssupport.com) or call the ATAK Technical Support Center for technical assistance or troubleshooting at 1-855-994-2825, Monday - Saturday, 10:00AM to 7:00PM EST.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, outdoor use, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as DVD, SD, and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair. Under no circumstances shall ATAK be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

**UNDER NO CIRCUMSTANCES WILL ATAK BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

This warranty does not cover re-manufactured units, or product sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

**Schoenfeld International Inc and ATAK**  
5001 American Boulevard West  
Suite 275  
Bloomington, Minnesota 55437

©Schoenfeld International Inc., 2015  
7A700 Ver. 1.0 February 2015