 


Tilting & Swiveling Flat Panel Wall Mount Installation Guide Model: AXS2040

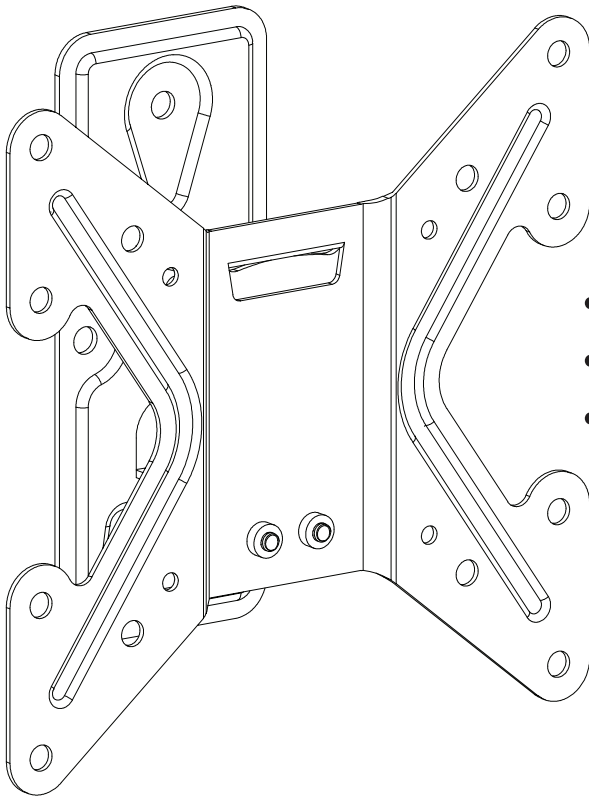

- Supports most 20"-40" Televisions
- Maximum weight capacity: 66 lbs.
- Supports VESA sizes up to: 200x200



**For technical assistance or troubleshooting
please call 1-855-994-2825 or visit www.sibrandssupport.com**



This product Wall Mount frame is intended for use only with an apparatus which has a maximum weight of 66 lbs. See apparatus instructions. Using with an apparatus heavier than the maximum weight indicated may result in instability and cause possible injury.

READ THIS FIRST Read this entire manual! Do not attempt to install this product if you do not understand the instructions. Contact a qualified mount installer if you have any doubts about a safe and secure mount installation, or if you are not sure what specific wall materials you are attaching this mount to. Check all the parts carefully to make sure there are no missing or damaged parts. Improper installation may result in damage to your TV, property, and personal injury.



This product is intended only to mount a television of the indicated size and weight. Using this product to mount televisions heavier than the maximum weight capacity can damage equipment and cause personal injury.

Schoenfeld International Inc. and ATAK are not responsible for personal injury or product damage due to mishandling, incorrect mounting, incorrect assembly, or incorrect use of this product.



CHILD SAFETY

How and where you use your television wall mount is extremely important for Child Safety

As you set up and use your new product, keep all of these safety tips in mind.

- **One size of TV wall mount does not fit all TVs. Use only a TV wall mount rated for the weight of your TV and the size of your screen. Your TV wall mount assembly instructions contains specific information on the maximum weight and screen size combination that your wall mount can safely support. Do not exceed the maximum weight of screen size for any TV wall mount.**
- **Carefully read all of enclosed instructions for proper use of this product. If you have any doubts about safe and secure assembly, please contact a professional.**
- **Don't let children climb on or play with mounts or TVs.**
- **Remember that children can become excited while watching a program, especially on a "larger than life" TV. Make sure to place or install the TV wall mount where it cannot be pushed, pulled on, or knocked down.**
- **Make sure that you route all cords and cables so that they cannot be pulled or grabbed by curious children.**



Always wear safety goggles to when drilling or installing hardware.

Tools

For your convenience, we have included an allen wrench and a socket tool with this mount. For the best assembly experience and mounting safety, we always recommend using full-size tools for each assembly steps.

Below is a recommended tool list you will need for proper and safe installation. See applicable warnings in this manual about certain types of mounting surface materials and the special hardware and tools that should be used.

 
- **Drill with a specific size drill bit to pre-drill holes in the wall**
- **Stud finder**
- **Tape measure**
- **Pencil**
- **Screw drivers**
- **Socket wrenches**
- **Small hammer**
- **Safety goggles**

STEP 1 Attach TV Plate to TV

Parts and Hardware


! WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged.
NOTE: Not all hardware included will be used.

Allen Key



TV Screws

 M4x12mm




(a) x4

M4x30mm



(e) x4

 M5x12mm




(b) x4

M5x30mm




(f) x4

 M6x12mm




(c) x4

 M6x35mm




(g) x4

 M8x25mm



(d) x4

 
M8x50mm



(h) x4


Spacers

 M5/M6x17mm




(i) x4

 M8x22mm



(j) x4

 10mm



(m) x4

2.5mm



(n) x8

Washers

M5/M4



 
(k) x4

M6




(l) x4

Wall Plate Unit

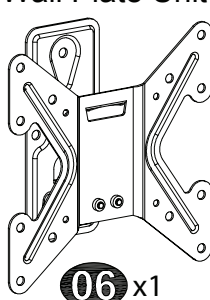


 1-1 Disassemble Wall Plate Unit into Two Pieces by removing the two screws (#5)

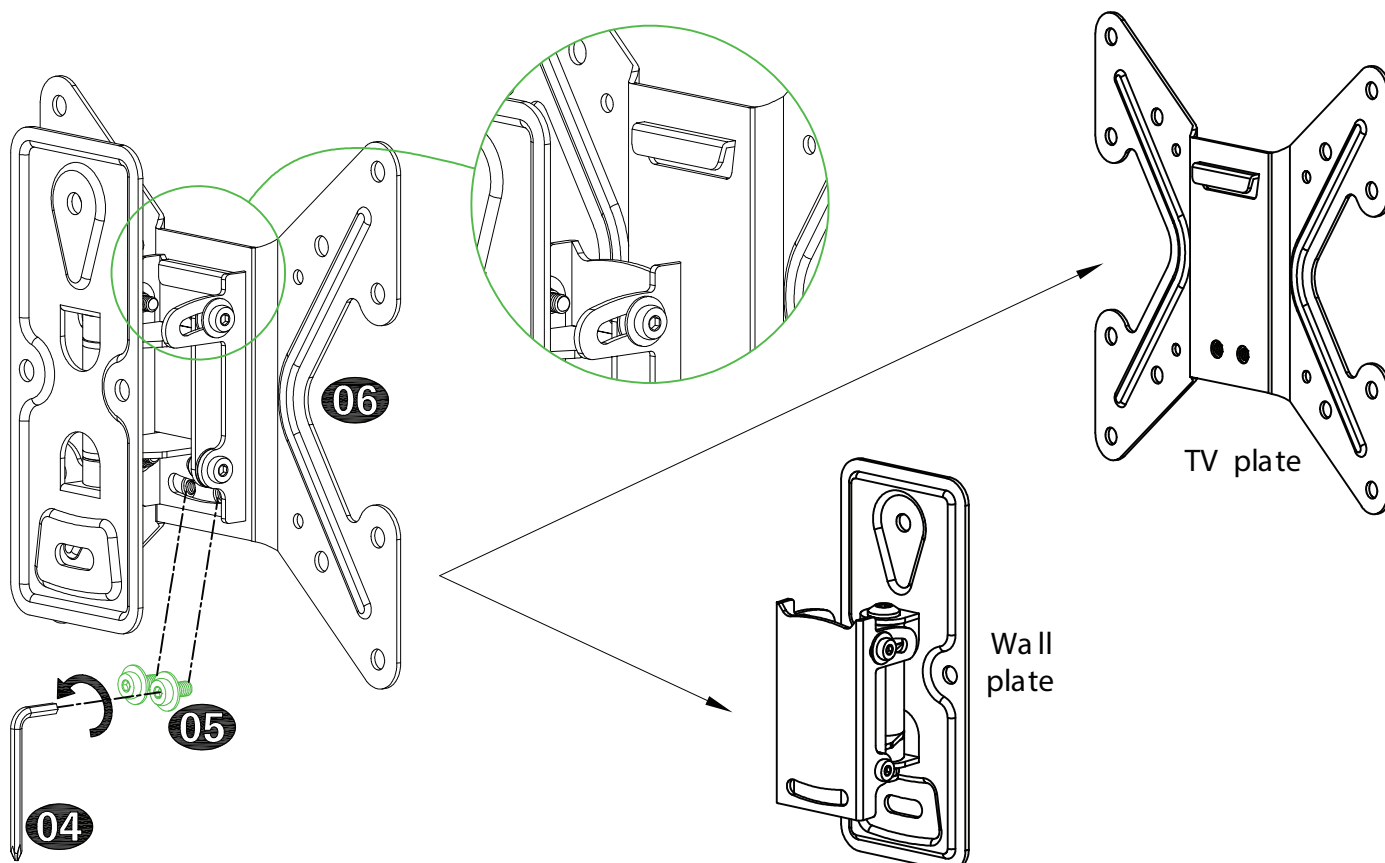


1-2 Choose Configuration

 Align the 4 holes on the rear of your TV with the 4 corresponding holes on the TV plate from options 1, 2, or 3.

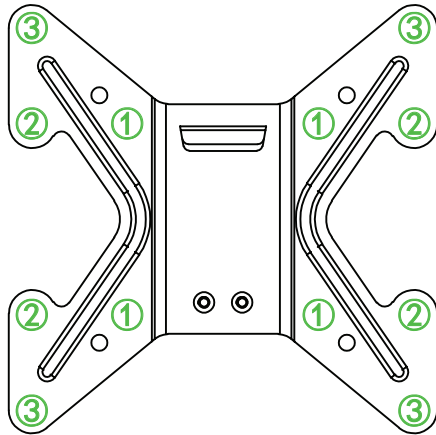


- ① 100mm x 100mm
- ② 200mm x 100mm
- ③ 200mm x 200mm

 1-3 Select TV Screws

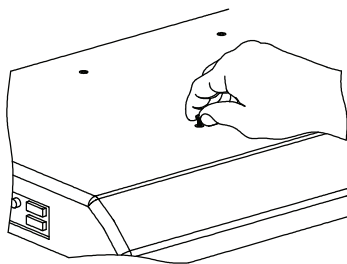


M4 M5 M6 M8


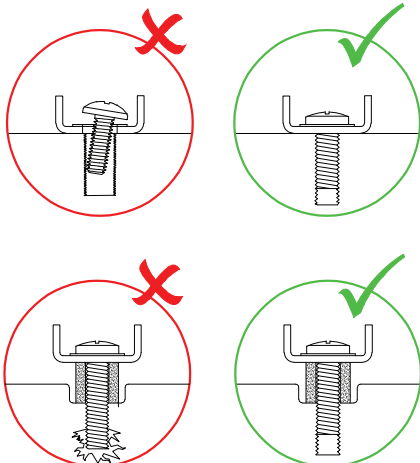 


1-4 Need spacers?


 
I No, go to PAGE 4 **I** for detailed combination.

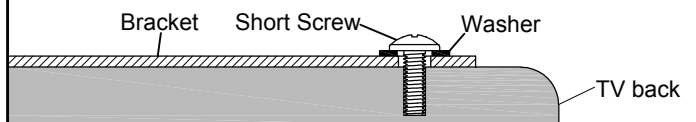

  
II Yes, go to PAGE 4 **II** for detailed combination.

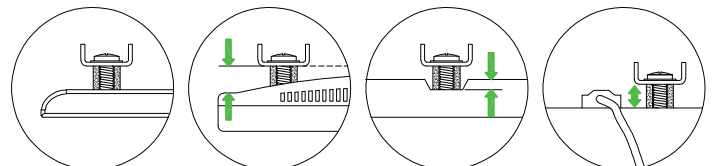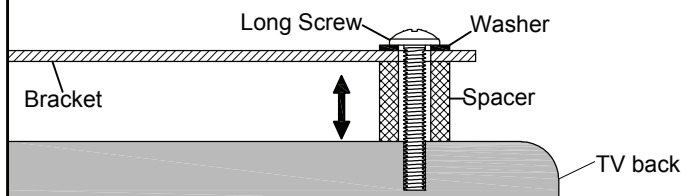







1-5 Attach the TV Plate to the Rear of the TV

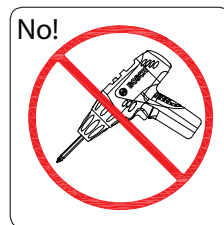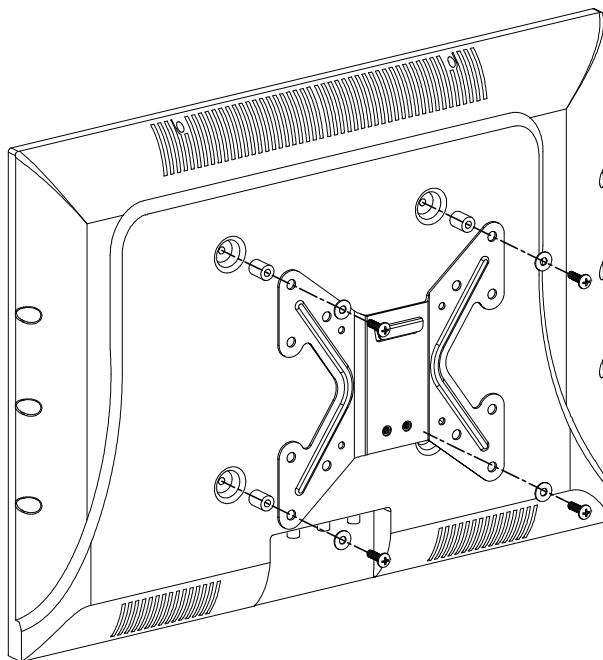  

I Screw and washer

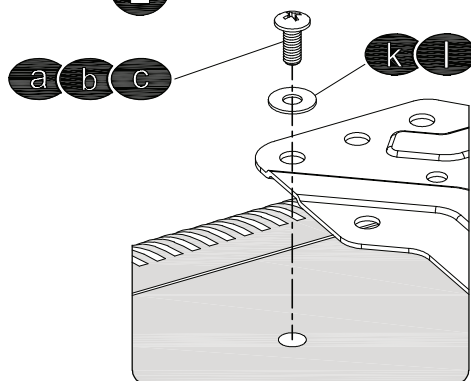 

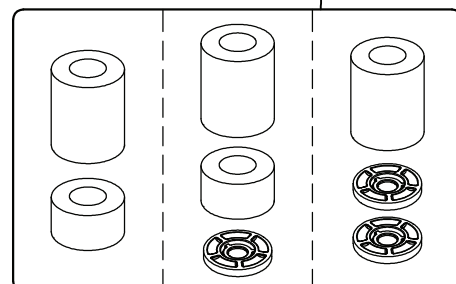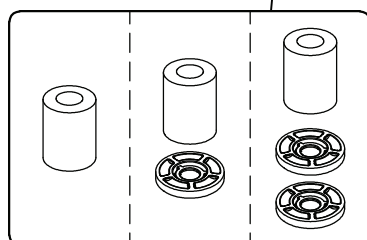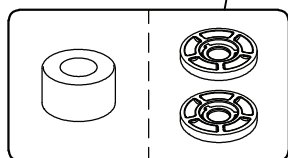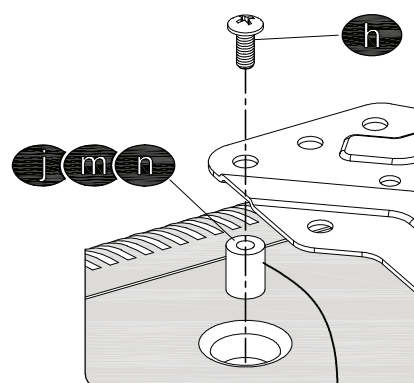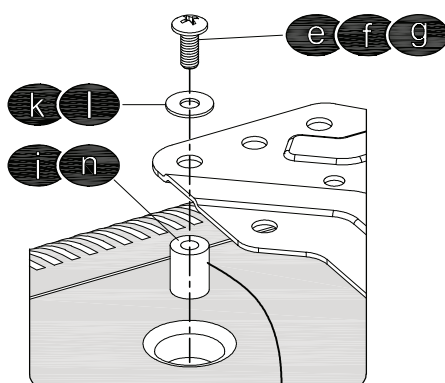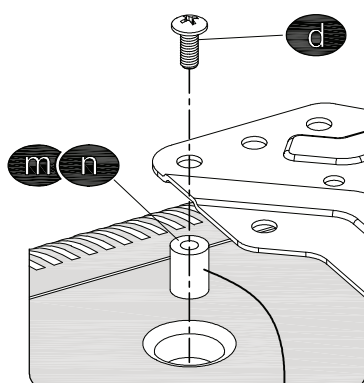      

II Spacer(s), screw and washer

 


Tips: If you need to combine M8(d/h) screw with 2.5mm Spacer(n), you have to remove the inner circle of the Spacer (n).


STEP 2 Attach Wall Plate to Wall

-  For wood stud installation, follow STEP 2A
-  For concrete installation, follow STEP 2B on PAGE 7

Parts and Hardware

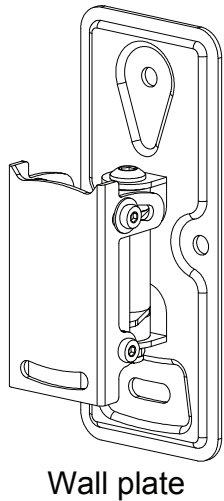


Wall plate

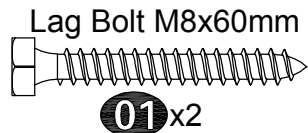 

01 x2



 02 x2

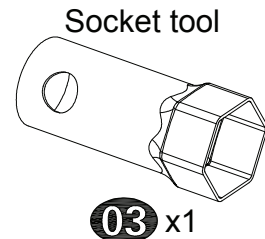


Socket tool

03 x1

For concrete wall installations ONLY



 
CAUTION: Do not use in drywall or wood




Concrete Wall Anchor 2pcs

STEP 2A

   
Wood Stud Installation

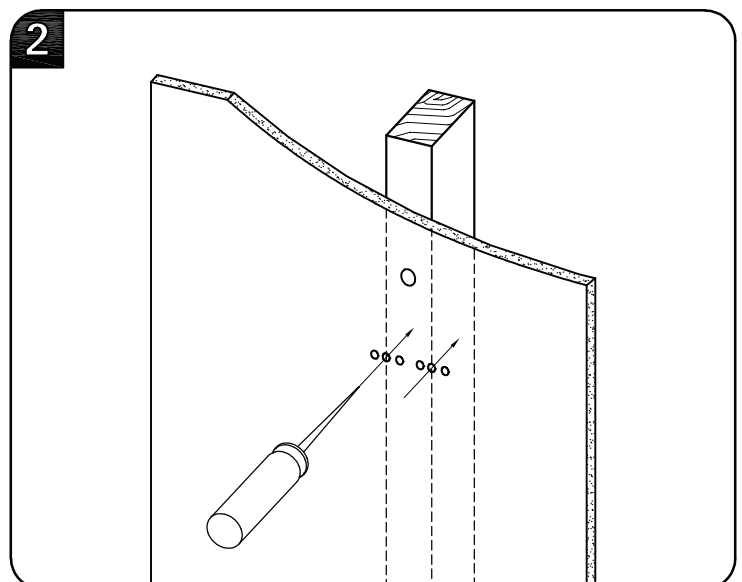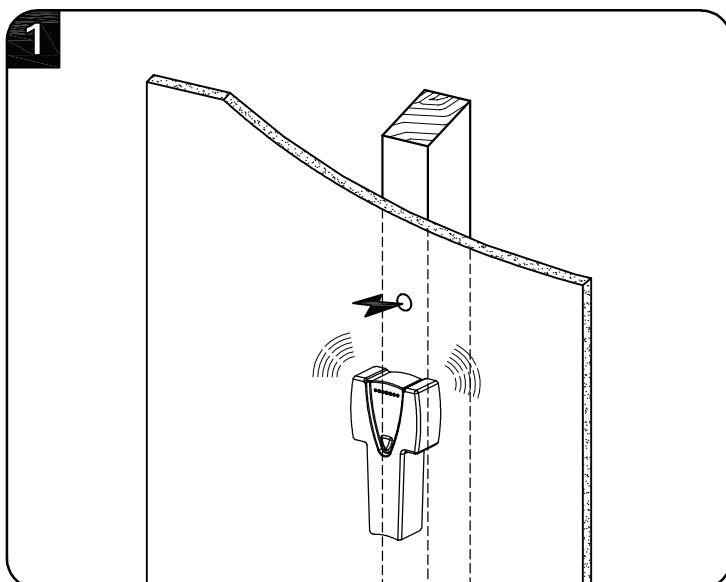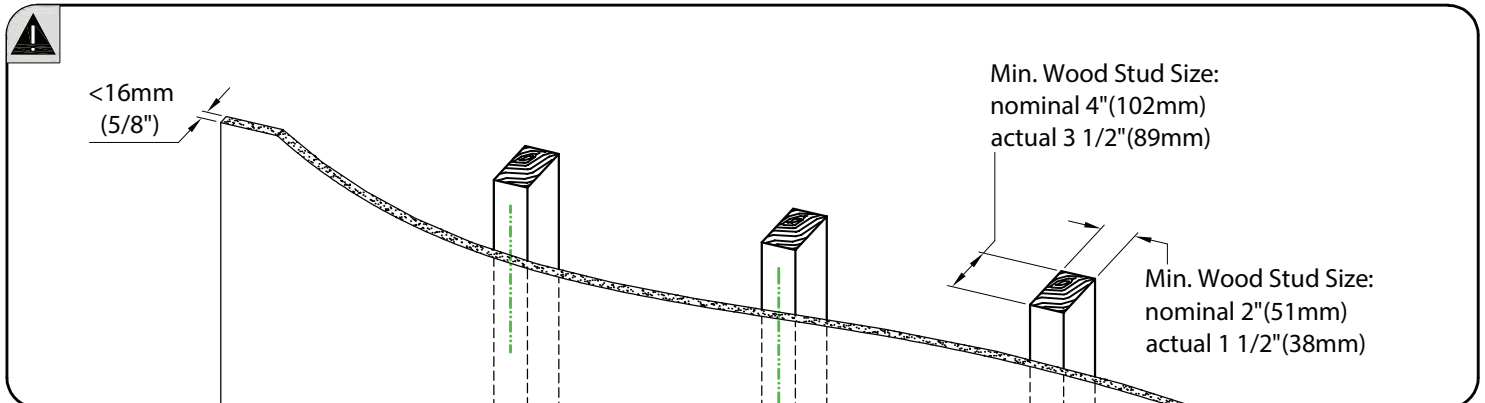

 - 3** Use a pencil to mark the center of the stud.

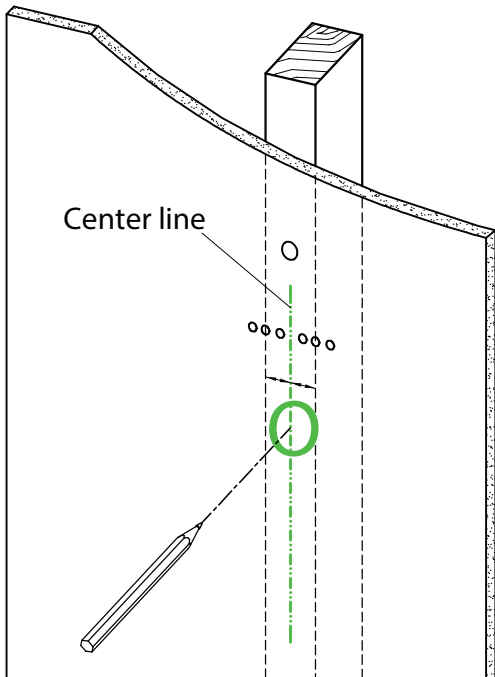

 
- 4** Use a pencil to mark the mounting holes on the wall. Make sure the holes will be in the center of the stud.

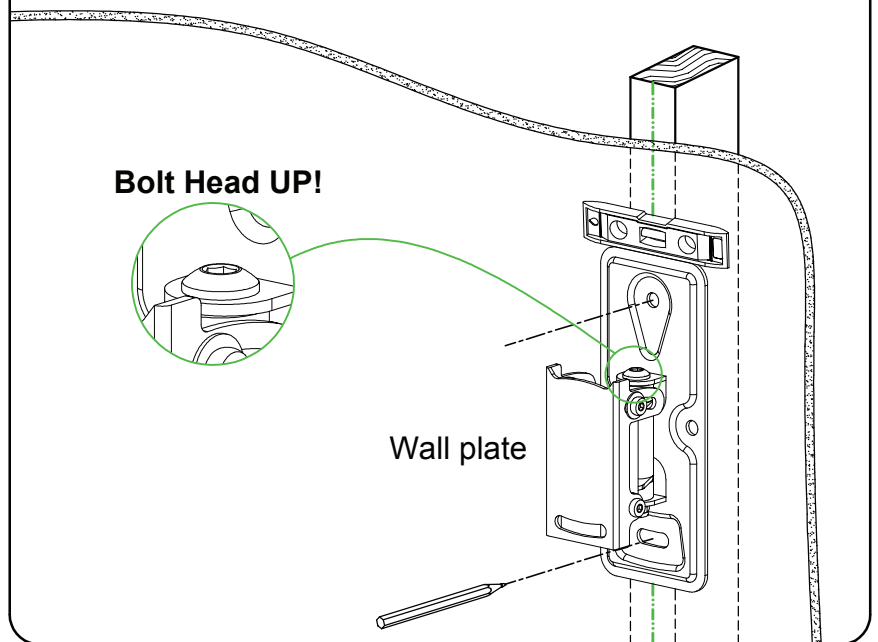

⚠ CAUTION: To avoid potential personal injury or property damage: Both lag bolts **01** **MUST BE** firmly tightened to prevent unwanted movement of the wall plate assembly. Ensure the wall plate assembly is securely fastened to the wall before continuing on to the next step.


To prevent the TV falling down, the Bolt Head Must Face UP at this step!!

 - 5**

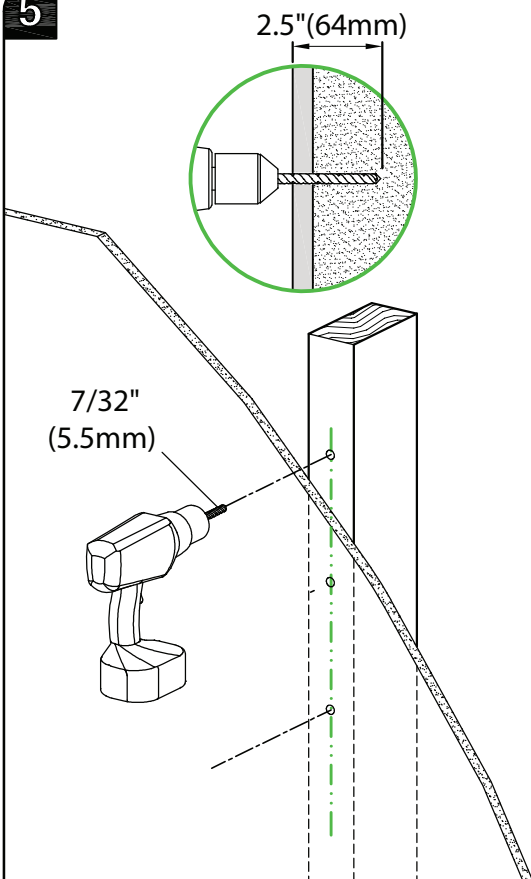

Use 5/32" (4mm) drill bit to pre-drill holes at least 2.5" inches (64mm) deep at the marked locations.

 - 6**


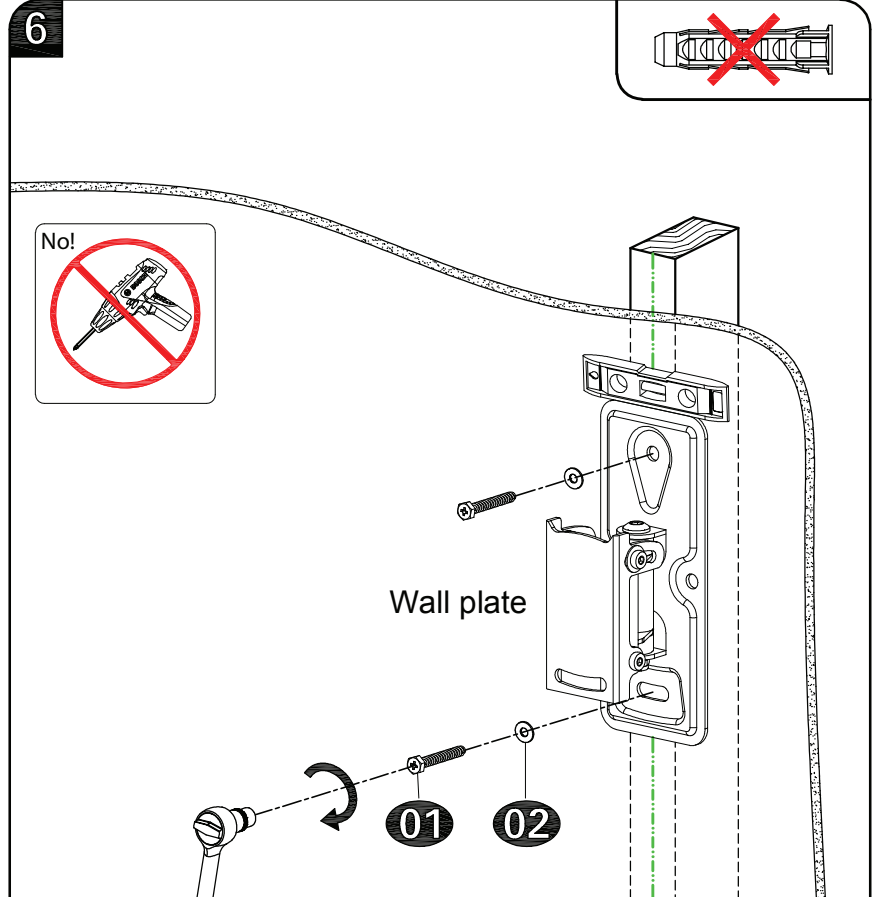


Use the lag bolts (1) and washers (2) to secure the Wall Plate to the wall.

Go to Step 3 on PAGE 8.

STEP 2B

  Solid Concrete Wall Installation

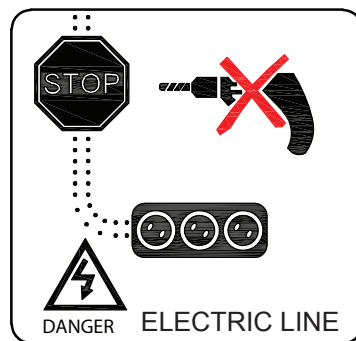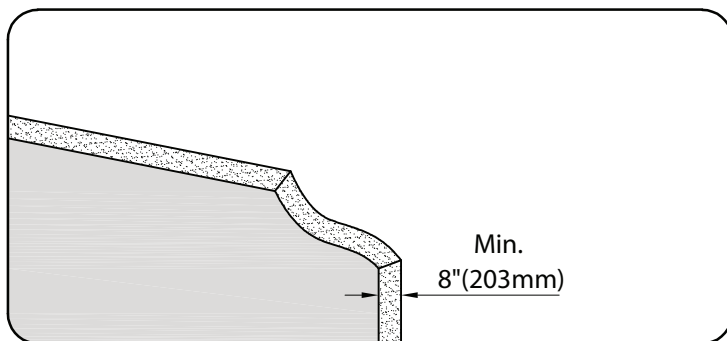

1

Use a pencil to mark the mounting holes on the wall.

Bolt Head UP!

Wall plate

2

Use 3/8" (10mm) drill bit to pre-drill holes at least 2.5" inches (64mm) deep at the marked locations.

3/8"
(10mm)

2.5"
(64mm)

! CAUTION: To avoid potential personal injury or property damage: Both lag bolts **01** **MUST BE** firmly tightened to prevent unwanted movement of the wall plate assembly. Ensure the wall plate assembly is securely fastened to the wall before continuing on to the next step.

To prevent the TV falling down, the Bolt Head Must Face UP at this step!!

3

 
Insert a Wall Anchor into each pre-drilled hole and lightly tap it with a hammer until the Wall Anchor is flush with the wall.

Concrete Wall Anchor

4

Use the Lag bolts (1) and Washers (2) to secure the Wall Plate to the wall.




Wall plate

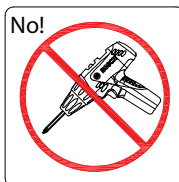





01 **02**

STEP 3 Hang and Secure TV to Wall Plate

   Before hanging TV, please conduct "wall plate installation integrity test" first.

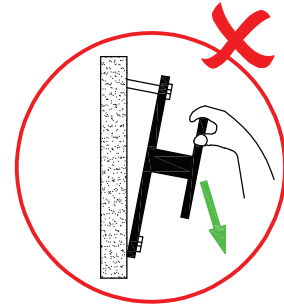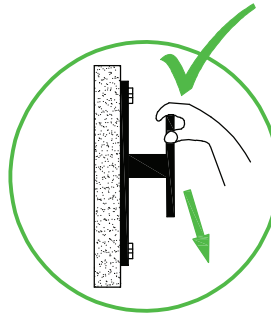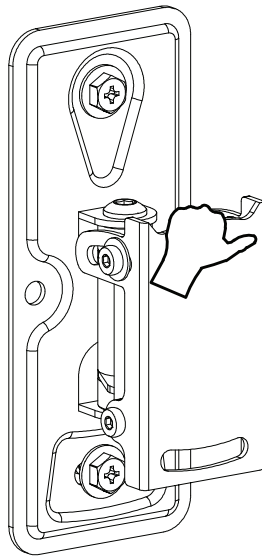


66 LBS (30 kg)

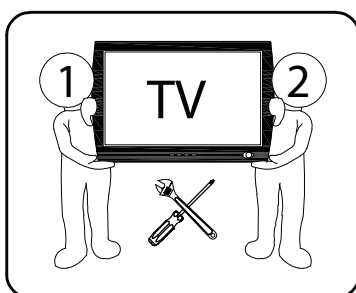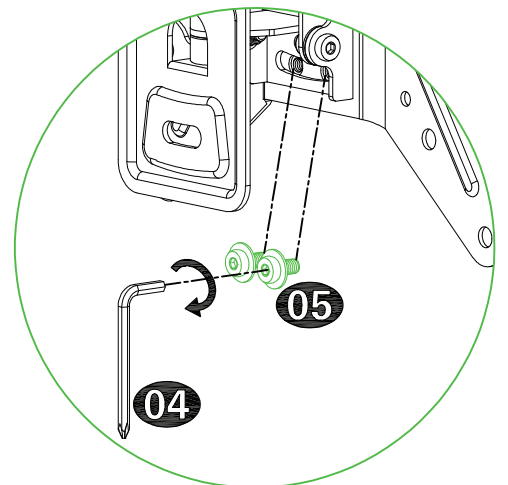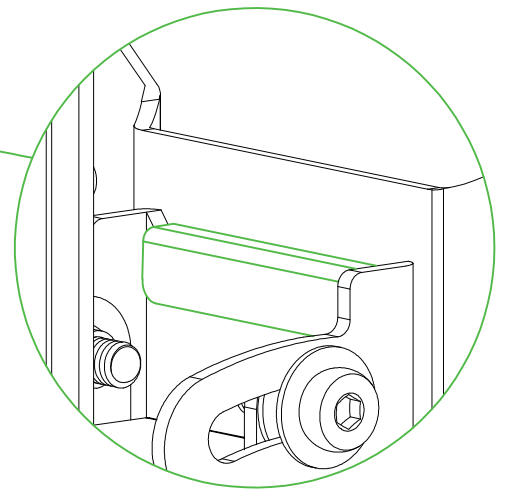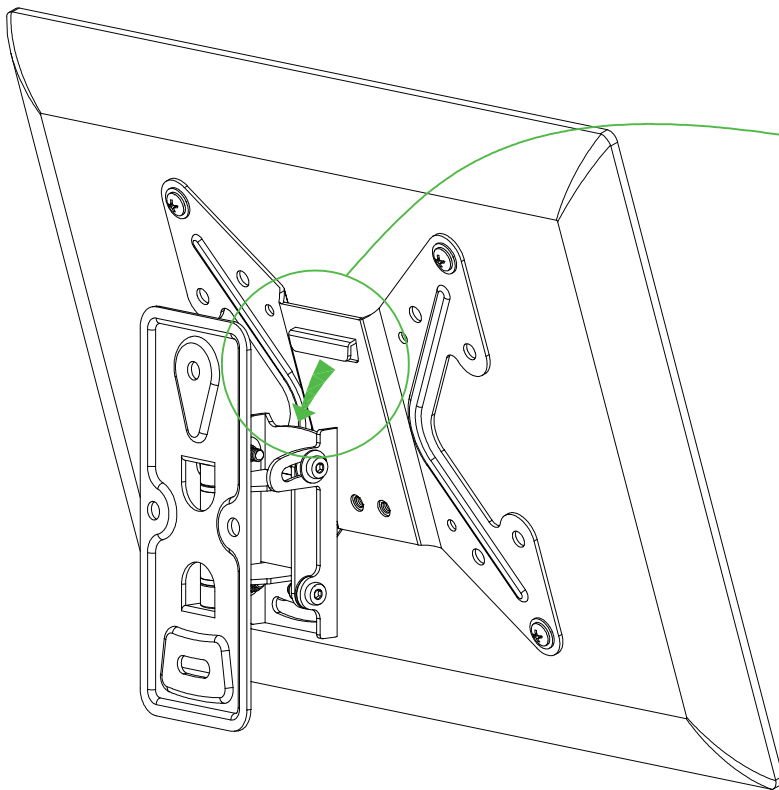    



Re-attach the Wall Plate and TV Plate using the two screws (#5)

 STEP 4 Adjustments

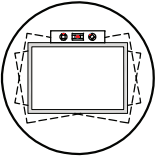


4-1 TV leveling adjustment ($\pm 5^\circ$):

  Loosen 2 leveling bolts on the rear of TV plate by maximum 2 turns, adjust to level, and retighten to secure.

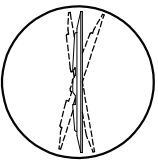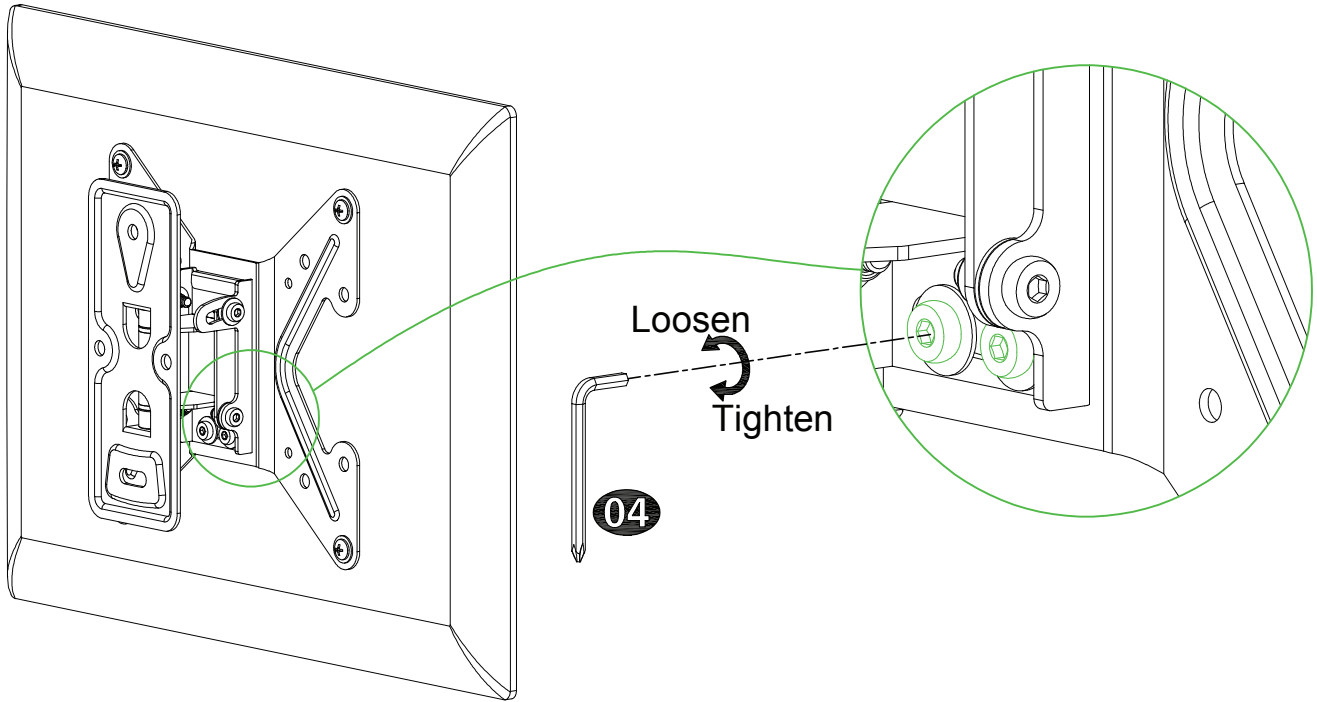



4-2 Tilting angle adjustment ($+5^\circ/-15^\circ$):

 Pull TV to your desired angle then fasten 2 tilting bolts with Allen key **04**.

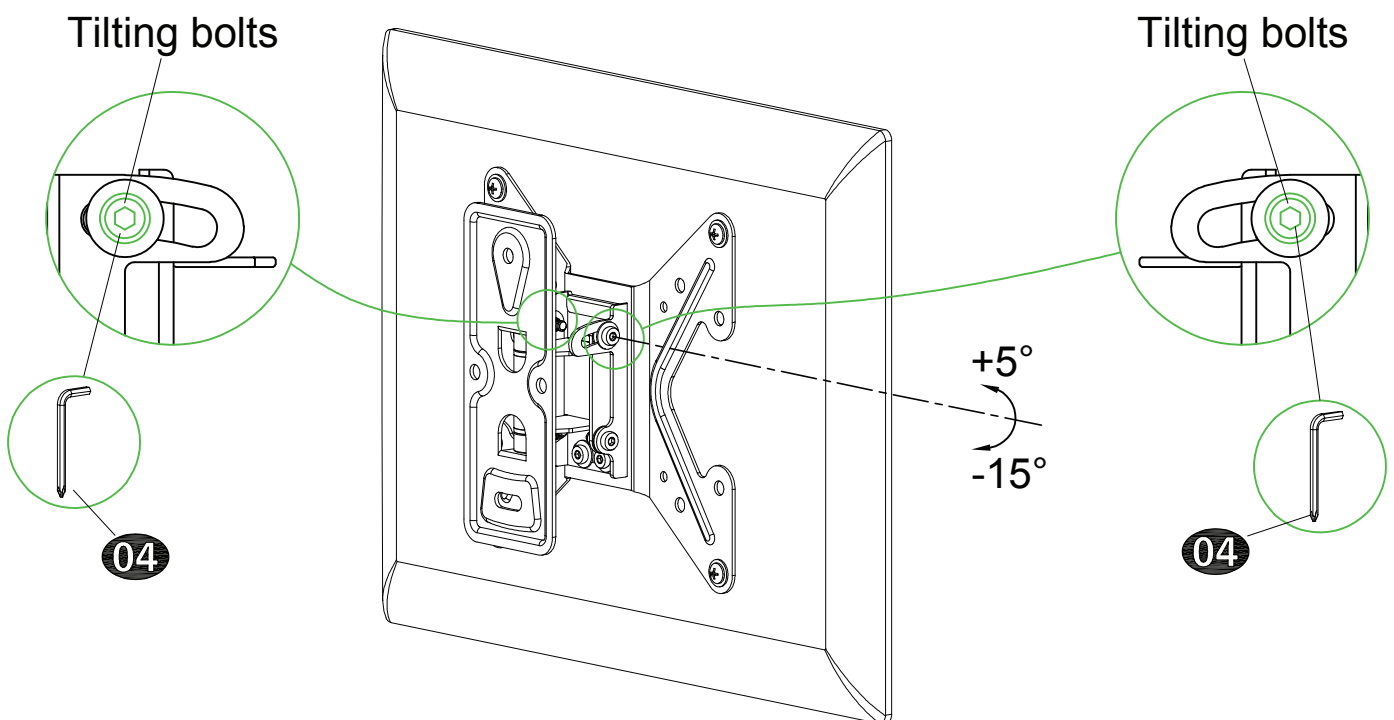

Product dimensions:

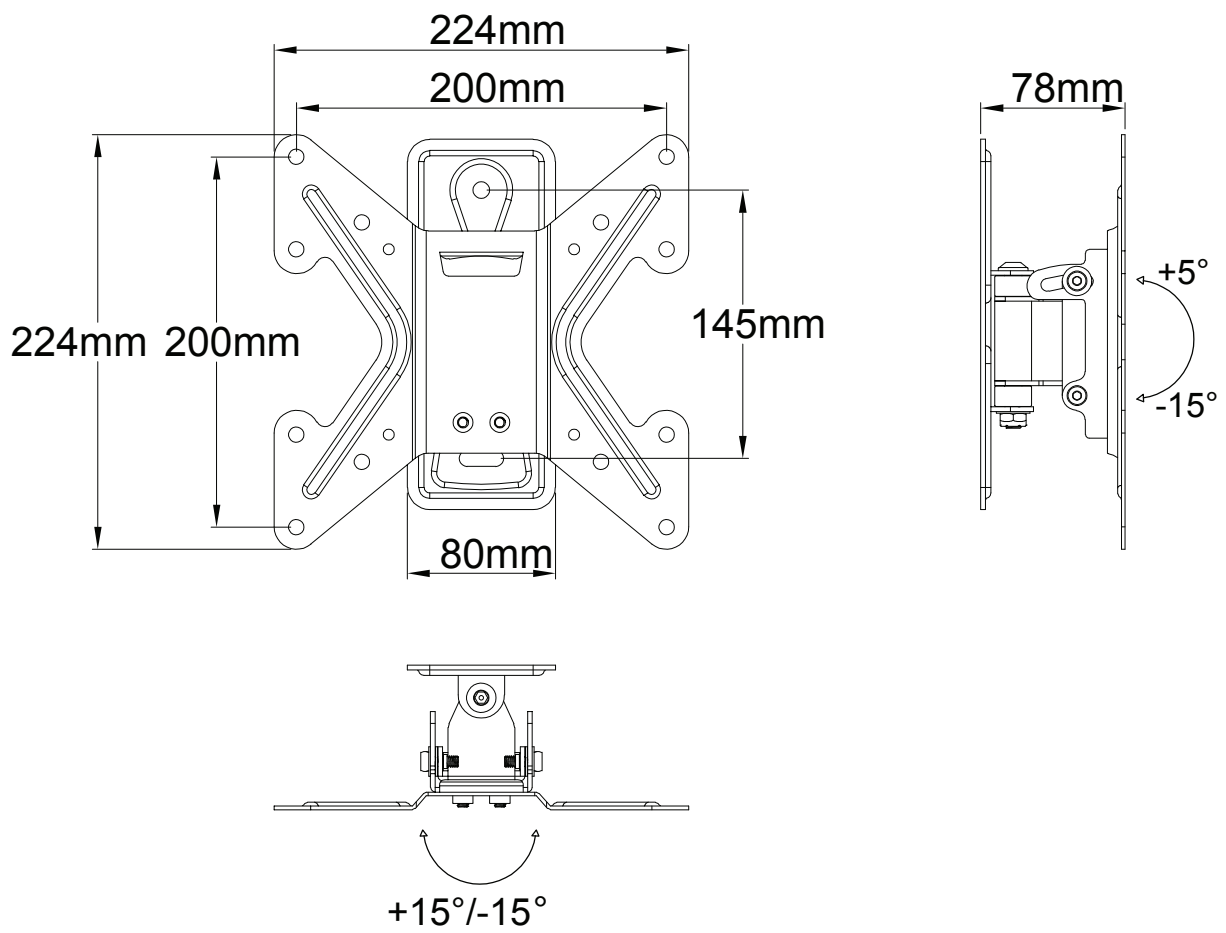 

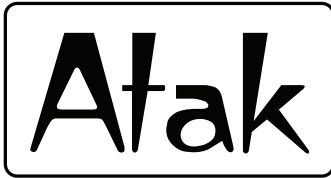 

LIMITED SIX-YEAR WALL MOUNT WARRANTY

We warrant this product to you, the original purchaser at the time of purchase printed on a dated store receipt from an authorized ATAK retailer and for a period of six-years thereafter that our wall mount product and all its parts and components are free of defects in material and workmanship under normal use. This warranty is subject to the provisions below. ATAK's sole obligation and the purchaser's exclusive remedy pursuant to these warranties are limited to replacement at ATAK's sole discretion. There are no other warranties except as expressly set forth below either expressed or implied, including any warranty of merchantability for any particular purpose.

Should you be missing any of the assembly parts or components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

Our Customer Support Center is available Monday to Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us please call 1-855-994-2825 or visit www.sibrandssupport.com

This warranty is expressly limited to the replacement of wall mount parts and components described in the parts list located in the Instruction Manual included with the product.

This warranty applies under conditions of normal use.

This warranty does not cover: any product, which has been subject to damage due to improper assembly or disassembly, products which were not assembled, installed, used, or maintained in accordance with the product assembly instructions & warnings, acts of nature, misuse, neglect, accidents, abuse, exposure to elements, outdoor use, extreme temperature ranges, damage during transit, commercial use, modification of, or to any part of the product or attachments to the product not approved by ATAK. Also not covered are costs for assembly/dis-assembly labor, costs incurred in shipping the unit or parts for warranty repair/exchange or any products purchased from unauthorized ATAK sellers. Under no circumstances shall ATAK, be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product. Nor shall ATAK have any responsibility for incidental or consequential damages resulting from the breach of this warranty including but not limited to inconvenience, purchase or rental of replacement products, loss of profits or commercial loss.

We reserve the right to request damaged parts or units be shipped to our offices for inspection or confirmation of any warranty claims.

This warranty does not cover product sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

Schoenfeld International Inc and ATAK

5001 American Boulevard West

Suite 275

Bloomington, MN 55437

©Schoenfeld International Inc, 2018

PN: ATAK AXS2040 Rev 1.0 July 2018