



**Model: BS030MS**  
**Bluetooth Stereo System**  
**with Audio Input for MP3 Players**



**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE  
OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR  
FUTURE REFERENCE.**

**For technical assistance or troubleshooting please  
call 1-855-719-8324 or visit [www.sibrandssupport.com](http://www.sibrandssupport.com)**

## IMPORTANT SAFETY INSTRUCTIONS



- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and/or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the POWER cord from being walked on or pinch particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as POWER-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.
- 16) CAUTION: Visible and Invisible Laser Radiation when open and interlock defeated.  
DO NOT STARE INTO BEAM.
- 17) Rating label is located at the bottom of enclosure.
- 18) "CAUTION" mark is also located at the bottom of enclosure.

## WARNINGS

- Caution: use of any controls, adjustments, or procedures other than those specified herein may result in hazardous radiation exposure.
- Caution: danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- To prevent fire or shock hazard, do not use this plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.
- Warning: to reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- Warning: the batteries shall not be exposed to excessive heat from direct sunlight, fire, or other heat sources.


 <p>THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.</p>	<p><b>CAUTION</b></p> <p><b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b></p> <p><b>WARNING:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE FRONT OR REAR COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.</p>
--	--	---

## **FCC WARNINGS**

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

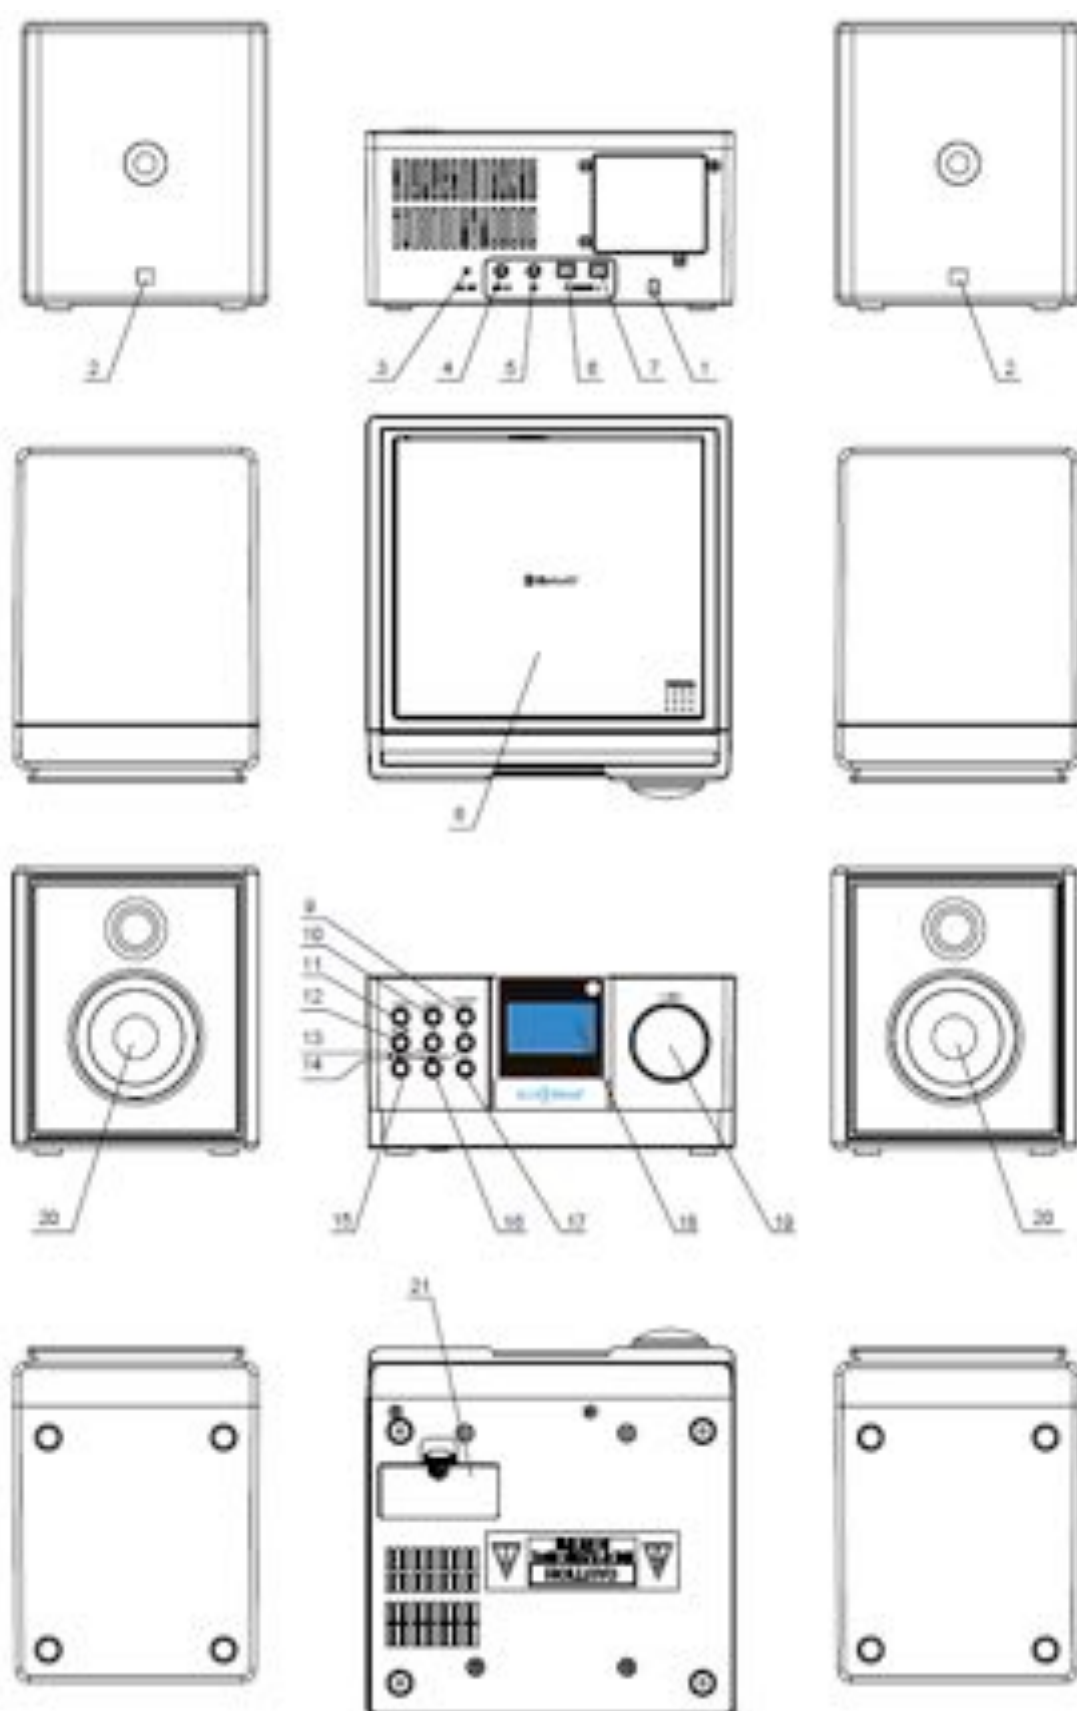

## **OVERVIEW OF SYSTEM**

1. Power cord (attached)
2. Speaker cables (attached)
3. FM antenna (attached)
4. Aux in jack
5. Headphone jack
6. Speaker R
7. Speaker L
8. CD door
9. Clock Set / Sleep button
10. Source button
11. Power button
12. Play / Pause / Pair button
13. Previous / Rewind button
14. Next / Fast Forward button
15. Stop / Dimmer button
16. Alarm / Volume- button
17. Volume+ button
18. LCD display
19. Tuning knob
20. Speakers
21. Battery Cover

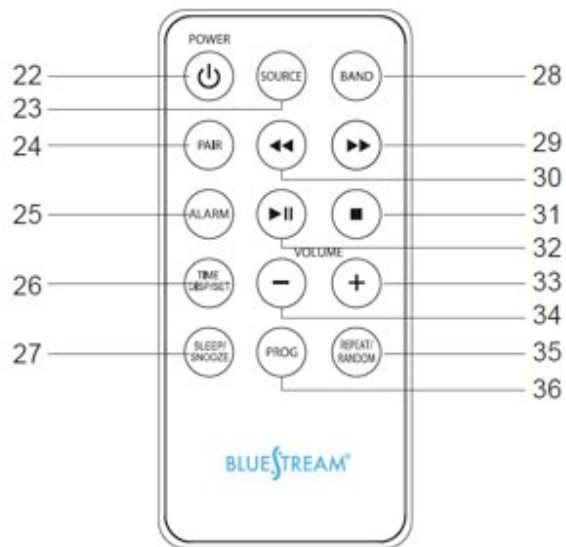

22. Power button

23. Source button

24. Pair button

25. Alarm button

26. Time display/set button

27. Sleep / Snooze button

28. Band button

29. Next / Fast Forward button

30. Previous / Rewind button

31. Stop button

32. Play / Pause button

33. Volume+ button

34. Volume- button

35. Repeat / Random button

36. Program button

### **Battery Installation for the Power Backup – Requires 2 AAA Batteries**

In the case of a Power failure, the Power backup will keep the Clock & Alarm times accurate until the main power has been restored.

NOTE: the product will operate properly with or without batteries except in the case of power loss.

- Open the Battery Cover on the bottom of the unit
- Insert 2 AAA batteries (not included) following the +/- polarity as indicated in the compartment.
- Close the Battery Cover.

### **IMPORTANT:**

- Be sure that the batteries are installed correctly
- Wrong polarity (+ or -) may damage the unit and void the warranty
- For best performance and longer operating time, we recommend using good quality Super Alkaline type batteries

### **CAUTION:**

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- If the unit is not going to be used for an extended period of time, remove the batteries from the unit.
- Old or leaking batteries can cause damage to the unit and may void the warranty.
- Do not dispose of batteries in fire as batteries may explode or lead

### **IMPORTANT:**

- This unit operates on AC 120V~60Hz
- Do not attempt to operate this unit on any other power source. You could cause damage to the unit and void your warranty.
- Please be sure the power outlet you plug this unit into is working and receives constant unswitched power.

## **POWER**

1. Plug the attached AC power cord into an AC 120V~60Hz wall outlet.
2. Press the **Power** button **(11)** on the main unit, or on the Remote **(22)**.

## **VOLUME**

- Increase Volume: Press the **Volume +** button **(17)** on the main unit, or on the Remote **(33)**.
- Decrease Volume: Press the **Alarm / Volume-** button **(16)** on the main unit, or the **Volume-** button on the Remote **(34)**.

## **PAIRING A BLUETOOTH DEVICE**

Before using a Bluetooth device you must first Pair the device with the BS030MS.

1. Turn your Bluetooth device OFF entirely and then turn it back ON to refresh the device's Bluetooth Memory.
2. Find the Bluetooth menu on your device and make sure the Bluetooth function is turned ON. (Refer to your device's user manual for instructions on finding the Bluetooth menu)
3. Press the **Source** button **(10)** or **(23)** repeatedly until "**bt**" is shown on the LCD Display (18). Note: The "**bt**" will be blinking until a device successfully pairs.
4. On your device perform a Bluetooth "device discovery" to add the BS030MS as a new device.
5. When the BS030MS is discovered your device will display "BS030MS" in the Bluetooth menu. Click/Tap on the "BS030MS" to pair.
6. If your Bluetooth device asks for a password enter "0000" and the device will now pair with the BS030MS and be ready to use. The "**bt**" on the LCD Display (18) will stop blinking.
7. If supported by your device, set the BS030MS as "authorized" in the Bluetooth menu.

NOTE: most Bluetooth devices will automatically connect the next time the device is placed close enough, and the BS030MS is in Bluetooth mode. If you wish to unpair a device, you can either use the Bluetooth menu on your device, or press and hold the **Play/Pause/Pair** button on the main unit **(12)** or the **Pair** button on the Remote **(24)**. This will unpair the current device and allow for a new device to be paired following the instructions listed above.

## **LISTENING TO A BLUETOOTH DEVICE**

After successfully pairing your Bluetooth device with the BS030MS, you can begin playing music simply by choosing the song you wish to hear on your device's menu system (refer to your device's user manual for instructions on playing music).

- To Play or Pause music press the **Play/Pause/Pair** button on the main unit **(12)** or the **Play/Pause** button on the Remote **(32)**.
- To Skip to the Next song press the **Next/Fast Forward** button **(14)** or **(29)**.
- To Skip to the Previous song press the **Previous/Rewind** button **(13)** or **(30)**.

NOTE: All Playback controls (Play, Pause, Skip +/-, etc.) can also be controlled directly



on your Bluetooth device.

## **PLAYING A CD**

1. Press the **Source** button **(10)** or **(23)** repeatedly until the BS030MS enters CD mode.
2. Lightly press down on the CD Door (8) to open the door.
3. Insert a CD with the label side facing Up.
4. Gently close the CD Door (8).
5. Press the **Play/Pause/Pair** button on the main unit **(12)** or the **Play/Pause** button on the Remote **(32)** to start CD playback from the first track.
6. Press the **Play/Pause/Pair** button on the main unit **(12)** or the **Play/Pause** button on the Remote **(32)** again to momentarily Pause playback. When you are ready to resume listening press the same button again.
7. To Stop playback, press the **Stop/Dimmer** button on the main unit **(15)** or the **Stop** button on the Remote **(31)**.

## **SKIPPING TRACKS**

- During CD playback, press the **Next/Fast Forward** button **(14)** or **(29)** to skip to the Next track.
- Press the **Previous / Rewind** button **(13)** or **(30)** to skip to the previous track.

## **SEARCHING TRACKS**

- During CD playback, press and hold the **Next/Fast Forward** button **(14)** or **(29)** to Fast Forward through the current track.
- Press and hold the **Previous/Rewind** button **(13)** or **(30)** to Rewind through the current track.

## **PROGRAMMED CD PLAYBACK**

1. Up to 20 tracks can be programmed to play in any desired sequence.
2. Press the **Program** button **(36)** until "PROG" flashes in the LCD display.
3. Press the **Next/Fast Forward** button **(14)** or **(29)** or the **Previous/Rewind** button **(13)** or **(30)** to select a desired track to be programmed.
4. Press the **Program** button **(36)** to program the track.
5. Repeat steps 3 & 4 to program additional tracks.
6. When all of the tracks have been programmed press the **Play/Pause/Pair** button on the main unit **(12)** or the **Play/Pause** button on the Remote **(32)** to start CD playback from the first track of your program.
7. To cancel program playback, press the **Stop/Dimmer** button on the main unit **(15)** or the **Stop** button on the Remote **(31)** twice to clear the program and return to normal track sequence playback.

## **REPEAT & RANDOM PLAY**

- To Repeat a Single Track
  - Press the **Repeat/Random** button **(35)** while the track you want to repeat is playing. “REP” will appear in the LCD Display (18).
  - To cancel repeat play, press the **Repeat/Random** button **(35)** three times until the “REP” disappears.
- To Repeat All Tracks
  - Press the **Repeat/Random** button **(35)** twice during playback. “REP ALL” will appear in the LCD Display (18).
  - To cancel repeat play, press the **Repeat/Random** button **(35)** twice times until the “REP” disappears.
- To Play Tracks in Random Order
  - Press the **Repeat/Random** button **(35)** three times during playback. “RAND” will appear in the LCD Display (18).
  - To cancel random play, press the **Repeat/Random** button **(35)** one time until the “RAND” disappears.

NOTE: Repeat & Random modes can also be cancelled by pressing the **Stop/Dimmer** button on the main unit **(15)** or the **Stop** button on the Remote **(31)**.

## **USING THE AUX INPUT**

1. Connect a 3.5mm stereo audio cable from the headphone jack or other audio output on your device into the AUX IN Jack (4). Press the **Source** button **(10)** or **(23)** repeatedly until “AUX” is shown on the LCD Display (18) .
2. Adjust the volume control on the connected device to an acceptable level.
3. Use the controls of the connected device to control audio playback (Play, Pause, etc.)

NOTE: when you are finished using the AUX function, it is recommended to unplug the 3.5mm stereo audio cable from the AUX IN Jack (4).

## **LISTENING TO AM/FM RADIO**

1. Press the **Source** button **(10)** or **(23)** repeatedly to select the radio function indicated by “RAD” on the LCD Display (18).
2. Press the **Band** button **(28)** on the remote to switch between AM & FM. You can also select either AM or FM modes by using the **Source** button **(10)** or **(23)**.
3. Turn the **Tuning Knob** **(19)** to select the desired radio station.

## **ANTENNAS**

The AM antenna is built-in to the cabinet of the BS030MS. To improve reception you must move the entire unit.

The FM antenna (3) is located on the rear of the unit. To improve reception move the position the antenna until reception improves. It may be necessary to move the entire unit to a new location (ex: near a window) for reception to improve.

## **SETTING THE CLOCK**

1. Turn the unit power OFF before setting the time.
2. To set the time, press the **Clock Set/Sleep** button (9) on the main unit or the **Time Display/Set** button on the Remote (26). The Hour number will begin blinking.
3. Use the **Next/Fast Forward** button (14) or (29) or the **Previous/Rewind** button (13) or (30) to find the correct hour and then press the **Clock Set/Sleep** button (9) on the main unit or the **Time Display/Set** button on the Remote (26) to enter. The Minutes number will begin blinking.
4. Use the **Next/Fast Forward** button (14) or (29) or the **Previous/Rewind** button (13) or (30) to find the correct minutes and then press the **Clock Set/Sleep** button (9) on the main unit or the **Time Display/Set** button on the Remote (26) to enter. The time is now set.

## **SETTING THE ALARM**

1. Turn the unit power OFF before setting the alarm.
2. Press the **Alarm / Volume-** button (16) on the main unit, or the **Alarm** button on the Remote (25). The Hour number will begin blinking.
3. Use the **Next/Fast Forward** button (14) or (29) or the **Previous/Rewind** button (13) or (30) to find the correct hour and then press the **Alarm / Volume-** button (16) on the main unit, or the **Alarm** button on the Remote (25) to enter. The Minutes number will begin blinking.
4. Use the **Next/Fast Forward** button (14) or (29) or the **Previous/Rewind** button (13) or (30) to find the correct minutes and then press the **Alarm / Volume-** button (16) on the main unit, or the **Alarm** button on the Remote (25) to enter.
5. Use the **Next/Fast Forward** button (14) or (29) or the **Previous/Rewind** button (13) or (30) to choose which type of alarm you would like to set from the list below.
  - a. "BU" is the Buzzer Alarm
  - b. "RAD" is the Radio Alarm. (Make sure the Radio is tuned to the station you wish to use for the alarm)
  - c. "CD" is the CD Alarm. (Make sure the CD you wish to use for the alarm is inserted. The alarm will begin with the first track)
6. Press the **Alarm / Volume-** button (16) on the main unit, or the **Alarm** button on the Remote (25) to enter and finalize the alarm setting. You will see a new icon (Bell – for Buzzer, Antenna – for Radio, or Music Note – for CD) in the LCD Display that indicates that an alarm is set.
7. To cancel an alarm, first turn the unit OFF entirely. Then press and hold the **Alarm / Volume-** button (16) on the main unit, or the **Alarm** button on the Remote (25) until the icon (Bell – for Buzzer, Antenna – for Radio, or Music Note – for CD) in the

LCD Display disappears.

## TROUBLESHOOTING GUIDE

SYMPTOM	CAUSE	SOLUTION
CD player will not turn on	·AC Cord not connected properly	·Plug AC Cord into power outlet
Disc will not play	·Disc inserted incorrectly ·Defective compact disc ·CD compartment not closed ·Moisture condensation on disc	·Reinsert disc with label side facing up ·Try another compact disc ·Close CD compartment ·Wipe disc with soft cloth
Erratic CD playback	·Dirty or defective disc	·Clean or replace disc
No sound	·Plug not inserted properly ·Volume control set to minimum ·Defective compact disc ·Aux Input cable connected	·Reinsert Speaker Plug into Speaker jack ·Increase the volume ·Try another compact disc ·Remove Aux cable from input jack.
Noise or Sound distorted on radio	·Station not tuned properly for AM or FM ·Unit is not positioned correctly	·Retune AM or FM broadcast station ·Rotate unit until best reception is obtained



## **LIMITED 90-DAY WARRANTY**

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized BLUESTREAM dealer.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the ninety-day warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-719-8324, or visit [www.sibrandssupport.com](http://www.sibrandssupport.com).

This warranty applies only under conditions of normal use. Our products are not intended for outdoor use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as smartphones, tablets, memory storage and/or other devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall BLUESTREAM be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

## **UNDER NO CIRCUMSTANCES WILL BLUESTREAM BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

Schoenfeld International Inc. and BLUESTREAM  
5001 American Boulevard West  
Suite 275  
Bloomington, Minnesota 55437

©Schoenfeld International Inc., 2018  
BS030MS Ver. 1.0 July 2018