


BLUESTREAM

INSTRUCTION MANUAL BLUETOOTH HEADPHONES MODEL: BS400HPBT / BS401HPBT

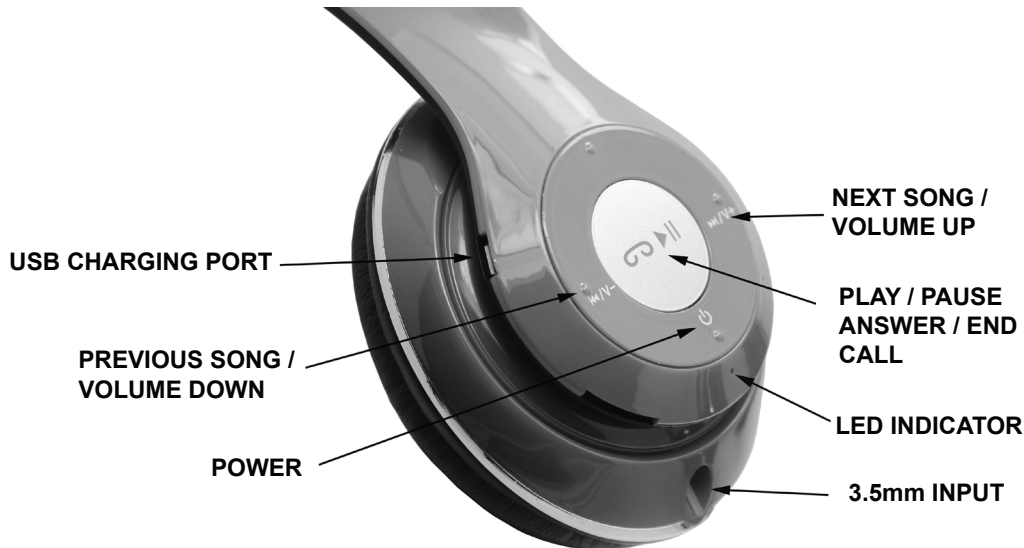

CHARGING

To charge the headphones simply insert the micro USB end of the supplied cable into the USB CHARGING PORT and the standard USB end into a USB port on a USB charger or computer. The LED INDICATOR will turn Red when the headphones are charging. The LED INDICATOR will turn Off when the headphones are fully charged.

POWER

To turn the headphones ON press and hold the POWER button until the voice prompt announces "Power On". The LED INDICATOR will begin flashing Blue.

To turn the headphones OFF press and hold the POWER button until the voice prompt announces "Power Off". The LED INDICATOR will turn Off.

PAIRING TO YOUR BLUETOOTH DEVICE

1. Turn your Bluetooth device OFF entirely and then turn it back ON to refresh the device's Bluetooth memory.
2. Find the Bluetooth menu in your device and make sure the Bluetooth function is turned ON (refer to your device's user manual for instructions on finding the Bluetooth menu).
3. Turn the Headphones ON and unplug the headphone cable from the 3.5mm INPUT if necessary. When the Headphones are turned ON the voice prompt will announce "Bluetooth Mode".

4. On your device, perform a Bluetooth “device discovery” to add the BS400HPBT/BS401HPBT as a new device.
5. When the headphones are discovered your device will display “**BS400HPBT/BS401HPBT**” in the Bluetooth menu.
6. After selecting “**BS400HPBT/BS401HPBT**” from the Bluetooth menu the LED indicator will slowly flash Blue, and the voice prompt will announce that Bluetooth Pairing was successful.
7. If supported by your device’s menu, set the BS400HPBT/BS401HPBT as “set as authorized” or “add to trusted devices”

PLAYING MUSIC

After successfully pairing the headphones with your Bluetooth device, you can begin playing music simply by choosing the song you wish to hear on your device’s menu system (refer to your device’s user manual for instructions on playing music).

PLAYBACK & VOLUME CONTROLS

All playback controls (Play, Pause, Next/Previous song, etc.) can be controlled either directly on your device, or on the buttons on the headphones.

NOTE: the buttons on the headphones will only operate when connected to your device via Bluetooth mode. The buttons will not function when the headphones are connected with the 3.5mm headphone cable

- **PLAY** – press the PLAY / PAUSE button once to begin playing music.
- **PAUSE** – press the PLAY / PAUSE button again to pause playback. Press PLAY / PAUSE again to resume.
- **GO TO THE NEXT SONG/TRACK** – press the NEXT SONG / VOLUME UP button
- **GO TO THE PREVIOUS SONG/TRACK** – press the PREVIOUS SONG / VOLUME DOWN button
- **VOLUME UP** – press and hold the NEXT SONG / VOLUME UP button
- **VOLUME DOWN** – press and hold the PREVIOUS SONG / VOLUME DOWN button
 - **NOTE:** You can also adjust the using the volume controls on your connected device.

ANSWERING & ENDING PHONE CALLS

When connected to a Bluetooth enabled smartphone the BS400HPBT/BS401HPBT can be used as a mobile headset.

To Answer an incoming call – Press the PLAY / PAUSE button

To End a call – Press the PLAY / PAUSE button again

NOTE: the buttons on the headphones will only operate when connected to your device via Bluetooth mode. The buttons will not function when the headphones are connected with the 3.5mm headphone cable

USING A HEADPHONE CABLE

If your device does not have Bluetooth, or the battery on the headphones is low/dead, you can still listen to the headphones by connecting the supplied 3.5mm headphone cable to the 3.5mm INPUT on the headphones and the headphone jack on your device.

NOTE: to save battery life it is recommended to turn the headphones OFF when using the 3.5mm headphone cable.

NOTE: the buttons on the headphones will only operate when connected to your device via Bluetooth mode. The buttons will not function when the headphones are connected with the 3.5mm headphone cable



LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized BLUESTREAM dealer.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the ninety-day warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-719-8324.

This warranty applies only under conditions of normal use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall BLUESTREAM be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL BLUESTREAM BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.