



Bluetooth® Portable Mini System

Model: BS7330





**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE
OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR
FUTURE REFERENCE.**

**For technical assistance or troubleshooting please
call 1-855-719-8324 or visit www.sibrandssupport.com**

WARNINGS

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To reduce the risk of electric shock, do not open the cabinet. No user serviceable parts are inside. Refer servicing to qualified personnel.
- This appliance uses a Laser System. To prevent direct exposure to the laser beam do not open the cabinet. Visible and invisible laser radiation is present when the cabinet is open. Avoid direct exposure and do not stare into the beam.
- Batteries should not be exposed to excessive heat such as direct sunlight, fire, or other heat sources.
- Caution: Do not expose this appliance to dripping or splashing liquids. Do not put objects filled with liquid, such as vases on or near the appliance.
- Caution: To turn this appliance off completely, the POWER cord must be unplugged from the wall outlet. The power cord must be easily accessible at all times.

 <p>THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE FRONT OR REAR COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.</p>
--	--	---

FCC WARNINGS

WARNING: Changes or modifications to this unit not expressly approved in this manual could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and/or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the POWER cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as POWER-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



OVERVIEW OF THE PLAYER

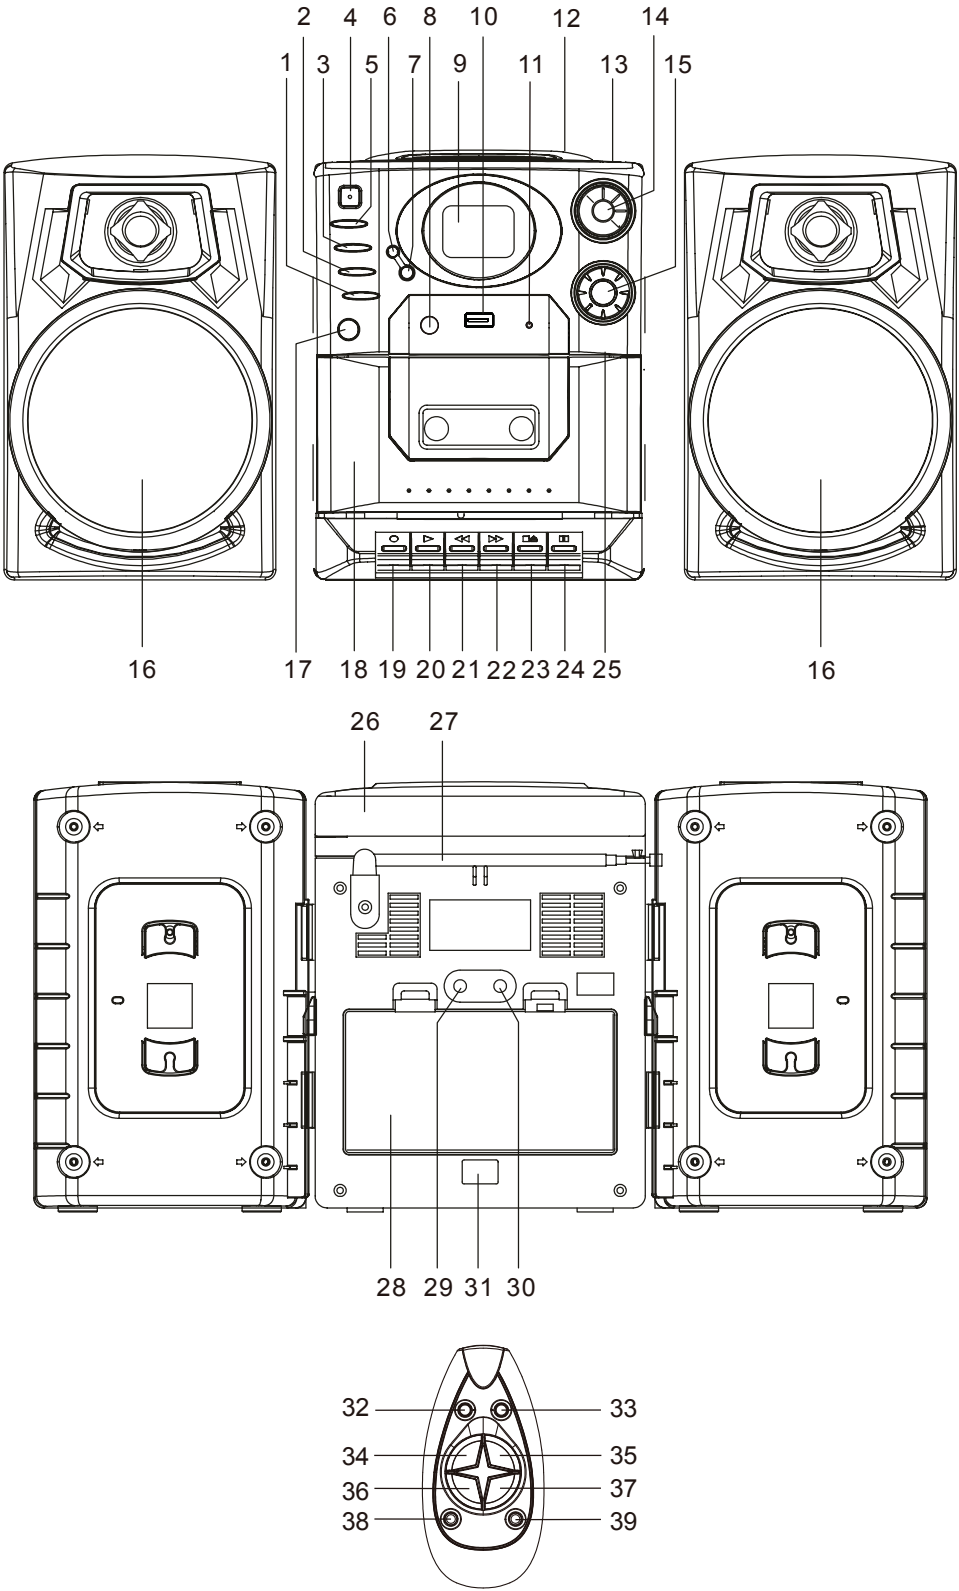

LOCATION OF CONTROLS (MAIN UNIT)

- | | |
|------------------------------------|----------------------------------|
| 1. NEXT / F.FWD Button | 17. FUNCTION Button |
| 2. PREVIOUS / F.REV Button | 18. Cassette Door |
| 3. STOP / BAND Button | 19. CASSETTE RECORD Button |
| 4. STANDBY Button | 20. CASSETTE PLAY Button |
| 5. PLAY / PAUSE / FM STEREO Button | 21. CASSETTE REWIND Button |
| 6. +10 Button | 22. CASSETTE FAST FORWARD Button |
| 7. PLAY MODE / PROGRAM Button | 23. CASSETTE STOP / EJECT Button |
| 8. Remote Sensor | 24. CASSETTE PAUSE Button |
| 9. LCD Display | 25. Built-in Microphone |
| 10. USB PORT | 26. Handle |
| 11. POWER / BT Indicator | 27. Telescoping Antenna |
| 12. CD Door | 28. Battery Compartment |
| 13. CD Door OPEN / CLOSE | 29. RIGHT Speaker Jack |
| 14. FOLDER / MEMORY Knob | 30. LEFT Speaker Jack |
| 15. VOLUME Knob | 31. AC Socket |
| 16. Speakers | |

LOCATION OF CONTROLS (REMOTE CONTROL)

32. STANDBY Button
33. FUNCTION Button
34. PLAY / PAUSE / FM STEREO Button
35. STOP / BAND Button
36. PREVIOUS / F.REV Button
37. NEXT / F.FWD Button
38. VOLUME DOWN Button
39. VOLUME UP Button

SPEAKER CONNECTIONS

To Attach the speakers to the main unit, align the grooves of the main unit with the grooves on the side of one of the speakers. Slide the speaker downward until the latch on the speaker firmly attaches to the main unit.

- To Detach the speakers simply press and hold the latch on the side of each speaker and lift the speaker upwards.
- For the RIGHT speaker insert the attached 3.5mm plug into the **RIGHT SPEAKER JACK (29)**
- For the LEFT speaker insert the attached 3.5mm plug into the **LEFT SPEAKER JACK (30)**

POWER

AC POWER (Wall Outlet)

1. Plug the supplied AC Power Cord into the **AC Socket (31)** on the rear of the unit.
2. Insert the wall plug of the AC Power Cord into an electrical wall outlet.
3. To turn the unit ON press the **STANDBY** button (4).

BATTERY POWER

1. Open the **Battery Compartment (28)** by gently sliding the compartment door in the direction indicated on the bottom of the unit.
2. Insert 8 'D' size batteries (not included) into the **Battery Compartment (28)**. Be sure to place the batteries in the same polarity (+ or -) direction indicated on the engraved diagram inside the **Battery Compartment (28)**.
3. Replace the door to the **Battery Compartment (28)** by carefully sliding it back into place.
4. To turn the unit ON press the **STANDBY** button (4).

VOLUME

The volume is adjusted by turning the **VOLUME Knob (15)** on the left side of the unit.

- To Increase the Volume: Rotate the **VOLUME Knob (15)** clockwise to the right.
- To Decrease the Volume: Rotate the **VOLUME Knob (15)** counterclockwise to the left.

PAIRING A BLUETOOTH DEVICE

Before using a Bluetooth device you must first Pair the device with the **BS7330**

1. Turn your Bluetooth device **OFF** entirely and then turn it back **ON** to refresh the device's Bluetooth Memory.
2. Find the Bluetooth menu on your device and make sure the Bluetooth function is turned **ON**. (Refer to your device's user manual for instructions on finding the Bluetooth menu)
3. Press the **FUNCTION** button (17) repeatedly until "**BT**" appears on the **LCD Display (9)**.
 - The **POWER / BT Indicator (11)** will begin flashing Blue to indicate the **BS7330** is ready to pair with your device
4. On your device perform a Bluetooth "device discovery" to add the **BS7330** as a new device.
5. When the **BS7330** is discovered your device will display "**BS7330**" in the Bluetooth menu.
6. If your device asks for a password, enter "0000" and the device will now pair with the **BS7330** and be ready to use.
 - **NOTE:** the **BS7330** will make a chime when your device has successfully paired
7. If supported by your device, set the **BS7330** as "authorized" in the Bluetooth menu.

LISTENING TO A BLUETOOTH DEVICE

After successfully pairing your Bluetooth device with the **BS7330**, you can begin playing music simply by choosing the song you wish to hear on your device's menu system (refer to your device's user manual for instruction on playing music).

To Play or Pause music press the **PLAY / PAUSE / FM STEREO** button (5)

To Skip to the Next song press the **NEXT / F.FWD** button (1)

To Skip to the Previous song press the **PREV / F.REV** button (2)

NOTE: All Playback controls (Play, Pause, Skip + / -, etc.) can also be controlled directly on your Bluetooth device.

PLAYING A CD

1. Open the **CD Door (12)** by gently pressing on the **CD DOOR OPEN / CLOSE (13)**.
2. Insert a CD with the label side facing UP.
3. Close the **CD Door (12)** by gently pressing down on the door with your finger.
4. Press the **FUNCTION** button **(17)** until **CD** appears on the **LCD Display (9)**. The player will automatically show the total number of tracks (songs) on the CD on the **LCD Display (9)**.
5. Press the **PLAY / PAUSE / FM STEREO** button **(5)** to start playing the CD. Press the **PLAY / PAUSE / FM STEREO** button **(5)** again to momentarily pause playback. To resume playback press the **PLAY / PAUSE / FM STEREO** button **(5)** again.
6. To Stop playing the CD press the **STOP / BAND** button **(3)**.

SKIPPING TRACKS (SONGS)

- To skip to the next track press the **NEXT / F.FWD** button **(1)**
- To move to the beginning of the current track press the **PREVIOUS / F.REV** button **(2)**
- To skip to a previous track press the **PREVIOUS / F.REV** button **(2)** multiple times in a row until the desired track is shown on the **LCD Display (9)**.

SEARCHING TRACKS

- While playing a CD press and hold the **NEXT / F.FWD** button **(1)** to scan Fast Forward through the current track. Release the button when you reach the desired portion of the track you want to hear.
- Press and hold the **PREVIOUS / F.REV** button **(2)** to Fast Reverse through the current track. Release the button when you reach the desired portion of the track you want to hear.

PROGRAMMED PLAYBACK

Up to 20 tracks of a CD can be programmed to play in any desired order.

1. To set a Program order, first make sure the CD is not currently playing by pressing the **STOP / BAND** button **(3)**
2. Press the **PLAY MODE / PROGRAM** button **(7)**. The **LCD Display (9)** will show "01"
3. Press the **NEXT / F.FWD (1)** or **PREVIOUS / F.REV (2)** button to until the number of the first track you want to program is blinking in the **LCD Display (9)**.
4. Press the **PLAY MODE / PROGRAM** button **(7)** to program the track. The **LCD Display (9)** will automatically show "02".
5. Repeat steps 3 & 4 to program up to 20 different tracks.
6. When you have finished selecting tracks, press the **PLAY / PAUSE / FM STEREO** button **(5)** to start playing the CD in the order you have programmed. The **LCD Display (9)** will show "**PROG**" during Programmed Playback.
7. To stop Programmed Playback press the **STOP / BAND** button **(3)** twice. The "**PROG**" indicator will automatically turn OFF.

REPEAT PLAYBACK

- To Repeat a Single Track press the **PLAY MODE / PROGRAM** button **(7)** once. The word "**REPEAT**" will automatically start blinking in the **LCD Display (9)**.
- To Repeat the Entire CD press the **PLAY MODE / PROGRAM** button **(7)** again until the word "**REPEAT**" is ON (not blinking) in the **LCD Display (9)**.
- To cancel Repeat Playback press the **PLAY MODE / PROGRAM** button **(7)** continuously until the "**REPEAT**" is no longer shown in the **LCD Display (9)**.

LISTEN TO AM/FM RADIO

1. Press the **FUNCTION** button (17) to the **RADIO** setting. The current radio station will be shown on the **LCD Display (9)**.
2. Press the **STOP / BAND** button (3) to your desired setting (AM or FM).
3. Use the **NEXT / F.FWD (1)** or **PREVIOUS / F.REV (2)** button to select the desired Radio station.

- **TIPS FOR BEST RECEPTION**

- The AM antenna is built-in to the cabinet of this player. To improve reception of radio stations simply move the entire player to another location until reception improves.
- The **Telescoping Antenna (27)** can be adjusted for FM reception. When listening to a FM station fully extend the antenna and slowly rotate it until reception improves.

SETTING RADIO PRESETS

This unit can store 20-FM & 20-AM radio stations in the Preset memory. To store preset stations follow the steps below.

1. Use the **NEXT / F.FWD (1)** or **PREVIOUS / F.REV (2)** button to select the desired Radio station to be programmed.
2. Press the **PLAY MODE / PROGRAM** button (7) "P01" will begin flashing in the **LCD Display (8)**
3. Use the **FOLDER / MEMORY Knob (14)** to set the desired Preset number (1-20).
4. Press the **PLAY MODE / PROGRAM** button (7) to enter the radio station into the Preset memory.
5. Repeat steps 1-4 to enter additional radio stations into the Preset memory.

To tune directly to your Radio Presets simply use the **FOLDER / MEMORY knob (14)** to cycle through the Presets stored in the memory.

USB PLAYBACK

This unit can play MP3 files from a USB flash drive.

1. Insert a USB flash drive into the **USB Port (10)**
2. Press the **FUNCTION** button (17) until the **LCD Display (9)** shows "**USB**". The unit will automatically start reading the files stored on the USB flash drive. When reading has completed the total number of songs on the USB flash drive will be shown on the **LCD Display (9)**.
3. Press the **PLAY / PAUSE / FM STEREO** button (5) to start playing your MP3 files.
 - **NOTE:** if you have MP3 files stored in multiple folders on your flash drive you can use the **FOLDER / MEMORY Knob (14)** to cycle through the individual folders. Each time you adjust the **FOLDER / MEMORY Knob (14)** the unit will skip to the next folder on the flash drive.

CASSETTE PLAYBACK

1. Press the **FUNCTION** button (17) until the **LCD Display (9)** shows the "**TAPE**" setting.
2. Press the **CASSETTE STOP / EJECT** button (23) to open the **Cassette Door (18)**.
3. Insert a cassette so the tape side of the cassette is inserted into the bottom of the **Cassette Door (18)**.
4. Gently push the **Cassette Door (18)** inward until it fully closes.
5. Press the **CASSETTE PLAY** Button (20) to begin playback.
 - a. To REWIND the cassette press the **CASSETTE REWIND** button (21)
 - b. To FAST FORWARD the cassette press the **CASSETTE FAST FORWARD** button (22)

6. Press the **CASSETTE STOP / EJECT** button (23) to stop playback. Press the **CASSETTE STOP / EJECT** button (23) again to eject the cassette.

CASSETTE RECORDING

RECORDING FROM A CD

1. Insert a blank cassette tape into the **Cassette Door (18)** with the full tape reel on the left-hand side of the cassette.
2. Begin playing the CD by following the steps described in this manual
3. When the music arrives at the point you want to begin recording press the **CASSETTE RECORD (19)** and **CASSETTE PLAY (20)** buttons at the same time to begin recording.
4. When the music arrives at the point you want to stop recording simply press the **CASSETTE STOP / EJECT** button (23) and recording will automatically stop.

RECORDING FROM RADIO

1. Insert a blank cassette tape into the **Cassette Door (18)** with the full tape reel on the left-hand side of the cassette.
2. Tune to the radio station you wish to record by following the steps described in this manual
3. When the radio station arrives at the point you want to begin recording press the **CASSETTE RECORD (19)** and **CASSETTE PLAY (20)** buttons at the same time to begin recording.
4. When the radio station arrives at the point you want to stop recording simply press the **CASSETTE STOP / EJECT** button (23) and recording will automatically stop.

RECORDING FROM USB

1. Insert a blank cassette tape into the **Cassette Door (18)** with the full tape reel on the left-hand side of the cassette.
2. Begin playing the files on your USB Flash Drive by following the steps described in this manual
3. When the music arrives at the point you want to begin recording press the **CASSETTE RECORD (19)** and **CASSETTE PLAY (20)** buttons at the same time to begin recording.
4. When the music arrives at the point you want to stop recording simply press the **CASSETTE STOP / EJECT** button (23) and recording will automatically stop.

SETTING THE CLOCK

1. Turn the power to the unit OFF before setting the clock.
2. Press and hold the **PLAY MODE / PROGRAM** button (7) to enter clock setup mode.
3. The LCD Display (9) will begin flashing either "24H" for using a 24-hour clock or "12H" for using a 12-hour clock setting. Use the **NEXT / F.FWD (1)** or **PREVIOUS / R.REV (2)** buttons to select "24H" or "12H" then press the **PLAY MODE / PROGRAM** button (7) to enter your choice and automatically move on to setting the HOUR.
4. Use the **NEXT / F.FWD (1)** or **PREVIOUS / R.REV (2)** buttons to select the correct HOUR setting. Press the **PLAY MODE / PROGRAM** button (7) to enter your choice and automatically move on to setting the MINUTES.
5. Use the **NEXT / F.FWD (1)** or **PREVIOUS / R.REV (2)** buttons to select the correct MINUTES setting. Press the **PLAY MODE / PROGRAM** button (7) to enter your choice.

Once the MINUTES setting has been entered the unit will automatically exit clock setup mode and the current time will be shown on the **LCD Display (9)**.

TROUBLESHOOTING

Symptom	Possible Cause	Solution
Noise or sound distorted on AM or FM broadcast	<ul style="list-style-type: none">- Station not tuned properly for AM or FM.- FM: Player is not positioned correctly- AM: Player is not positioned correctly	<ul style="list-style-type: none">- Retune the AM or FM broadcast station.- FM: Reposition the unit until the best reception is obtained.- AM: Reposition the unit until the best reception is obtained.
AM or FM no sound	<ul style="list-style-type: none">- Player not in "RADIO" mode.- Volume set at minimum	<ul style="list-style-type: none">- Change the Function to the "RADIO" position.- Increase Volume.
CD player will not play	<ul style="list-style-type: none">- Unit not in CD mode.- CD is not loaded properly.- If the CD is CD-R, the media used may not be compatible with the player.	<ul style="list-style-type: none">- Select CD function mode.- Load CD with label side up.- Burn a better quality blank CD and retest.
CD skips while playing	<ul style="list-style-type: none">- Disc is dirty or scratched.	<ul style="list-style-type: none">- Wipe CD with clean cloth or use another disc.
Intermittent sound from CD player	<ul style="list-style-type: none">- Dirty or defective disc- Player is subject to excessive shock or vibration	<ul style="list-style-type: none">- Clean or replace the defective disc.- Relocate the player away from shock or vibration.
Sound appears distorted at high volume setting	<ul style="list-style-type: none">- Volume control is set to maximum.	<ul style="list-style-type: none">- Adjust Volume Control to a lower comfortable level.



LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized BLUESTREAM dealer.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the ninety-day warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-719-8324, or visit www.sibrandssupport.com

This warranty applies only under conditions of normal use. Our products are not intended for outdoor use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as CD discs, Cassette Tapes, and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall BLUESTREAM be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL BLUESTREAM BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

THIS PAGE IS INTENTIONALLY LEFT BLANK

Schoenfeld International Inc. and BLUESTREAM
5001 American Boulevard West
Suite 275
Bloomington, Minnesota 55437

©Schoenfeld International Inc., 2015
BS7330 Ver. 1.0 September 2015