
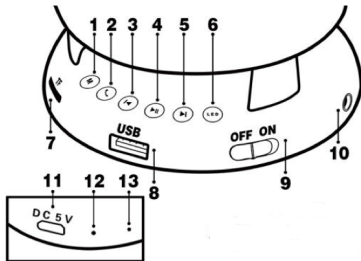


BLUESTREAM

Instruction Manual

Model : BSPLED

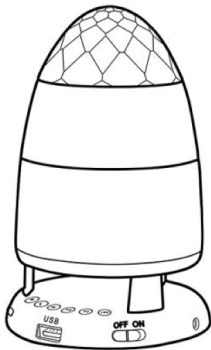

- | | |
|------------------------------|---------------------|
| 1 Mode Button | 8 USB Port |
| 2 Phone Button | 9 On/Off Button |
| 3 Volume - / Previous Button | 10 Line-in Input |
| 4 Play / Pause Button | 11 5V Charging Port |
| 5 Volume + / Next Button | 12 Indicator Light |
| 6 LED Light On/Off | 13 Microphone |
| 7 microSD Card Slot | |

LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized BLUESTREAM dealer.

Should you be missing any of the included accessories, please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store.

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the ninety-day warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-719-8324 or visit www.sibrandssupport.com

This warranty applies only under conditions of normal use. Our products are not intended for outdoor use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as USB flashdrives or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall BLUESTREAM be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL BLUESTREAM BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold 'As Is'.

For technical assistance or troubleshooting please
call 1-855-719-8324 or visit www.sibrandssupport.com

Using Bluetooth: Pairing Your Device

1. Move the On/Off switch to the ON position.
2. You will hear a short chime and the standby indicator light will turn blue.
3. Prior to using the speaker for the first time, you must pair it with a Bluetooth-enabled device, the device will search for accessible Bluetooth devices.
4. Select "BSPLED" from the device list on your phone/tablet.
5. When pairing is completed, you will hear a short chime. Now the speaker is ready for use and in standby mode, the blue light will stop flashing.
6. You should now be able to use the wireless speaker to listen to music. Please place your Bluetooth device within 30ft. of the speaker.

Operating the Speaker

Play / Pause the music

Short press the ►|| button to pause and re-play music on your Bluetooth device. You can also use the playback controls found directly on your Bluetooth device to control music playback.

LED party light

1. Press the LED button to turn the party light ON.
2. Press again to turn the party light OFF.
3. The light will flash with the music during playback.

Changing playing mode

Press **M** to select between the different modes: Bluetooth, USB, Line-in, microSD.

Reduce Volume / Previous Song

During music playback, or while on a phone call, press and hold the reduce volume ◀ button to reduce volume level or adjust on your device.

To go to the previous song, Short press the ◀ button.

Increase Volume / Next Song

During music playback or while on a phone call, press and hold the increase volume ▶ button to increase volume level or adjust on your device.

To go to the next song, Short press the ▶ button.

Answering a Call

To answer a call, short press the ☎ button to accept the call. Or answer the call via your smartphone in the normal way.

NOTE: Please try to keep 30-50cm distance from speaker when answering a call.

Ending a Call

A short press of the ☎ button will end your call. Or end the call directly on your smartphone in the normal way.

Reject a call

To reject an incoming call press the ☎ button twice when the phone is ringing.

Last Number Re-Dialing:

Under standby mode, press the ☎ button twice for last number redial.

Connect the speaker with 3.5mm audio cable

If you wish to use a device that does not have Bluetooth, simply connect the supplied 3.5mm Aux cable to the line-out or headphone output of the device.

Press the **M** button to switch to Line-in mode.

Note: all playback controls (Play, Pause, etc.) will be controlled directly on your connected device.

Charging the speaker

Connect the micro USB plug to the 5V charging port and the USB plug to a USB charging device (not included).

The Indicator Light will blink Red while the unit is charging.

The Indicator Light will stop blinking when unit is fully charged.

Note: an alert chime will sound when the battery level gets low.

Music from microSD card or USB Flash Drive

Supported formats: MP3, WAV, WMA