


INSTRUCTION MANUAL Model: BSSB101/2/3




FOR CUSTOMER SUPPORT CALL: 1-855-994-2825 OR VISIT WWW.SIBRANDSSUPPORT.COM

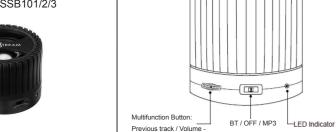

Play / Pause

Next track / Volume +

Location of Controls

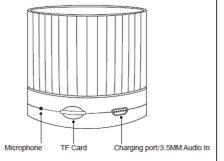

Location of Controls

Insert the supplied Charging/AUX cable into the Charging Port and a USB port on a computer or wall charger.

The LED Indicator is RED while charging

The LED Indicator will turn OFF when fully charged

To turn the speaker ON you need to move the BT/OFF/MP3 switch.

· Move to the LEFT for Bluetooth mode

Move to the RIGHT for SD/AUX/FM mode

To turn the speaker OFF move the BT/OFF/MP3 switch to the MIDDLE

Volume

Charging

<u>Power</u>

- To Increase Rotate & HOLD the Multifunction button to the RIGHT
- To Decrease Rotate & HOLD the Multifunction button to the LEFT
- The speaker will Beep when the volume can not be Increased/Decreased further

Skipping Tracks - For Bluetooth, MicroSD Modes

• To Skip FORWARD / NEXT - Rotate & Release the Multifunction button to the RIGHT

• To Skip BACKWARD / PREVIOUS - Rotate & Release th Multifunction button to the LEFT

Play / Pause Track & Answer / End Call

- To PLAY / PAUSE a track, simply Press & Release the Multifunction button.
- To Answer an incoming call, simply Press & Release the Multifunction button.
- To End the current call, simply Press & Release the Multifunction button again.
- · NOTE: Speaker must be Paired to your Bluetooth device for PLAY/PAUSE & ANSWER/END call functions.

SD / AUX / FM Mode Selection

To switch between SD/AUX/FM modes Press & Hold the Multifunction button for approximately 3 seconds.

NOTE: if a microSD card is inserted in the TF Card Slot the default mode will be microSD. If no microSD card is inserted the default mode will be FM.

MicroSD Card Playback

- 1- Insert a microSD card into the TF Card slot.
 - 2- Move the BT/OFF/MP3 switch to the RIGHT for SD/AUX/FM 3- The speaker will begin playing the first track on the card.
 - Remove the microSD card to return to normal operation

FM Radio Playback

- 1- Remove any microSD card from the TF Card slot.
- Insert the supplied Charging/AUX cable into the Charging Port/AUX IN port. The cable acts as a FM antenna.
- 3- Move the BT/OFF/MP3 switch to the RIGHT for SD/AUX/FM. The Speaker will enter FM Mode.
- 4- Press & Release the Multifunction button to begin an automatic search for available FM radio stations. Press & Release the Multifunction button again to stop the
- To Tune FORWARD / NEXT Rotate & Release the Multifunction button to the RIGHT
- To Skip BACKWARD / PREVIOUS Rotate & Release the Multifunction button to the LEFT

AUX Playback

- 1- Move the BT/OFF/MP3 switch to the RIGHT for SD/AUX/FM
- 2- Press & Hold the Multifunction Button for approximately 3 seconds to switch to AUX mode.
- 3- Insert the supplied Charging/AUX cable into the Charging Port/AUX IN port, and into your audio device.
- Use the buttons on your audio device to control playback.

Bluetooth Pairing

- 1- Move the BT/OFF/SD switch to the LEFT for BT
- 2- Open the Bluetooth Menu on your device and select BSSB101/2/3 from the list of available devices Refer to your device's manual for finding the Bluetooth Menu
 - 3- If prompted to enter a password, enter "0000"
 - 4- When the pairing is completed the LED indicator will flash BLUE

Low Power

When the battery power is low, the LED indicator will flash RED. It is recommended to charge the speaker at this time.

LIMITED 90-DAY WARRANTY

provide replacements.

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized BLUESTREAM dealer.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

to help us accurately identify the missing parts and promptly

To obtain warranty service or replacement within the ninetyday warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-719-8324

This warranty applies only under conditions of normal use Our products are not intended for outdoor use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

or visit www.sibrandssupport.com.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as microSD cards, and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall BLUESTREAM be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL BLUESTREAM BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured, refurbished. or repaired units, or any products sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.