



DVDA2015

DVD PLAYER



INSTRUCTION MANUAL



**For technical assistance or troubleshooting please
call 1-855-994-2825 or visit www.sibrandssupport.com**

Table of Contents

	Page
WARNINGS	1
SAFETY INSTRUCTIONS	2
FRONT & REAR PANEL DETAILS	3
REMOTE CONTROL	4
REMOTE CONTROL INSTRUCTIONS.....	5
DVD PLAYER FUNCTIONS.....	6-8
SYSTEM SETUP.....	9-11
PARENTAL CONTROLS.....	11
TROUBLESHOOTING	12
WARRANTY.....	13

WARNINGS

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To reduce the risk of electric shock, do not open the cabinet. No user serviceable parts are inside. Refer servicing to qualified personnel.
- This appliance uses a Laser System. To prevent direct exposure to the laser beam do not open the cabinet. Visible and invisible laser radiation is present when the cabinet is open. Avoid direct exposure and do not stare into the beam.
- Batteries should not be exposed to excessive heat such as direct sunlight, fire, or other heat sources.
- Caution: Do not expose this appliance to dripping or splashing liquids. Do not put objects filled with liquid, such as vases on or near the appliance.
- Caution: To turn this appliance off completely, the POWER cord must be unplugged from the wall outlet. The power cord must be easily accessible at all times.

 <p>THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.</p>	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE FRONT OR REAR COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.</p>
--	--	---

FCC WARNINGS

WARNING: Changes or modifications to this unit not expressly approved in this manual could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and/or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the POWER cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as POWER-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




FRONT & REAR PANEL DETAILS

FRONT PANEL

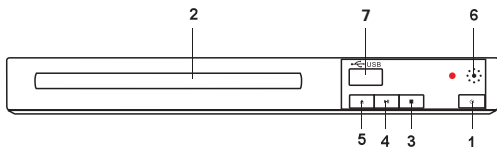



- 1. POWER
- 2. DISC TRAY
- 3. STOP
- 4. PLAY / PAUSE
- 5. OPEN / CLOSE
- 6. IR RECEIVING LENS
- 7. USB PORT

 REAR PANEL

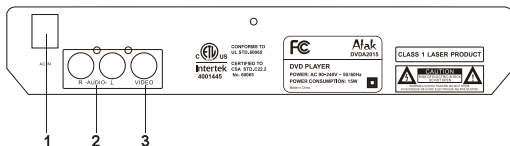


- 1. AC IN
- 2. AUDIO LEFT / RIGHT OUTPUTS
- 3. VIDEO OUTPUT

  REAR PANEL CONNECTIONS

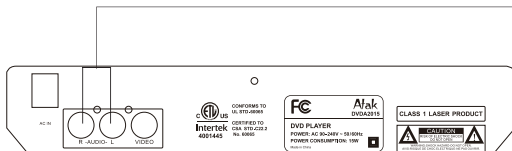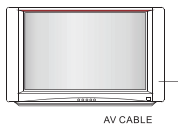

REMOTE CONTROL

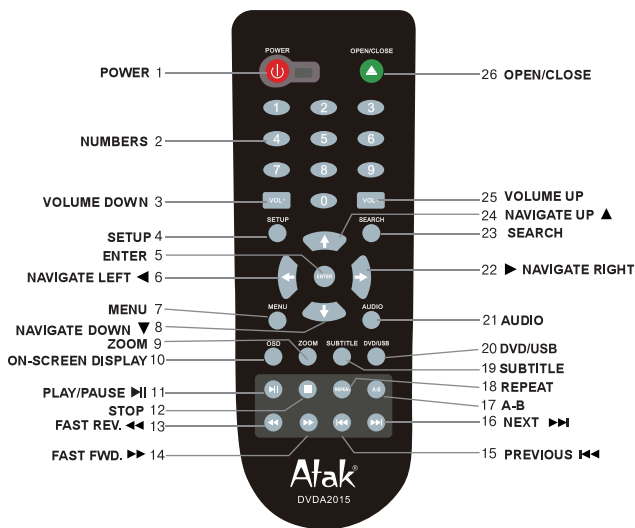 

USE OF THE REMOTE CONTROL

BATTERIES

- Remove the cover on the rear of the Remote Control and insert two AAA Batteries
- Make sure the +(positive) and -(negative) ends of the batteries are facing the correct direction as shown inside the remote control. Close the rear battery cover
- When using the Remote Control, point the Remote directly at the **IR Receiving Lens (6)** on the front panel of the DVD player. Make sure there are no objects obstructing the path from the Remote Control and the **IR Receiving Lens (6)** on the front panel.
- The Remote Control will only operate from a maximum distance of 5-30 Feet from the Player. If the Remote stops functioning from your normal distance, replace both batteries in the Remote.
- The Battery Compartment should be checked on a regular schedule to confirm there is no battery leakage which can damage the Remote. Replace any leaking batteries immediately

REMOTE CONTROL OPERATION

- **POWER:** Turn the DVD Player ON or OFF (Standby)
- **OPEN/CLOSE:** Open or Close the **Disc Tray (2)**
- **NUMBERS (0-9):** Used for entering direct numbers of DVD Chapters and CD song tracks
- **VOL- / VOL+:** Increase or decrease the audio volume
- **SETUP:** Press to display the Setup Menu to select different functions and operating preferences
- **ENTER:** Press to confirm your selection
- **NAVIGATION ARROWS:** Press to move back to the previous menu selection or to navigate Up, Down, Left, or Right on the on-screen display
- **MENU:** Press to display the Main Menu for playing a DVD
- **OSD (On-Screen Display):** Press **OSD** repeatedly to cycle through the various types of disc information. Each Press; (1) Current Title/Chapter, (2) Audio & Subtitle, (3) Chapter Time Elapsed & Remaining, (4) Title Time Elapsed & Remaining, (5) OFF
- **ZOOM:** Press **ZOOM** repeatedly (for ZOOM enabled DVDs only) to select from the following ZOOM modes; (1) 2x ZOOM, (2) 3x ZOOM, (3) 4x ZOOM, (4) 1/2x ZOOM, (5) 1/3x ZOOM, (6) 1/4x ZOOM, (7) ZOOM OFF
- **PLAY / PAUSE:** Press to start or Pause DVD/CD playback
- **STOP:** The **STOP** button has two functions;
 - Press **STOP** 1x to stop DVD/CD playback. Press **PLAY / PAUSE** to resume playback from the location where playback was stopped
 - Pressing **STOP** 2x will stop DVD/CD playback and clear the stop point location. Press **PLAY / PAUSE** to start playback from the beginning of the disc.
- **PLAY / PAUSE:** Press to start or pause DVD/CD playback
- **NEXT / PREVIOUS:** Press to skip to the Next or Previous Chapter or Track on the disc
- **FAST FWD / FAST REV:** Press during playback to fast forward or reverse to a specific part of the disc. Press **PLAY / PAUSE** to resume normal speed playback.

Play a DVD

Turn on the TV set and select A/V mode.

1. Press the **POWER** button on the front panel. If there is a DVD in the tray, "DISC LOADING" will appear.

NOTE: If there is no disc in the player, "NO DISC" will appear.

2. Press the **OPEN/CLOSE** button and the disc tray will open.

3. Place a DVD on the disc tray.

NOTE: Make sure the desired screen format (i.e. Widescreen) is facedown.

4. Press **OPEN/CLOSE** to close the tray. The disc type (DVD, MP3, JPEG) will appear in the upper left hand corner.

NOTE: It is possible to damage a disc if not placed correctly on the guides in the disc tray. This can also cause the DVD player to malfunction. Only use a 5" DVD or CD with this DVD player. Never move the DVD player during playback. To avoid damaging the DVD player, only use the **OPEN/CLOSE** button on the DVD player or Remote Control to open and close the disc tray.

5. Press the **PREV** or **NEXT** buttons to play the previous or next track.

6. Press the **FWD** or **REV** buttons on the remote to fast forward or reverse.

NOTE: The speed will change each time the button is pressed. Press the **PLAY/PAUSE** button to resume normal playback.

Stop Playback

1. Press the **STOP** button to stop the disc. With some formats, like DVD, this player will resume play exactly where **STOP** was pressed.

NOTE: The **LAST MEMORY** setting in the **DISPLAY SETUP MENU** must be set to **ON** for this function to work.

2. Press the **PLAY/PAUSE** button to resume playback from where the disc was stopped.

NOTE: If you press **STOP** 2x the DVD player will stop and playback will restart from the beginning of the disc.

On Screen Display (OSD)

While a disc is playing the status of various functions can be checked by pressing the **OSD** button.

1. Press **OSD** 1x to display the title, chapter, and time played

2. Press **OSD** 2x to display the audio and subtitle information

3. Press **OSD** 3x to display the total elapsed time for the current chapter

4. Press **OSD** 4x to display the total elapsed time for the current title

5. Press **OSD** 5x and the display will turn OFF.

Subtitles

This DVD player can display subtitles in 6 different languages (English, Spanish, French, German, Italian, & Chinese).

NOTE: The DVD must be multi-subtitle enabled for this function to work.

1. Press the **SUBTITLE** button and the Subtitle Menu will appear. Select the desired language by pressing the **SUBTITLE** button until your preference is shown.

2. To turn subtitles OFF, press the **SUBTITLE** button until the subtitles disappear.

DVD/USB

This DVD player supports playback of MP3 & WMA audio files, AVI Video files and JPEG photos from a USB drive.

Press the **DVD/USB** button on the remote control to switch between DVD & USB modes.

Use the Navigation Buttons on the remote control to highlight the file you wish to view and press the **ENTER** button to start playback.

Search

1. Press the **SEARCH** button to display the search menu on the TV screen.

2. Use the Navigation buttons to select a desired Title/Chapter. A Title/Chapter can also be chosen by entering the Title or Chapter number with the **NUMBER** buttons.

3. Press the **ENTER** button to start playback from the selected Title or Chapter.

NOTE: Some discs will not respond to this function. If different instructions appear on your DVD follow those instructions. Title and Chapter selection procedures may vary depending on the content of a particular DVD.

A-B Repeat

This DVD player can repeat a specific set of points on a DVD in a continuous loop.

1. Press **A-B** 1x to set a starting point.
2. Press **A-B** 2x to set the ending point. The selected starting and ending points will repeat in a continuous loop.
3. Press **A-B** 3x to stop the loop and return to normal playback.

Volume

Use the volume controls on your TV remote to adjust the volume level coming from your TV speakers.

Zoom

This DVD player has the ability to enlarge or decrease the picture size during DVD playback by pressing the **ZOOM** button.

Each time the **ZOOM** button is pressed the size of the image on the TV will either increase or decrease as follows:

- Press **ZOOM** 1x image increased by 2x
- Press **ZOOM** 2x image increased by 3x
- Press **ZOOM** 3x image increased by 4x
- Press **ZOOM** 4x image decreased by 2x
- Press **ZOOM** 5x image decreased by 3x
- Press **ZOOM** 6x image decreased by 4x
- Press **ZOOM** 7x image will return to the normal size.

NOTE: The DVD disc must be **ZOOM** enabled

Repeat Play

This DVD player allows repeated playback of specific Titles, Chapters, & CD Tracks by pressing the **REPEAT** button.

1. Begin playing the desired Title, Track, or Chapter.
2. Press the **REPEAT** button.

NOTE: The repeat mode changes each time the **REPEAT** button is pressed as follows:

 
- Press **REPEAT** 1x= Repeat Chapter / Track
- Press **REPEAT** 2x= Repeat Title
- Press **REPEAT** 3x= Repeat Entire Disc
- Press **REPEAT** 4x= Repeat OFF (return to normal playback)

DVD Menu Setup

1. Press the **SETUP** button on the remote and the Setup menu will appear.
2. Use the **Up** or **Down** Navigation buttons to highlight the desired menu.
3. Press the **ENTER** button to confirm the highlighted selection and enter the desired submenu.
4. Use the **Up** & **Down** Navigation buttons to highlight the desired setting option then press **ENTER** to confirm.

Language

This option is used to choose the Language for the OSD, Subtitles, DVD Audio, & Setup Menus.

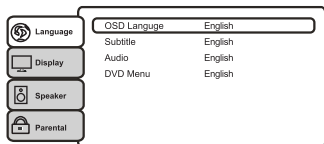

OSD LANGUAGE:

There are 3 languages to choose from: English, French, Spanish.

SUBTITLE:

There are 3 options to choose from: English, French, Spanish.

AUDIO:

 
There are 3 options to choose from: English, French, Spanish.

DVD SETUP MENU:

There are 3 options to choose from: English, French, Spanish.

Display

This option is used to choose various settings related to Video.

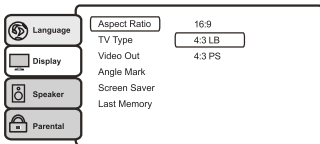

ASPECT RATIO:

There are two kinds of Aspect Ratios for TVs, 4:3 & 16:9 which can be selected according to the disc format & TV Type.

16:9: Use this setting if you are using a 16:9 format Widescreen TV.

4:3 LB: Will keep the image in the same format according to the content on the DVD. Widescreen DVDs will be shown in a letterbox format.

 
4:3 PS: Will automatically edit and show a Widescreen or other format video as a Full screen image.

TV TYPE:

This unit is specifically made for Region 1 discs and will operate on the NTSC system.

VIDEO OUT:

This unit supports CVBS video (red/white/yellow jacks) outputs.

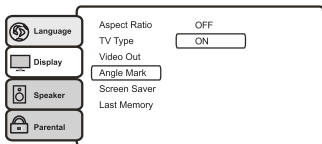

ANGLE MARK:

When this setting is turned ON a small Camera icon will appear on the TV to indicate multiple camera angles can be chosen.

NOTE: The DVD must be multi-angle enabled for this function to work.

SCREEN SAVER:

When this setting is turned ON a screen saver will appear after a long period of no activity. To return to normal operation simply press a button on the remote.

 
LAST MEMORY:

When this setting is turned ON the DVD player will remember the point where playback was stopped so playback can resume from that point the next time the **PLAY/PAUSE** button is pressed.

NOTE: If this setting is turned OFF the DVD will always start from the beginning of the disc after playback is stopped.


Speaker

This option (**3D / EQ**) is used to choose from various audio electronic presets.

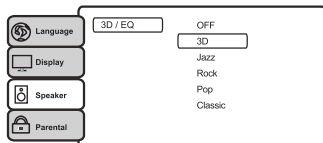

Parental Control

 This menu allows you to restrict viewing of certain movie ratings.

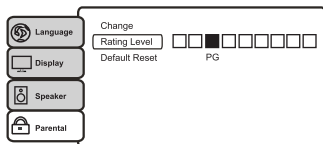

Change:

To make any changes to the Parental Controls a Password must first be entered.

NOTE: The first time this menu is selected enter the Default Password "0000"

Once the Password is confirmed you will be asked to enter a new password. To set a new password use the **NUMBER** buttons to enter a new 4-digit password, or you can keep the Default Password and enter "0000".

Rating Level:

 
To change the acceptable rating level for playback, use the **LEFT & RIGHT** Navigation buttons to highlight the rating boxes. Press **ENTER** to select the maximum accepted rating.

NOTE: If you do not wish to use the Parental Control feature simply choose the Rating Level box named **OFF**.

Default Reset:

If you want to reset the DVD player to the factory default settings highlight "**Default Reset**" and press **ENTER**.

NOTE: Any settings you have changed previously will need to be changed again.

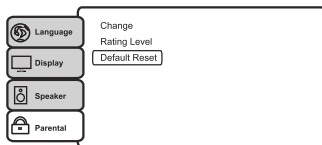

TROUBLESHOOTING

Problem	Reason	Solution
Power is connected but the player does not work.	Plug is not inserted correctly into the wall outlet.	Reinsert the power cord into the wall outlet or try a different wall outlet.
Disc is inserted in the player but there is nothing displayed on the TV screen.	Disc is inserted upside-down; disc is dirty, scratched, or cracked.	Correctly insert the disc into the player; repair or clean the disc and wait until the disc has completely dried (one-hour) before re-inserting into the player.
No sound	Audio cables are not properly connected.	Make sure the RED & WHITE cables are properly connected on both the DVD player and TV.
No Picture	Video Cable is not properly connected; TV is not on the correct INPUT	Make sure the YELLOW cable is properly connected on both the DVD player and TV. Adjust the TV to the correct INPUT/SOURCE (refer to TV owners manual)
The Remote Control doesn't work	Batteries no longer work; remote is not pointed directly at the remote sensor.	Change the batteries. Move closer to the DVD player and point the remote directly at the front. Make sure there is no object between the remote and the IR receiver on the player.
During playback, the image freezes, skips, or the sound is distorted.	The disc is in poor condition.	Repair or clean the disc and wait until the disc has completely dried (one-hour) before re-inserting into the player.



LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized ATAK dealer.

Should you be missing any of the included accessories, please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the ninety-day warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-994-2825 or visit www.sibrandssupport.com

This warranty applies only under conditions of normal use. Our products are not intended for outdoor use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as DVD & CD discs, and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall ATAK be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL ATAK BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

Schoenfeld International Inc and ATAК

5001 American Boulevard West

Suite 275

Bloomington, MN 55437

©Schoenfeld International Inc, 2015

DVDA2015 Rev. 1.0 June, 2015