


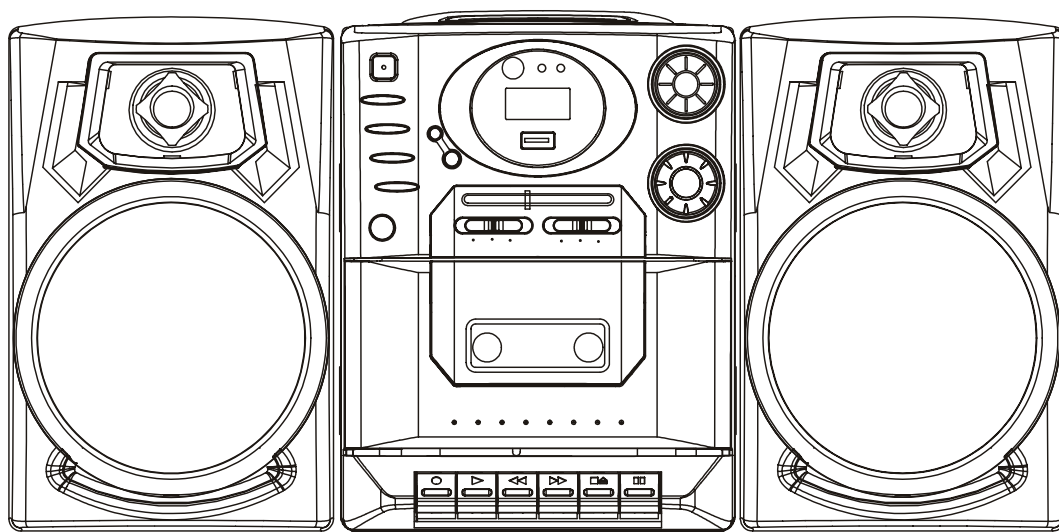

**PORTABLE
CD / MP3 PLAYER
AM-FM STEREO RADIO
CASSETTE RECORDER
with USB PORT**

**INSTRUCTION MANUAL
MODEL: E6330**



Please read and follow these instructions before using your unit.

WARNING

- * To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- * To reduce the risk of electric shock, do not open the cabinet. No user serviceable parts are inside. Refer servicing to qualified personnel.
- * This appliance uses a Laser System. To prevent direct exposure to the laser beam do not open the cabinet. Visible and invisible laser radiation is present when the cabinet is open. Avoid direct exposure and do not stare into the beam.
- * Batteries should not be exposed to excessive heat such as direct sunlight, fire, or other heat sources.
- * Caution: Do not expose this appliance to dripping or splashing liquids. Do not put objects filled with liquid, such as vases on or near the appliance.
- * Caution: To turn this appliance off completely, the POWER cord must be unplugged from the wall outlet. The power cord must be easily accessible at all times.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.


IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinch particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightening storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.
- 16) CAUTION: Visible and Invisible Laser Radiation when open and interlock defeated.
DO NOT STARE INTO BEAM.
- 17) Rating label is located at the back of enclosure.
- 18) "CAUTION" mark is also located at the back of enclosure.



S3125A

OVERVIEW OF THE PLAYER

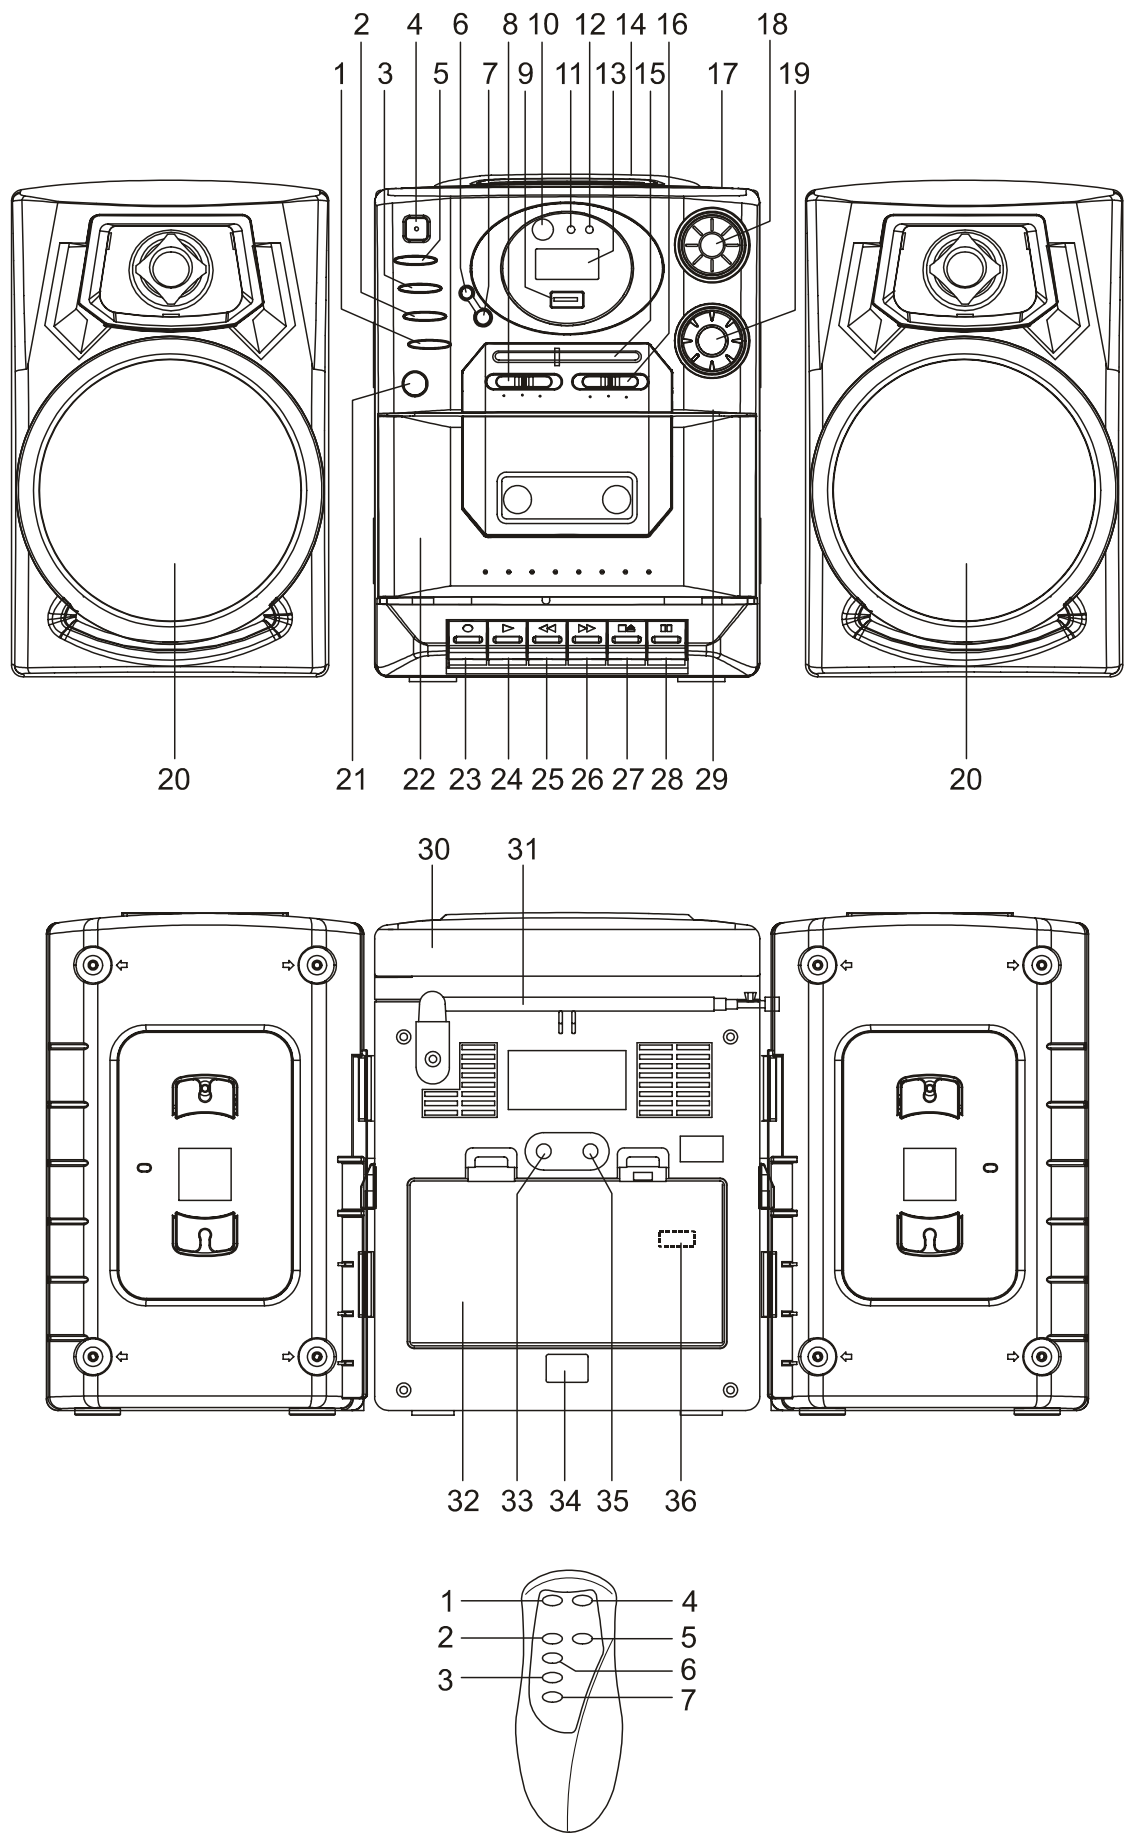

LOCATION OF THE CONTROLS

1. CD SKIP/SEARCH UP BUTTON
2. CD SKIP/SEARCH DOWN BUTTON
3. CD STOP/USB BUTTON
4. POWER ON/OFF BUTTON
5. CD PLAY/PAUSE BUTTON
6. PROGRAM BUTTON
7. CD MODE BUTTON
8. FUNCTION SWITCH
9. USB PORT
10. REMOTE SENSOR
11. FM STEREO INDICATOR
12. POWER INDICATOR
13. LCD DISPLAY
14. CD DOOR
15. FREQUENCY DIAL
16. BAND SWITCH
17. CD DOOR OPEN/CLOSE
18. FREQUENCY TUNING CONTROL
19. VOLUME CONTROL
20. SPEAKERS
21. 10+ BUTTON
22. CASSETTE DOOR
23. CASSETTE RECORD BUTTON
24. CASSETTE PLAY BUTTON
25. CASSETTE REWIND BUTTON
26. CASSETTE FAST FORWARD BUTTON
27. CASSETTE STOP/EJECT BUTTON
28. CASSETTE PAUSE BUTTON
29. BUILT-IN MICROPHONE
30. FOLDING HANDLE
31. TELESCOPIC ANTENNA
32. BATTERY COMPARTMENT
33. RIGHT SPEAKER JACK
34. AC SOCKET
35. LEFT SPEAKER JACK
36. AC VOLTAGE SELECTOR
(OPTIONAL FOR DUAL VOLTAGE
VERSION)

REMOTE CONTROL

1. STOP BUTTON
2. SKIP/SEARCH DOWN BUTTON
3. USB/CD BUTTON
4. PLAY/PAUSE BUTTON
5. SKIP/SEARCH UP BUTTON
6. PROGRAM BUTTON
7. MODE BUTTON

SPEAKER CONNECTIONS

To attach speakers to the main unit, align the grooves of main unit with the grooves on the side of the speaker box and slide the speaker box downwards. Push the speaker latch in the direction indicated to lock the speaker in place and then insert the plug of the speaker wire into the Speaker Jack (L&R).

WARNING: The speaker must be firmly plugged into the Speaker Jack before switching on the power of main unit.

POWER SUPPLY

This unit is designed to operate from two different types of power sources;

• DC OPERATION

This setting operates on 8 - "D" type batteries. For best performance, always use heavy duty alkaline batteries.

TO INSTALL BATTERIES

1. Remove the cover on the Battery Compartment by gently pushing downward and outward. Insert 8 - "D" type batteries.

BE SURE TO PLACE THE BATTERIES IN THE SAME POLARITY (+ or-) DIRECTION INDICATED ON THE ENGRAVED DIAGRAM INSIDE THE COMPARTMENT.

2. Replace the cover.

NOTE: Old batteries may swell and leak. To avoid damage to your device, remove the batteries when the unit is being stored for a long period of time or if the batteries have become exhausted.

NOTE: To use DC power (battery) setting, you MUST first remove the AC cord from both the wall outlet and the back of the set.

• AC OPERATION

Plug the AC power cord into the AC cord socket on the device first, and then plug the other end of the cord into a standard household power outlet as shown.

TO PLAY THE RADIO

1. Set the FUNCTION switch to the RADIO position and the POWER Indicator will light up.
2. Select the desired band with the BAND switch.
3. Tune to the desired station by rotating the TUNING control. Rotate the control back and forth until you find the strongest and clearest reception for a given station.
4. The built-in AM antenna and external FM TELESCOPIC ANTENNA are directional.
 - When you are receiving an FM broadcast, fully extend the TELESCOPIC ANTENNA and rotate it for the best reception.
 - For AM broadcast, rotate the whole unit for the best reception.
5. Adjust the volume to a comfortable listening level.
6. To turn off the radio, set the FUNCTION switch to the TAPE or CD/MP3 position.

NOTES:

- If a particular FM (STEREO) station is weak, or you hear too much background noise, try moving the band selector switch to the FM (MONO) position. This can often result in a much clearer reception.
- The FM Stereo indicator light will glow when the band selector switch is set to FM STEREO and a stereo broadcast is received from a station.

LOADING A DISC

1. Open the CD door by pressing on the CD Door "open" area.
2. Load a CD on the disc tray with the label side facing up.
3. Close the CD door.

PLAYING A DISC

1. Slide the Function switch to the CD/MP3 position.
2. Follow the steps above to load a disc.
3. The player begins reading the disc immediately after the CD door is closed and "---" will show in the LCD display.
4. When the disc is successfully read, total number of the tracks on disc is indicated in the display and playback begins with the first track.
5. Press the Play/Pause button once to stop music playback. The current track number will flash and a "PAUSE" icon appears on the left side of the display to indicate the player in PAUSE mode. Press the Stop button a second time to cease music playback. The display will show the total number of the tracks on disc again.

ANTI-SHOCK PROTECTION

A special circuitry inside the player prevents disc skipping when the player is subject to shock and shaking during music playback. The laser scans the CD/MP3 disc and saves data for up to 1/10th of a second ahead of where the playback actually is on the disc. In case of shaking or shocking vibrations, the player reads from the saved memory until the laser can read the CD again.

Too much vibration or shaking may cause the player to malfunction and cause skipping to be heard. If this happens, place the player on a solid, level vibration resistant surface.

SKIP TRACKS AND SEARCH FOR A SPECIFIC POINT TO PLAY

1. Press the SKIP/SEARCH UP button once when playing music to skip to the next track. To skip ahead to a specific track, press this button several times.
2. Press the SKIP/SEARCH DOWN button when playing music to skip to the previous track. To skip backwards to a specific track, press this button several times.
3. Press 10+ button once when playing music to skip to the track 10 tracks ahead, press twice to skip 20 tracks ahead. You can reach the last track of the disc using this button.
4. Press & Hold the SKIP/SEARCH UP button when playing music to search forward at quick rate for a specific point in the music.

5. Press & Hold the SKIP/SEARCH DOWN button when playing music play to search in reverse at quick rate for a specific point in the music.

MP3-CD PLAYBACK

This player is capable of playing recorded MP3-CDs. PLEASE NOTE: It will take a longer time for the player to read an MP3-CD than it does regular CD. Wait patiently while the unit is reading the disc.

After a MP3-CD is successfully read, the total number of tracks will show in the LCD display and then automatically playback will begin from the first track of the disc while showing a "MP3" icon in the display.

SKIP TRACKS AND SEARCH FOR A SPECIFIC POINT TO PLAY (MP3/USB)

1. Press the SKIP/SEARCH UP button once when playing music to skip to the next track. To skip ahead to a specific track, press this button several times.
2. Press the SKIP/SEARCH DOWN button when playing music to skip to the previous track. To skip backwards to a specific track, press this button several times.
3. Press 10+ button once when playing music to skip to the track 10 tracks ahead, press twice to skip 20 tracks ahead. You can reach the last track of the disc using this button.
4. Press & Hold the SKIP/SEARCH UP button when playing music to search at quick rate for a specific point in the music.
5. Press & Hold the SKIP/SEARCH DOWN button when playing music play to search at quick rate for a specific point in the music.

USB DRIVE OPERATION

To use a USB data drive:

1. Power on the unit.
2. Insert a USB data drive into the USB port.
3. Set the function switch to the CD/MP3 position.

The display will indicate "reading" and after the USB is successfully detected and read, the track number total will show in the display.

NOTE: When the unit is in the Stop mode, press and hold the STOP/USB button on the unit or press USB/CD button on the remote to switch the source between USB and CD modes.

REPEAT A SINGLE TRACK (CD/MP3/USB)

To repeat a single track, during playback, press the MODE button once and "REPT. 1" shows in the LCD display. Select the number of the preferred track using the SKIP/SERCH buttons or the 10+ button. The player will now repeat the selected track until you press the STOP button.

REPEAT ALL TRACKS (CD/MP3/USB)

To repeat all tracks, during playback, press the MODE button twice and "REPT. ALL" shows in the LCD display. The player will now repeat all the tracks until you press the STOP button.

RANDOM PLAY (CD/MP3/USB)

For Random or "shuffle" play, during playback, press the MODE button three times and "RAN." shows in the LCD display. Tracks on the disc will now be played in random order and the player will stop automatically after all tracks are played.

INTRODUCTION PLAY (CD/MP3/USB)

Introduction play will play the first ten seconds of each track in a sequential order. During playback, press the MODE button four times to enter this mode and "INT." shows in the LCD display. Press the SKIP/SEARCH UP button to play the beginning of the next track. Press the SKIP/SEARCH DOWN button to play the beginning of the previous track. Press the PLAY/PAUSE button once more to exit Introduction play and return to normal playback on the currently playing track.

PROGRAMMED PLAY (CD/MP3/USB)

Use the PROGRAM button to program the order of play or the track selections you want to hear.

1. In the MP3/USB mode when playback is stopped, press the PROGRAM button once and "PROG." will appear in the LCD display with the program sequence indicator "P-01" and a flashing track number indicator.
2. Select the first track number to be programmed using SKIP/SEARCH or 10+ buttons and press the PROGRAM button again to confirm your selection and advance to the next programming step. The program sequence indicator will change to "P-02" for the next input.
3. Repeat the steps above to program additional tracks. A maximum of 99 tracks can be programmed for a MP3 disc & USB drive. A maximum of 20 tracks can be programmed for a CD.
4. Press PLAY/PAUSE button to begin programmed play in the selected order after you have completed program selection. The player stops automatically after all programmed tracks are played.
5. Press the STOP button to stop programmed playback. Press the PLAY/PAUSE button to begin programmed playback with the identical programmed order or press the STOP button a second time to clear the programmed memory.

CASSETTE OPERATION

PAUSE BUTTON

Press the PAUSE button to pause cassette playback.

STOP/EJECT BUTTON

Press the STOP/EJECT button to stop cassette playback and once more to open the cassette door to eject the cassette.

F.FWD BUTTON

Press the F.FWD button to advance rapidly during playback or in the stop mode.

REW BUTTON

Press the REW button to reverse rapidly during playback or in the stop mode.

PLAY BUTTON

Press the PLAY button to begin playback.

RECORD BUTTON

Press the RECORD button to record audio to a blank cassette tape.

CASSETTE RECORDING OPERATION

RECORD FROM CD/MP3/USB

1. Play a CD/MP3/USB according to the steps described in this manual.
2. Insert a blank cassette tape into the unit with the full tape reel on the left-hand side.
3. When the CD/MP3/USB drive music arrives at the point you want to begin recording, press both the RECORD and PLAY buttons at the same time to begin recording.
4. Press the STOP/EJECT button to stop recording when the CD/MP3/USB arrives at the point you want to end recording.
5. When the tape reaches the end, the recording will automatically stop.

RECORD FROM RADIO

1. Play the radio according to the steps described in this manual.
2. Insert a blank cassette tape into the unit with the full tape reel on the left-hand side.
3. When the broadcast arrives at the point you would like to begin your recording, press both the RECORD and PLAY buttons at the same time to begin recording.
4. Press STOP/EJECT button to stop recording.
5. When the tape reaches the end, the recording will automatically stop.

TO RECORD USING THE BUILT-IN MICROPHONE

1. Set the FUNCTION switch to the TAPE position.
2. Insert a blank cassette tape into the unit with the full tape reel on the left-hand side.
3. Press the cassette RECORD button and speak into the built-in microphone on the top left of the unit.
4. Press the STOP/EJECT button to end the recording process.
5. Rewind the tape and press the PLAY button to listen to your recording.

REMOTE CONTROL OPERATION

INSERT BATTERIES

1. Remove the cover on the Battery Compartment by gently pushing downward and outward.
2. Install 2 "AAA" batteries into the compartment. Be sure to observe the polarities as engraved in or near the battery compartment.
3. Close the battery compartment lid.

NOTE: Always remove batteries if the remote controller is not going to be used for a month or more. Batteries left in the unit may leak and cause damage to the remote.

REMOTE CONTROL RANGE

For best results, use the remote control no further than 15' feet from the unit and within a 45° angle in relation to the remote sensor on front panel. The remote may not function properly if any objects are in the path of the infrared beam from the remote and the remote sensor on the front panel of the unit.



LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized ETEC dealer.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the ninety-day warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-994-3832.

This warranty applies only under conditions of normal use. Our products are not intended for outdoor use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as DVD & CD discs, and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall ETEC be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL ETEC BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

This page is intentionally left blank

Schoenfeld International Inc and ETEC

5001 American Boulevard West

Suite 275

Bloomington, MN 55437

©Schoenfeld International Inc, 2013

PN: E6330 Rev 1.5V October, 2013