




E709

**PORTABLE CD PLAYER with FM STEREO**

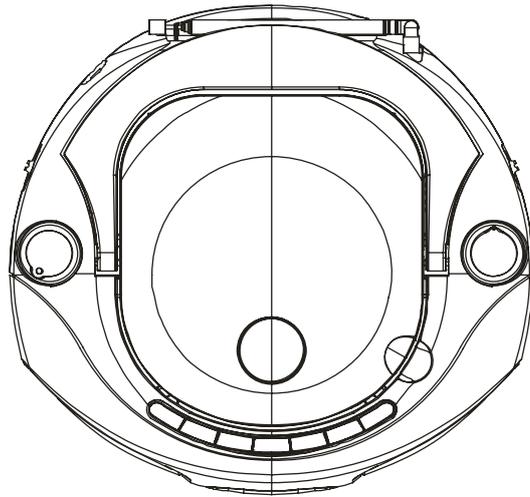

**Instruction Manual**

Please read this manual carefully before using

## Important Safety Instructions 1



- Read all of these instructions.
  - Save these Instructions for later use.
  - Follow all Warnings and Instructions marked on the audio equipment.
- 1) **Cleaning** -- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
  - 2) **Attachments**-- Do not use attachments not recommended by the product manufacturer as they may cause hazards.
  - 3) **Water and Moisture** -- Do not use this product near water: for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool or any other wet area.
  - 4) **Accessories** -- Do not place this product on an unstable unit of any kind as the product may fall, causing serious injury to a child or adult, and serious damage to the product.
  - 5) The product should be moved with care. Quick stops, excessive force and uneven surface may cause the product to malfunction.
  - 6) **Ventilation**-- Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product. To protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
  - 7) **Power Sources** -- This product should be operated only from the type of power source indicated on the rating label located on the rear of the unit.
  - 8) **Plug** --This product can be run on 6x "C" batteries (not supplied) or via the 120V Power cord. There is a 3 pin plug appendix of unit for the purpose of running the

unit . This plug should be rewired by a qualified electrician.

**9) Batteries** -- When the unit is not in use for any substantial period the batteries must be removed, in order to avoid damage to the unit.

### Important Safety Instructions 2

**10) Power- Cord or Protection** -- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

**11) Lighting** -- For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

**12) Over loading** -- Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in risk of fire or electric shock.

**13) Object and Liquid Entry** -- Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

**14) Servicing** -- Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**15) Damage Requiring Service** -- Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a) when the power-supply cord or plug is damaged.
- b) if the liquid has been spilled, or objects have fallen into the product.
- c) if the product has been exposed to rain or water.
- d) if the product does not operate normally;
  - Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e) if the product has been dropped or damaged in any way.
- f) when the product exhibits a distinct change in performance this indicates a

need for service.

16) Replacement Parts -- When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

17) Heat -- the product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers ) that produce heat.

18. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

19. No open flame sources, such as lighted candles, should be placed on the apparatus

20. No objects filled with liquids, such as vases, shall be placed on the apparatus

21. The mains power plug is used as the disconnect device, the disconnect devices shall remain readily operable

22. Do not dispose of electrical products in the general waste and ensure the used batteries are disposed safely according to your local authority and regulations.

### **Handling CDs**

Holds a CD by its edges .Avoid touching the recorded side of the disc. To remove a CD from its storage case, press down on the center retention mechanism of the case and lift the disc.

### **Cleaning the CDs**

Use a dry cloth to wipe off any fingerprints and dusts from the playing surface of the disc. Wipe in a straight line radiating from the center to the outside edge of the disc. Small dusts particles light stains will not affect playback quality .


- ◆ Never use chemical such as record sprays, anti-static sprays, benzene, or thinners to clean your CDs.
- ◆ To reduce the risk of scratches , always put CDs back in their case after use ,
- ◆ Do not subject CDs to prolonged exposures to direct sunlight, high humidity, or high temperature.
- ◆ Do not place stickers or labels on either side of the CD.

### **Cleaning the CD Player lens**

A dirty lens can cause CD playback to skip .If the lens is very dirty , the CD may not work at all. Unplug the power supply, open the CD door, and clean the lens as follows :

- ◆ For Dusts or Dry Particles – use a camera lens brush /blower to blow on the lens a few times. Then wipe the lens with the brush, and blow on the lens once more .
- ◆ For Fingerprints – use a dry cotton swab to wipe the lens in a straight line radiating from the center to the outside edge.

## Names of Each Control

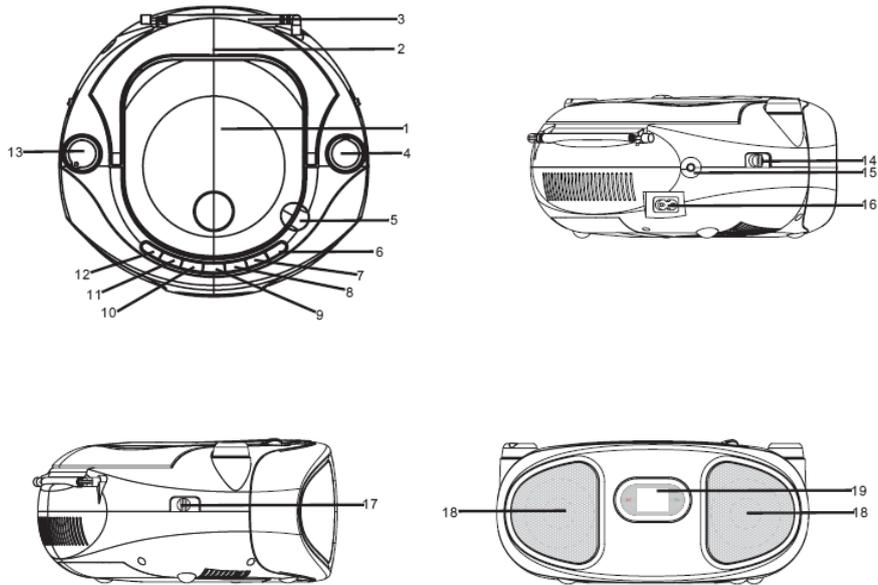

1. **CD Door**
2. **Handle**
3. **Telescopic Antenna**
4. **Tuning Knob** -- to select the broadcast station in the FM mode
5. **Open CD Door** -- to open the CD door to insert a CD
6. **PLAY/PAUSE** ► || -- to play and pause playback of a CD
7. **SKIP UP** ►► **Button** -- to skip forward during CD play
8. **SKIP DOWN** ◄◄ **Button** -- to skip backward during CD play
9. **STOP** ■ **Button** -- to stop CD playback
10. **Random Button** -- to play songs in a random order
11. **Repeat Button** -- to repeat the song currently playing
12. **Program button** -- to program the CD song tracks in a desired order of play
13. **Volume Control** -- to increase or decrease the audio volume

14. Function Switch -- to change the function mode from OFF/CD/Radio.
15. Headphone Jack
16. AC Cord Jack
17. FM/FM STEREO Switch
18. Left & Right Speaker
19. LED display

## Basic Operation

### Power supply and connection

#### Battery Operation

Remove battery Compartment Cover.

Put in 6 batteries (C size or equivalent) in the correct polarity as indicated inside the compartment. Replace the cover.

#### Note:

Check your batteries regularly. Old or discharged batteries should be replaced.

If the unit is not going to be used for some time or is being run exclusively on alternative power, remove the batteries to avoid leakage and damage.

Only use Super Alkaline batteries to operate this unit.

#### AC Main Operation

Connect the cord to the electrical outlet. AC power supply is AC 120V~60Hz.

#### Adjusting the volume

You can turn the Volume Control button to reduce or increase the volume.

#### Turn off the unit

Move the Function switch to the OFF position.

#### Headphone Jack

You can use headphones to listen to music.

1. Adjust the volume to a low level.
2. Insert the headphone plug into the headphone jack.
3. Adjust the volume to your desired level.

Note: the speaker audio will be cut off when you insert a headphone plug into this jack.

## Listening to Radio

1. Select Function Switch on the back side of the unit to Radio position .
2. Set the BAND switch to:  
FM: Listen to FM broadcast.  
FM.ST: Listen to FM stereo broadcast.
3. Rotate the Tuning control to search for broadcasts in FM mode.

Note: When the tuner is locked into a stereo broadcast, the FM.ST indicator light will be illuminated.

### Antenna

For FM stations, extend the Telescopic Antenna to full length, adjust the angle and direction for the best reception.

## Listening to CDs

1. Push the Function Switch to CD mode .
2. Open the CD door
3. Put a CD disc in place with the printed label facing you.

Note:

Push the disc until it clicks in so that it securely sits on the spindle.

Never set more than one disc.

When putting a CD disc in the unit , it will flash "--", then after seconds, LED will show the total number of tracks in the CD disc.

4. Close the CD door.
5. Press PLAY/PAUSE ►|| button to start the playback.
6. Press PLAY/PAUSE ►|| button during playback to stop playing temporarily, press it again to resume playback.
7. To skip forward or backward the tracks, Press the Skip/Search ►►/◄◄ button.
8. To stop playing, press **STOP** button.

## REPEAT and RANDOM PLAY

Press the Repeat button before play to select your desired play mode.

Press Repeat button once while playing, it will repeat the current track; press the button twice, it will repeat all the tracks. Press the Repeat button the third time, the Repeat function will stop.

Press the Random button before play to select your desired play mode .

Press the Random button while playing, it will randomly display the CD tracks; Press it again, it will play the tracks normally.

To repeat programmed tracks

1. First, program the desired tracks.
2. Press PLAY/PAUSE button to start play.
3. Press Repeat button to start repeating your programmed tracks.

## CD Programmed Playback

Up to 20 tracks can be programmed in the desired order.

Shuffle playback does not work during program playback.

1. Press the **PROGRAM** button in the stop mode .  
"01" is flashing on the LED .
2. Press the skip down or skip forward button to select a track .
3. Press the **PROGRAM** button  
The track is programmed and "02" is flashing on the LED.
4. Repeat above steps to program additional tracks.  
You can program up to 20 tracks.
5. When the selection of track numbers is completed, press the **PLAY/PAUSE ► II** button to start program playback. To clear the program contents, press the **STOP** button or open the CD door .

## Trouble Shooting

In case of trouble with the unit, please take the trouble to look through this chart and see if you can solve the problem your self before you call your dealer.

### **General**

#### **No power**

Check the connection to the AC or DC power supply.

#### **Tuner**

#### **Cannot listen to any station, or signal is too weak.**

Tune in the station properly.

If a TV is near the unit, put it off.

Re-orient the antenna until reception improves.

#### **No sound. Sound is distorted or noisy.**

If a blank tape is loaded, replace it with a prerecorded tape.

Clean and demagnetize the heads.

#### **The sound is noisy.**

The unit is too close to a TV set or similar appliances. Install the unit apart from them, or turn them off.

#### **No sound from speakers.**

Adjust the volume.

Select proper source.

#### **One track is played repeatedly.**

Press the REPEAT button to cancel the repeat mode.

#### **CD Player**

Cannot play.

Load a disc with label side facing you.

If the disc is dirty, clean the Surface of the disc.

Sound skips.

## Specifications

### **CD Player**

Pickup ..... 3-beam pick-up

Audio Frequency response ..... 20 H z ~ 20 Kh z

### **Tuner**

FM tuning range ..... 88- 108MHz

Antenna ..... FM Telescopic antenna

### **General**

Output power ..... 1 Wx2

Power requirements ..... AC120V- 60Hz

Power consumption ..... 10W

Design and specifications are subject to change without notice.

Photos and illustrations may differ slightly from production models.



## **LIMITED 90-DAY WARRANTY**

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized ETEC dealer. We will repair or replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, submit proof of purchase (sales slip) along with the unit and all accessories.

During the ninety-day period from the original purchase date, we will service or exchange the unit at no charge. To obtain warranty service or replacement within the ninety-day warranty period, please return the product and all accessories to the original place of purchase.

For technical support, the ETEC Technical Support Center is available 24-hours a day, 7-days a week for technical assistance or troubleshooting. To contact us by phone, please call 1-800-936-1168.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as DVD, CD, and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair. Under no circumstances shall ETEC USA be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

**UNDER NO CIRCUMSTANCES WILL ETEC USA BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

This warranty does not cover re-manufactured units, or product sold 'As Is'

This warranty is valid only to the original purchaser of the Product in the United States, Canada, and Mexico and grants specific legal rights.