


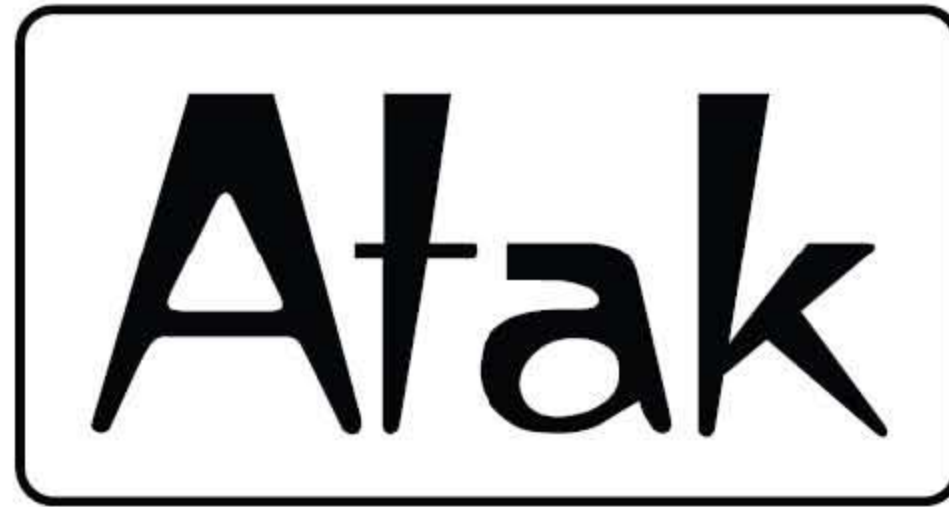


MP3 Digital Audio Player
Model: MP44MAG
User Manual

Features:

- Supports multiple music formats such as: MP1, MP2, MP3, & WMA
- USB Flash disk function (no driver needed)
- High-Speed USB 2.0 Data Transmission

Know your player:

Outline and key

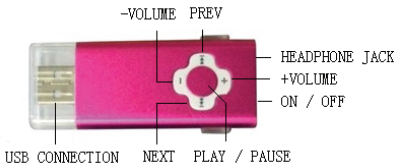

Definition of buttons functions:

1. **"PLAY"**: ON/ PLAY/ STOP/OFF.
2. **"VOL+"**: Volume increase.

3. **"VOL-"**: Volume decrease.
4. **"NEXT"**: **NEXT** entry, fast forward.
5. **"PREV"**: **PREV** entry, fast reverse.
6. **"ON/OFF"**: Power switch
7. **"USB"**: USB jack.
8. **"Headphone Jack"**: standard 3.5mm headphone jack.

Loading Music Files on the MP3 Player:

Connect the MP3 Player into your computers' USB port. The MP3 Player will be recognized by your PC as a "Removable Disk" located in the "My Computer" directory and the power on the MP3 Player will automatically turn on. Loading music files into the MP3 Player is very easy. Locate the music files on your computer that you want to load on the MP3 Player and simply, "drag and drop" the music files into the MP3 Players' Removable Disk directory. You can create new folders or rename existing ones and organize your songs in the same manner that you would for any other set of files on a computer or USB drive. No Drivers are required.

The Proper Way To Disconnect or “Eject” the MP3 Player from the Computer

If the MP3 Player is not properly disconnected from the computer, music files may be lost, damaged, or the player may not operate correctly.

For Windows and MAC systems, follow normal system procedures for the SAFE ejection of a “USB DEVICE”.

1. First, make sure the MP3 player is stopped and all programs using the player on your computer (i.e. Media Player or others) are closed.
2. **WINDOWS:** right-click on the USB icon in the bottom right (system tray) of your computer screen and a box with the message, “Safely Remove Hardware” will appear. Click on the “Safely Remove Hardware” message and your computer will indicate that it is OK to remove the device.
- 3 **MAC:** right-click on the icon that appears on the screen or in the “Finder” menu to “EJECT” the unit. After ejecting, the unit can now safely be removed.

MP3 mode:

Turning the Player ON and OFF:

1. To turn the power ON, press and hold the **PLAY** button until the red indicator light comes on.
2. To turn the power OFF, press and hold the **PLAY** button until the red indicator light turns off.

3. Do not have the power of the MP3 player turned ON before connecting the player to your computer. The MP3 player will automatically turn itself on when inserted into the USB port.

Playing Music:

1. Press the **PLAY** button once to begin playing music. In the PLAY mode, the red and green indicator light will flash alternately (if there are no audio files on your player, the red and green indicator will remain light instead of flashing)
2. To pause the MP3 player, Press the button once and the player will PAUSE. The red and green indicator light will stay on in the PAUSE mode.

Selecting Music:

Short Press the **PREV** button to select the last music selection

Short Press the **NEXT** button to select the next music selection

Volume adjustments:

"**VOL+**": to increase the volume

"**VOL-**": to decrease the volume

USB mode

Using the Player as a USB Flash Drive

Insert the MP3 Player into the computers USB port or use the USB Extension cable. If the system correctly recognizes the player, the icon "USB Device" will appear on the Taskbar. If "USB Device" does not appear in the system tray, click on "My Computer" and the "Removable Disk" letter for the MP3 Player will be visible. The Player can now perform all of the functions of a USB Flash Drive.

When reading or writing data, the red indicator light on the player will flash to signal the transfer of data is occurring. During data transfer, do not disconnect the Player from the PC or data loss and function problems may occur.

Troubleshooting

The power can't turn ON	1. Is the battery correctly installed? 2. Please confirm if the unit is turned on
No sound is heard in the headphones	1. Please ensure the volume is not at 0 and earphone connection has no problem 2. Please ensure the earphone is clean. 3. A defective MP3 file may cause different problem from excess noise, and even unable to play the music. Please ensure the file is complete.
Unable to properly transfer music files	1) Check if the USB connection line is damaged and if the connection is proper 2) Is the driver installed properly? 3) Check to see if the memory is empty.

Specification

Transfer Rate	USB 2.0
Memory	One of the following sizes: 128M-8GB
Power source	Built-in 3.7V Lithium Ion rechargeable battery
	Max. Play time: 7 hours

MP3, WMA	Max. output of earphone	(L) 10mW + (R) 10mW (32Ohm)
	MP3 Bit Rate	8 Kbps—320 Kbps
	WMA Bit Rate	5 Kbps – 384 Kbps
	Frequency response	20Hz to 20KHz
	Signal-to-Noise	>87dB
Audio file support	MP3 & WMA	
Operational Temperature	-5℃ to 40℃	
Operating System support	Windows 2000/XP/Vista or newer, Macintosh OSX or newer	

Note: The design and specifications of this product are subject to change without prior notice.

LIMITED 90- DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized ATAK dealer. We will repair or replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, submit proof of purchase (sales slip) along with the unit and all accessories.

During the ninety-day period from the original purchase date, we will service or exchange the unit at no charge. To obtain warranty service or replacement within the ninety-day warranty period, please return the product and all accessories to the original place of purchase.

For technical support, the ATAK Technical Support Center is available 24-hours a day, 7-days a week for technical assistance or troubleshooting. To contact us by phone, please call 1-800-936-1168.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as DVD, CD and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair. Under no circumstances shall ATAK be liable for any loss (direct indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL ATAK BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured units, or product sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States, Canada, and Mexico and grants specific legal rights.