



8 DEVICE UNIVERSAL REMOTE CONTROL

User Manual

Model: VR21

PLEASE NOTE: Most universal remote controls may only operate the main functions of your device. To control every function of your device you may want to consider purchasing an original remote control from the device manufacturer.

DEVICE BUTTONS

There are 2 **Device** buttons (TV & CBL) near the top of this remote under the **POWER & SET** buttons, and 6 **Device** buttons (DVD, DVR, SAT, AMP, AUX, & VCR) at the bottom of the remote. These **Device** buttons are used to choose which device you want to program / control. The corresponding **Device** button can control the following devices:

TV – Televisions
CBL – Cable Boxes, Digital Television (DTV) Converter Boxes (used for Antennas, or Digital Cable / Satellite systems on Analog TVs)
DVD – DVD Players, Blu-ray Players
DVR – Digital Video Recorders (ex: TiVo, DVRs from your Cable Company, etc.)
SAT – Satellite Boxes (ex: DirecTV, Dish Network, etc.)
AMP – Stereo Systems, Home Theater in a Box (HTIB) Systems
AUX – CD Players, Media Centers
VCR – Video Cassette Recorders

NOTE FOR COMBINATION UNITS: For combination units such as TV / DVD, TV / VCR, or TV / DVD / VCR you must program both the **TV & DVD / VCR** Function buttons. Once these buttons are programmed successfully, the TV button controls the TV functions of your unit, and the **DVD / VCR** button will control the DVD and/or VCR functions of the unit.

There is a specific section in the Code List for combination units. The codes in this section should be tried first using the Brand Code Entry method on both the **TV & DVD / VCR** buttons. If this is unsuccessful, follow the normal programming methods for programming both the **TV** and **DVD / VCR** buttons.

BRAND CODE ENTRY

- Turn ON the device (TV, DVD, VCR, etc.) you wish to program.
- Press & Hold the **Device** button (TV, DVD, VCR, etc.) you wish to program for approximately 3 seconds until the Indicator Light (between the **POWER & SET** buttons) turns ON and stays lit. The remote is now in the Brand Code Entry programming mode.
 - NOTE:** During the programming mode, if no button is pressed for 30 seconds, the Indicator Light will flash twice and the remote will exit programming mode.
- Refer to the Remote Code list to locate the correct Device type (TV, DVD, VCR, etc.) and Brand for your device.
- Enter the four-digit code for your device. Start by entering the first code shown under the correct brand name in the Remote Code list.
 - The Indicator Light will flash each time a number is entered.
 - When a complete 4-digit remote code has been entered the Indicator Light will turn OFF.
 - If a remote code is entered incorrectly the Indicator Light will flash twice and stay lit. Try entering another code.
- To confirm if the code entered correctly controls your device press the **POWER** button to see if your device turns OFF.
 - If your device turns OFF, turn the device back ON and test the other main functions (Volume, Play, Pause, etc.) of the device.
 - NOTE:** Different codes may provide different levels of functionality for your device. It is important to test a variety of the main functions of the device (Volume, Play, Pause, Menu, Directional Arrow Buttons, etc.) to confirm the maximum functionality for your device.
 - If the remote is not controlling your device, or if not all of the main functions of the device are working correctly, repeat steps 1-3 and try a different remote code.
- After confirming the remote is correctly controlling your device, repeat steps 1-4 to program your other devices.
- Write down the code you found for each of your devices at the end of these instructions.

If no codes found in the Remote Code List successfully control your device try programming the device using one of the SEARCH programming methods described in the next steps.

BRAND NAME SEARCH PROGRAMMING

If the brand name of your device is listed in the Brand Name Code list below you may be able to program your remote by searching through only the Code Lists for that specific manufacturer.

If your brand name is not shown in the list below, use one of the other programming methods described in this manual.

BRAND NAME SEARCH LIST:

	TV	DVD / DVR / VCR	CABLE / SAT / HTIB	AUDIO / CD / AUX
1	RCA	RCA	RCA	RCA
2	VIZIO	VIZIO	VIZIO	SONY
3	SONY	SONY	SONY	SONY
4	PHILIPS	PHILIPS	PHILIPS	PHILIPS
4	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG
5	GE	GE	GE	GE
	PROSCAN	PROSCAN	PROSCAN	PROSCAN
6	ZENITH	ZENITH	ZENITH	ZENITH
	APEX	APEX	JERROLD	TEAC
				NAD
7	MAGNAVOX	MARANTZ	MAGNAVOX	MARANTZ
		MAGNAVOX	TOCOM	MAGNAVOX
			GENERAL - INSTRUMENT	
8	PANASONIC	PANASONIC	PANASONIC	PANASONIC
	SHARP	SHARP	SHARP	SHARP
	TOSHIBA	TOSHIBA	TOSHIBA	TOSHIBA
	DAEWOO	DAEWOO	DAEWOO	DAEWOO
		YAMAHA	YAMAHA	YAMAHA
		DENON	DENON	DENON
9	HITACHI	HITACHI	HITACHI	HITACHI
	SANYO	SANYO	LG	SANYO
	LG	LG		LG
	JVC	JVC		JVC
	MITSUBISHI	MITSUBISHI		MITSUBISHI
0	SYLVANIA	SYLVANIA	ECHOSTAR	SYLVANIA
	FISHER	FISHER	DISH	EMERSON
	CURTIS -	CURTIS -	HUGHES	SHARP
	MATHES	MATHES	PRIMESTAR	TOSHIBA
	EMERSON	EMERSON		DAEWOO
				YAMAHA
				DENON
				ONKYO

1

2

3

4

- Turn ON the device (TV, DVD, VCR, etc.) you wish to program.
- Press the **Device** button (TV, DVD, VCR, etc.) for device you wish to program. The Indicator Light will flash once.
- Press & Hold the **SET** button for approximately 3 seconds until the Indicator Light turns ON and stays lit. Release the **SET** button. The remote is now in Search programming mode.
 - NOTE:** During programming mode if no button is pressed for 30 seconds the Indicator Light will flash twice and the remote will exit programming mode.
- Point the remote at the remote sensor of your device and Press & Release the **CH+** button. This will send a remote command which will attempt to turn your device OFF.
- If your device does not turn OFF, continue to Press & Release the **CH+** button until your device turns OFF.
- When your device turns OFF, turn your device back ON and confirm if the remote correctly controls the other main functions (Volume, Play, Pause, Menu, Directional Arrow Buttons, etc.) for your device
 - NOTE:** Do Not press the **CH+**, **OK**, or **SET** buttons until you are 100% sure the current code you are testing is the code you want to set for this device.
- If the remote is not controlling the main functions of the device go back to Step 5 until you find another code which turns your device OFF.
- After confirming the remote is correctly controlling your device, press the **SET** button to save the correct code in the remote's memory.

AUTOMATIC CODE SEARCH PROGRAMMING

- Turn ON the device (TV, DVD, VCR, etc.) you wish to program.
- Press the **Device** button (TV, DVD, VCR, etc.) for device you wish to program. The Indicator Light will flash once.
- Press & Hold the **SET** button for approximately 3 seconds until the Indicator Light turns ON and stays lit. Release the **SET** button. The remote is now in Search programming mode.
 - NOTE:** During programming mode if no button is pressed for 30 seconds the Indicator Light will flash twice and the remote will exit programming mode.
- Point the remote at the remote sensor of your device and Press & Release the **POWER** button. The Indicator Light will flash once and then stay lit. The remote is now in Automatic Code Search programming mode.
- The remote will automatically send a remote code which will attempt to turn your device OFF every 2 seconds.
- When your device turns OFF quickly press the **SET** button to save the correct code in the remote's memory. The Indicator Light will turn OFF.

5

- Turn your device back ON and confirm if the remote correctly controls the other main functions (Volume, Play, Pause, Menu, Directional Arrow Buttons, etc.) for your device.
- If the remote is not controlling the main functions of the device repeat Steps 1-6 until you find another code which turns your device OFF.
 - NOTE:** When your device turns OFF for the first time do not press the **SET** button. Instead wait until your device turns back ON. This will indicate another successful code has been found.

CODE RETRIEVAL

Once you have programmed the remote to control all of your devices, you may want to record the codes at the end of this manual for future reference.

- If you used the Manual Code Entry method just find the codes you entered and make a note of them in the boxes below.
- If you used one of the Code Search methods to program the remote, or if you do not remember the code you used during Manual Code Entry, you will need to retrieve each device's four-digit code.
 - NOTE:** Retrieving and noting the four-digit codes will allow you to use the Manual Code Entry method. This will save a lot of time in the future if you ever need to re-program the remote.

RETRIEVING THE FOUR-DIGIT CODES AUTOMATICALLY PROGRAMMED

- Press the **Device** button (TV, DVD, VCR, etc.) for device you wish to retrieve. The Indicator Light will flash once.
- Press & Hold both the **SET & INPUT** buttons. Release both buttons when the Indicator Light starts flashing.
- The Indicator Light will indicate the numbers of the current four-digit code by flashing a specific number of times for each number of the code. The Indicator Light will stop flashing for 1 second to separate each number of the four-digit code.
 - EXAMPLE:
 - Indicator Light flashes 4 times (then stops flashing for 1 second)
 - Indicator Light flashes 8 times (then stops flashing for 1 second)
 - Indicator Light flashes 3 times (then stops flashing for 1 second)
 - Indicator Light flashes 10 times (then stops flashing for 1 second)
 - The current code for this device is: "4830"

REMOTE CODES BEING USED

DEVICE	REMOTE CODE
TV	
CBL	
DVD	
DVR	
SAT	

DEVICE	REMOTE CODE
AMP	
AUX	
VCR	



LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized VIDÃO dealer.

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the ninety-day warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-998-4326 or visit www.sitrands.com.

This warranty applies only under conditions of normal use. Our products are not intended for outdoor use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product. Damage to any external media such as DVD & CD discs, and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall VIDÃO be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL VIDÃO BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold "As Is".

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

8