



VS65U22  
Ver 1.0



USER'S MANUAL  
**65" 4K ULTRA HD TELEVISION**

**Use a VIDÃO HDMI Cable for the Best Possible Video & Sound**

**For technical assistance or troubleshooting  
please call 1-855-998-4326 or visit [www.sibrandsupport.com](http://www.sibrandsupport.com)**



# Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture.
16. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
17. The mains plug is used as the disconnect and shall remain readily operable.
18. This TV is not designed for outdoors installation. Do not expose the TV to rain, as it may result in a fire or an electric shock. Also, do not expose the TV to direct sunlight, as it may heat up and become damaged.



CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN.

AVIS: RISQUE DE CHOC ELECTRIQUE-NE PAS OUVRIR.



## Safety:

TO REDUCE THE RISK OF ELECTRICAL SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS ARE INSIDE. REFER TO QUALIFIED SERVICE TECHNICIAN ONLY.



Dangerous Voltage: The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the users.



Instruction: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

# Safety Instructions

Please read these instructions carefully.

This product complies with all applicable US federal safety requirements, as well as those of the Canadian Standards Association.

## **1. Cleaning**

Always unplug the TV before cleaning. Do not use liquid or aerosol cleaners. Use a soft, slightly damp cloth to clean.

## **2. Water and Moisture**

Do not use this TV near water. Avoid using this TV in an excessively damp environment.

## **3. Stand**

This TV should always be placed on a solid, sturdy surface.

## **4. Ventilation**

To prevent overheating, do not block or obstruct the vent openings on the TV's back panel. Also, avoid placing this TV in a confined area with poor air flow.

## **5. Power Sources**

This TV should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your electronics retailer or local power company.

## **6. Power Cord Polarization**

This TV is equipped with a three-wire grounding type plug, a plug with a third (grounding) pin. As a safety feature, this plug will only fit into a grounded power outlet. If you are unable to insert the plug into the outlet, contact your electrician to replace the obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

## **7. Power Cord Protection**

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the TV.

## **8. Lightning**

 
To protect the TV during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the TV from lightning and power-line surges.

# Safety Instructions

## 9. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the TV be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built up static charges. Article 810 of the National Electrical Code (U.S. A.), ANSI / NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

*Example of Grounding According to National Electrical Code Instructions*

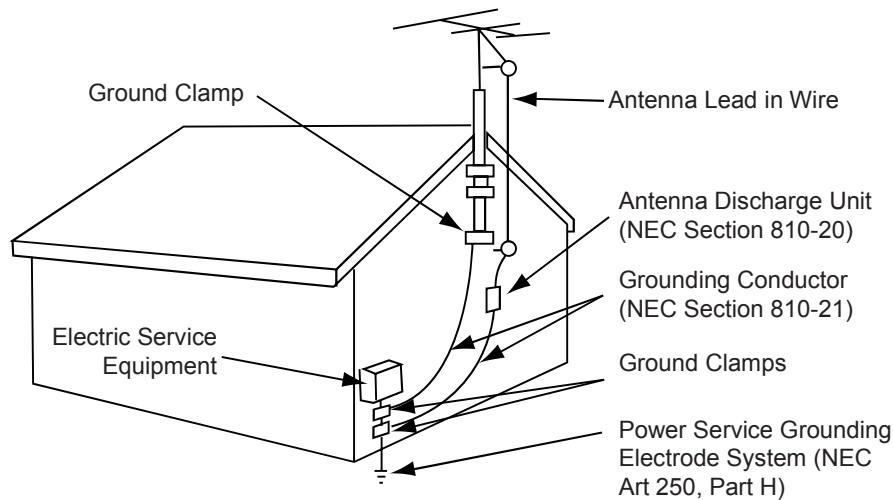

NEC - National Electrical Code

## 10. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall on to power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

## 11. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

## 12. Object and Liquid Entry

Never push objects of any kind into this TV through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on or inside the TV.

## 13. Servicing

Do not attempt to service this TV yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to a qualified service technician.

## 14. Damage Requiring Service

Unplug from the wall outlet and refer servicing to a qualified service technician under the following conditions:

- If the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the TV has been exposed to rain or water.
- If the TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the TV has been dropped or the cabinet has been damaged.
- If the TV exhibits a distinct change in performance.

## 15. Replacement Parts

When replacement parts are required, be sure that only an authorized service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards and void any warranty.

# Safety Instructions

## 16. Safety Check

Upon completion of any service or repairs to this TV, ask the service technician to perform safety checks to determine whether the product is in proper operating condition.

## 17. Wall Mounting

The TV should be mounted to a wall only by a professional. The TV may slide or fall, causing serious injury to a child or adult, and serious damage to the product. Warranty shall be voided.

Wall hanging height of the whole machine shall not exceed 2m.

Machines need to be mounted on rigid surfaces such as cement or concrete.

## 18. Heat

The TV should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

## 19. Remote Control

Do not expose the remote control to liquids, direct sunlight or sources of excessive heat.

## NOTE TO CABLE / TV INSTALLER:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electric Code (USA). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground should be connected to the grounding system of the building, as close to the point of the cable entry as practical.

## FCC REGULATORY INFORMATION:

This television has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This television generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this television does cause interference to other electronic equipment, which can be determined by turning the television off and on, then the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and television.
- Connect the equipment into an outlet on a circuit different from that to which the television is connected.
- Consult your dealer or an experienced radio / TV technician for assistance.


Any changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

### Stability Hazard

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

-  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

 
# Table of Contents

Important Safety Instructions.....	1
Table of Contents .....	5
Introduction.....	6
Installing the Base .....	7
<b>Remote Control</b>	
Battery Install.....	8
Overview .....	9
<b>TV Overview</b>	
Front Panel .....	10
Rear Panel .....	11
<b>Connecting External Devices</b> .....	12
<b>Getting Started With Webos TV</b> .....	13
<b>Settings</b> .....	14
<b>Specifications</b> .....	15

# Introduction

## What's In The Box

Please refer to this guide whenever you have questions about features and functions. This instruction book will get you up and running with the best possible connection type for your devices. Enjoy!

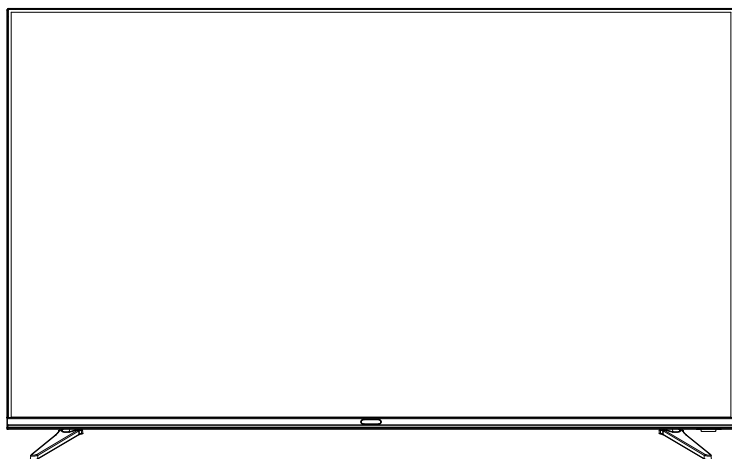

The package includes the following items. Save the carton & packing for future shipping

- **Remote Control**
- **AAA Batteries (2)**
- **Quick Start Guide**
- **User Manual**
- **Child Safety**
- **Pedestal Base**
- **Screws ST4X24 for Pedestal Base (6)**



- Remote Control
- AAA Batteries x 2



- User manual
- Quick Start Guide
- Child Safety



- Pedestal Base




- Screws ST4X24 for Pedestal Base

## Wall Mount Information

 This TV uses a 400x200 VESA mounting bracket attachment pattern. Please take this information with you when purchasing a wall mount for this TV.



# Installing the Base

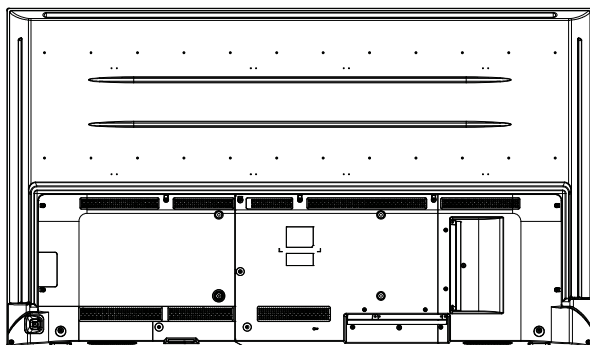


Place the TV face down  
on a soft cloth or cushion.

Position base as shown.



 1

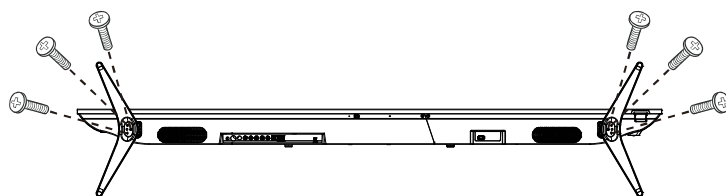

Insert 6 screws ST4X24 (provided)  
through the holes in the bottom  
of the base into the post holes  
and tighten securely.  
Do not over-tighten.

# Remote Control

## Battery Install

Your remote control handset is powered by two (2) AAA type batteries



- Turn the remote over and remove battery cover.



 
- Place two (2) "AAA" batteries into the battery compartment with the "+" and "-" ends facing as indicated.



- Replace the cover

- Effective remote range is approximately 16 feet at an angle of no greater than 30° to the left / right or 20° up / down to the IR sensor.
- To avoid possible damage from battery chemical leakage, remove the batteries if you do not plan to use the remote for an extended period of time. Do not mix batteries of different age and / or type. Always discard used batteries safely.
- Do not expose the remote control to liquids, direct sunlight or sources of excessive heat.
- The IR receiver on the TV will not work properly if the set is in direct sunlight.

NOTE: Improper use of batteries can result in a chemical leakage or explosion.

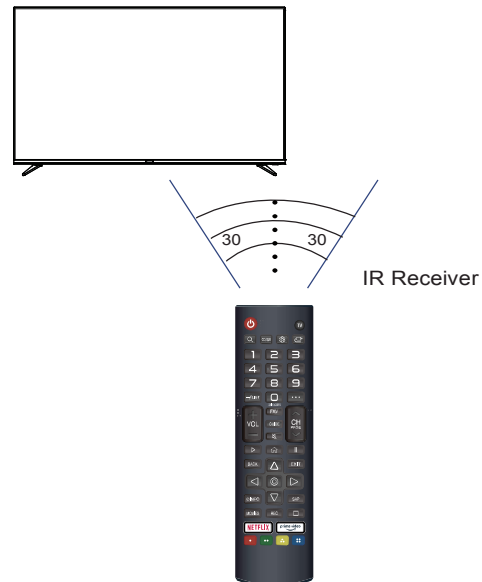

POWER : ON/OFF.

TV : Switch to TV.

Q : Search.

CC : Closed Caption selection:ON/OFF/CC On Mute.

SUB : Enable/disable subtitles.

⚙️ : Enters the Quick Settings menu.

📺 : Selects an input source.

0-9 : Number selection key.

— : Enter multiple program channel number such as 2-1.

LIST : The QUICK ACCESS edit screen appears.

... : It displays the additional buttons on the remote control.

VOL+/- : It adjusts the volume level.

CH PAGE ^/▼ : You can change the programme.

FAV : Press to display a listing of your favorite TV channels.

GUIDE : You can check the programme.

🔇 : Mutes the sound.

▶ : Play.

🏠 : Displays the Home menu.

⏸ : Pause.

BACK : Move to the previous step.

EXIT : Closes the menu.

⊙ : Select current option that's highlighted.

△▽◀▶ : RIGHT/LEFT UP/DOWN buttons to navigate the on-screen menus.

INFO : Press to display the source and channels display.

SAP : Audio Language.

MOVIES : Search Movies.

REC : Launch Record.

 
⏹ : Pause.

NETFLIX : Go to Netflix.

prime video : Go to prime video.



🔴 🟢 🟡 🔵 : Corresponds to various colour functions in the menu or teletext.



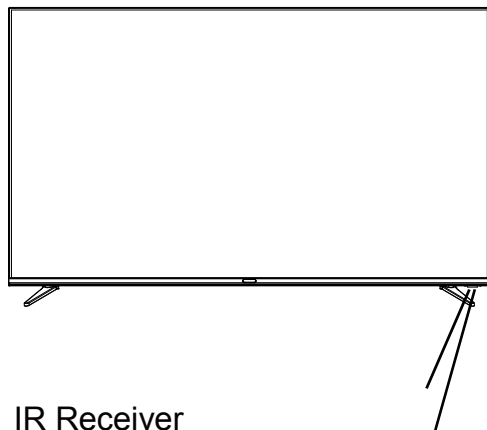

IR Receiver

  A Green/Blue light illuminates when the television power is On.

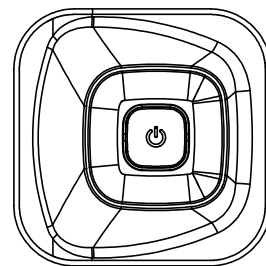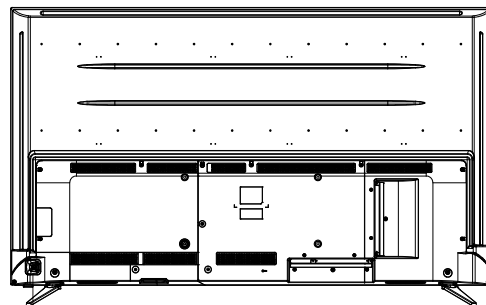


1

1. **POWER/STANDBY** - Press the **POWER** button to turn the TV ON/ OFF (power). The screen image will appear within a few seconds, and the LED will turn on.

# TV Overview
 
## Rear Panel

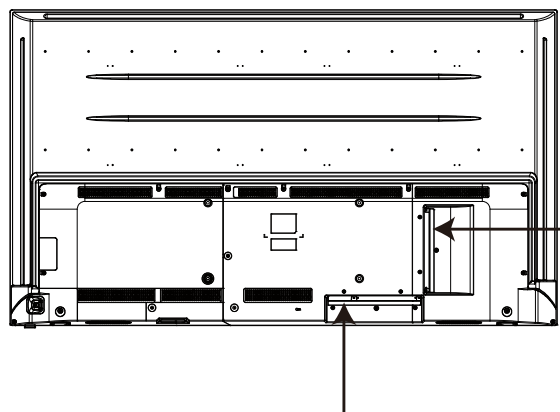

### Wall Mounting

It is recommended that you consult a professional before mounting this TV to a wall.

Use VESA 400x200 wall mount hardware.  
Wall mount screws size: 4 x (M6 x 10)

NOTE: You must remove the pedestal before wall mounting.



**1. RJ45** - RJ45 plug for connecting to external modem or network access equipment.

**2. OPTICAL OUT** - Connect to an AV Receiver for high quality digital audio.

**3. AV** - Connect an external device to the composite VIDEO (V) and AUDIO (L/R) out jacks found on most equipment.

 
**4. USB Input Port** - Connect to portable USB device such as USB flash/hard drive (max storage capacity 400GB, supports MP3 and JPEG).

**5. HDMI1/2/3 IN** - To connect to a High Definition (HD) signal output device, such as a set top box, blu ray disc player or AV receiver.

**6. CABLE-ANTENNA** - Connect an antenna or cable connection for television reception.  
Note: Use an outdoor antenna, cable or satellite for best reception.

**7. EARPHONE** - Connect a stereo headphone for private listening.

# Connecting External Devices

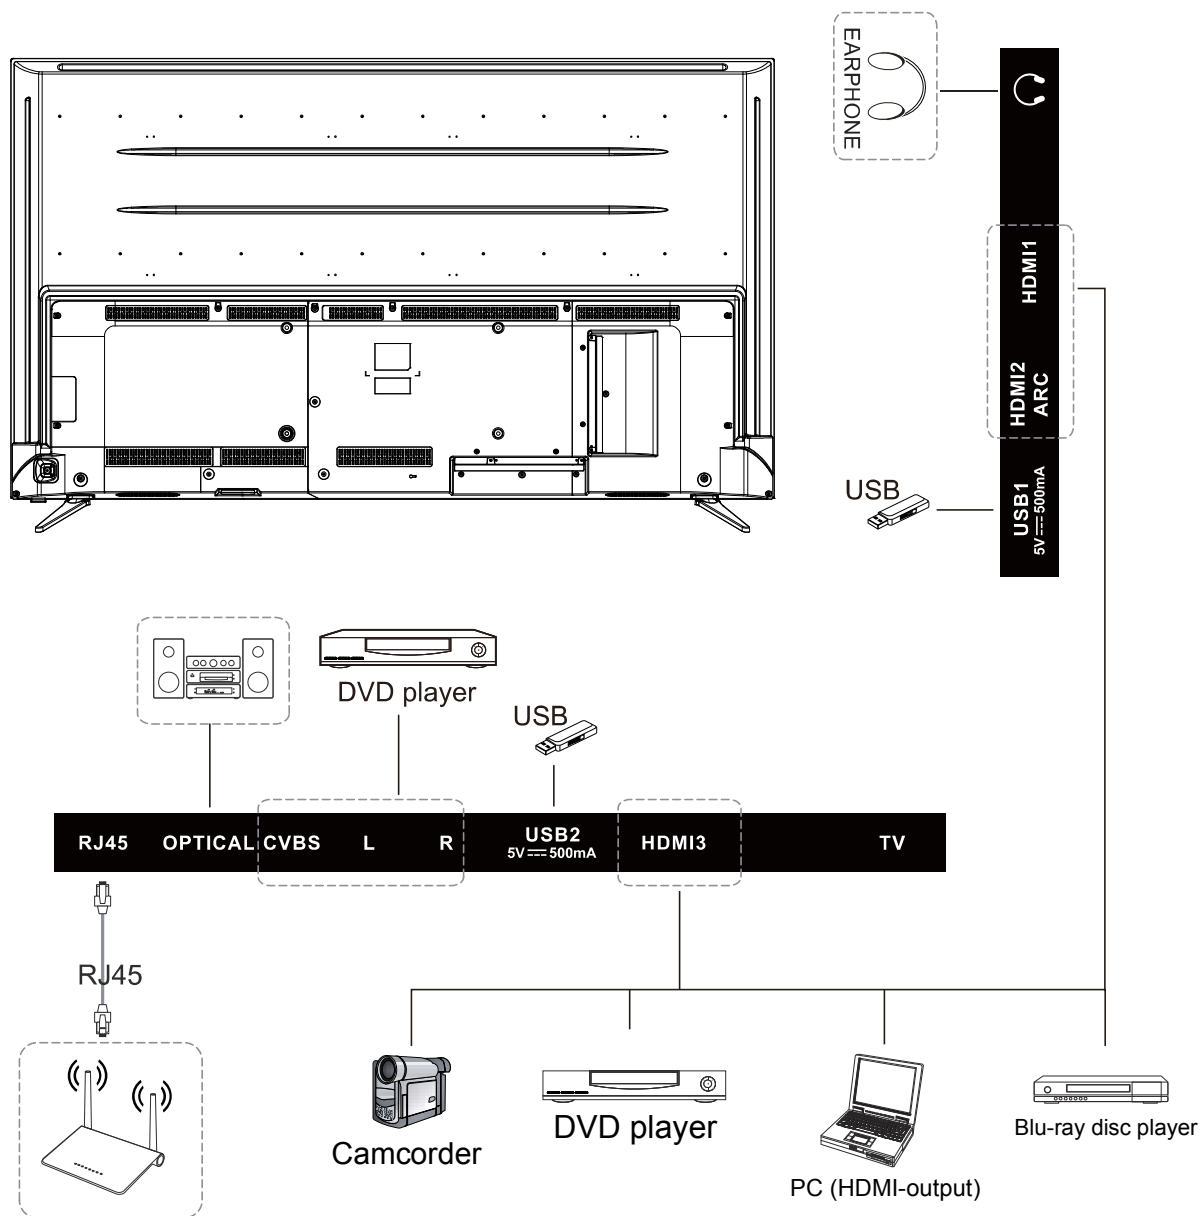


# Getting Started With Webos TV

## Home Tutorial

### Using the Home Feature of the webOS TV

You can open the Home screen by pressing the  button on your remote control.

 You can combine frequently used apps on a single screen and use whichever you want at any time.

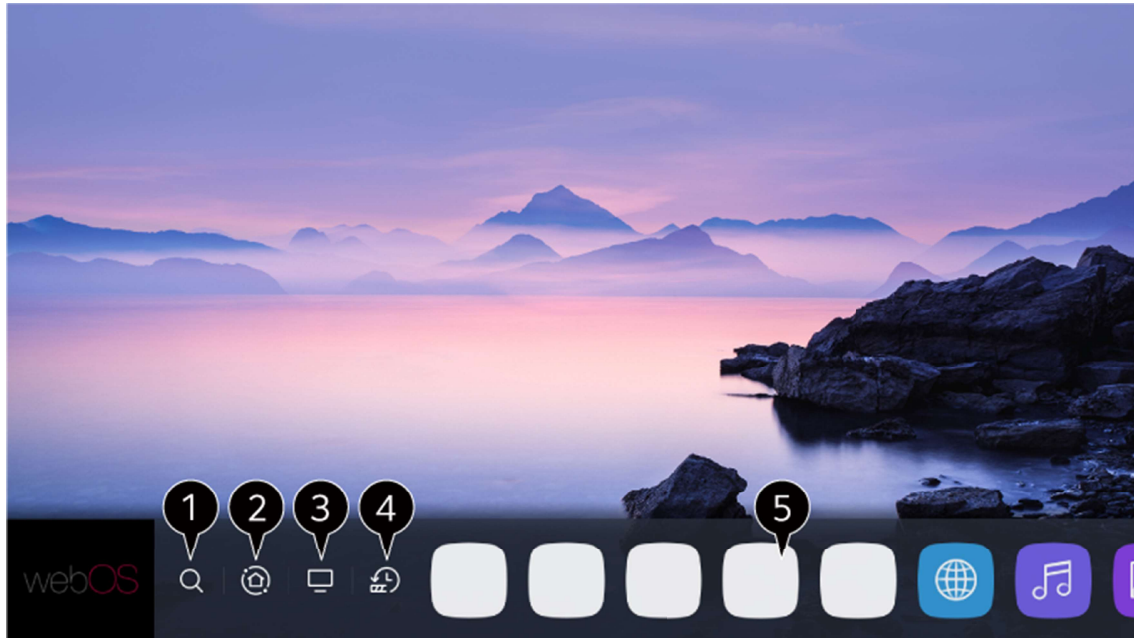

1. Launch **Search**.

To see the details, click the **Enjoying Content Store** → **Content Search** in **User Guide**.


2. Move to the **Home Dashboard**.

You can select or control a device (mobile, external device, Home IoT Devices, etc.) connected to the TV.

For more information, see **Connecting External Devices** → **Using Home Dashboard** in **User Guide**.

3. Move to the TV input you used recently.

4. Move to the recently used app.



Long-press the  button on the remote control or focus on the **Recents**.

You can run or close a recently used app in the list provided in the Preview area at the top.

5. You can run, move, and delete the apps installed on your TV.

Focus on each App area. It provides the Preview at the top.

You can check or run useful features of each app and recommended content on the Preview without entering into the app.


- Some apps may not provide the Preview.
- The home screen will be displayed automatically when the TV is turned on. If you don't want the home screen to be displayed, set **Home Auto Launch** of  →  → **General** → **Home Settings** as **Off**.
- The availability of and access to Contents and Services in device are subject to change at any time without prior notice.


# Settings
 
## Quick Settings

### To Use Setting Function Quickly

Displays a set of light-weight controls quickly and simply such as **Picture Mode**, **Sound Out**, **Sleep Timer** and so on.

Press the  button on the remote control.

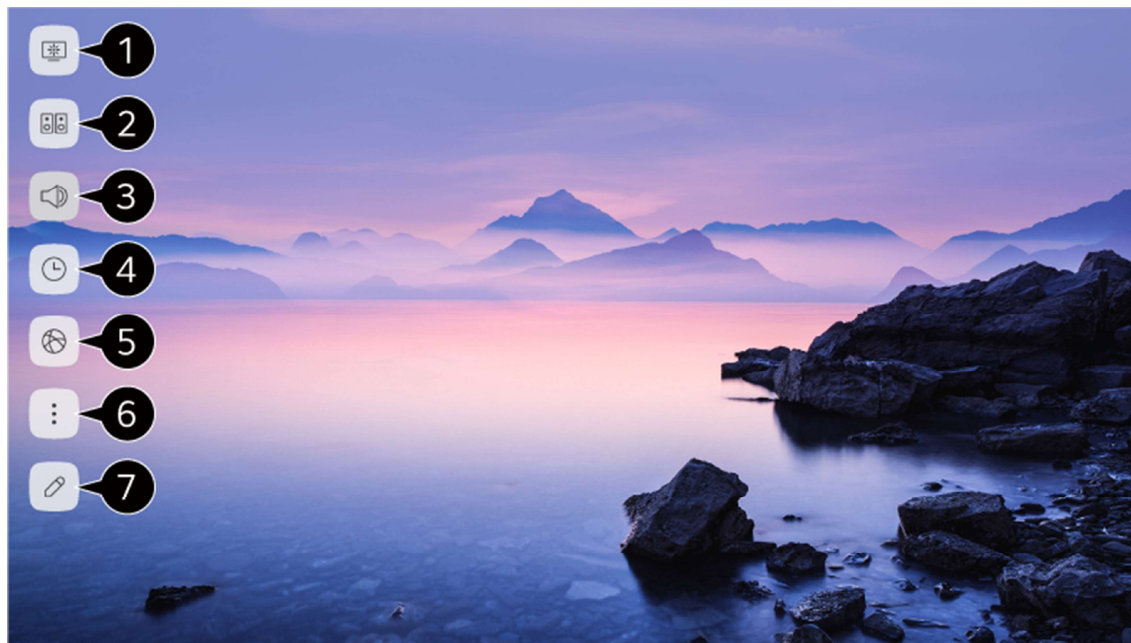

- ① You can set **Picture Mode**.
  - ② You can set **Sound Mode**.
  - ③ You can choose **Sound Out**.
  - ④ You can set **Sleep Timer**.
  - ⑤ Move to the **Connection** screen.
  - ⑥ You can set more options.
  - ⑦ You can add/delete the quick setting items or change their order.
- After entering each item, press and hold the **Wheel (OK)** button on the remote control to go to the corresponding menu



# Specifications

<b>Display</b>	UHD LED
<b>Size (inch)</b>	65" Diagonal
<b>Aspect Ratio</b>	16:9
<b>Digital Compatibility</b>	480p / 720p / 1080i / 1080p / 2160p
<b>Resolution</b>	3840x2160
<b>Brightness (cd/m2)</b>	220
<b>Dynamic Contrast Ratio</b>	5000:1
<b>Vertical Viewing Angle (degrees)</b>	178°
<b>Horizontal Viewing Angle (degrees)</b>	178°
<b>Maximum Colors (millions)</b>	1.07G
<b>Power Consumption</b>	220 W
<b>Audio Power</b>	2 x 8W
<b>Dimension without Stand</b>	56.9" (W) x 33.1" (H) x 3.6" (D)
<b>Weight (may vary <math>\pm</math> 10%)</b>	37 lbs
<b>Input Connections</b>	<div> Composite Video (1)  HDMI (3)  CABLE-ANTENNA (1)  Optical (1)  Earphone (1)  USB (2)  RJ45 (1) </div>



## **LIMITED ONE-YEAR TELEVISION WARRANTY**

We warrant this product to be free from defects in material and workmanship under normal use for a one-year period from the original date of purchase from an authorized VIDAO dealer. We will repair or replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, submit proof of purchase (sales slip) along with the TV and all accessories.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

During the one-year period from the original purchase date, we will service or exchange the TV, at no charge. To obtain warranty service or replacement within the duration of the one-year warranty, please return the product and all accessories to the original place of purchase.

For technical support, visit our website [www.sibrandssupport.com](http://www.sibrandssupport.com) or call the VIDAO Technical Support Center for technical assistance or troubleshooting at 1-855-998-4326, Monday to Saturday, 10:00AM TO 7:00PM EST.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, outdoor use, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as DVD, CD, and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair. Under no circumstances shall VIDAO be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

**UNDER NO CIRCUMSTANCES WILL VIDAO BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

This warranty does not cover re-manufactured units, or product sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.



