



MODEL VW54C ASSEMBLY INSTRUCTIONS

Maximum Weight Capacity:
Top Shelf: 65 Lbs
Bottom Shelves: 25 Lbs Each
Drawers: 15 Lbs Each

THIS INSTRUCTION BOOKLET CONTAINS
IMPORTANT SAFETY INFORMATION. PLEASE
READ AND KEEP FOR FUTURE REFERENCE.

For technical assistance or troubleshooting please call
1-855-998-4326 or visit www.sibrandssupport.com

READ THIS FIRST!

Read all of the warnings and cautions contained in this manual before assembly.

- Do not attempt to assemble this product if you do not understand the instructions.
- Contact a professional if you have any doubts about safe and secure TV furniture assembly.
- Check all the parts carefully to make sure there are no missing or damaged parts.
- Improper assembly may result in damage to your TV, property, and personal injury.
- This product is intended only to support a television of the indicated size and weight combination. Using this product to support televisions heavier than the maximum weight capacity can damage product and cause personal injury.
- Schoenfeld International Inc. and VIDAÖ are not responsible for any personal injury or product damage due to mishandling, incorrect mounting, incorrect assembly or incorrect use of this product.

CHILD SAFETY WARNINGS

How and where you use your television stand is extremely important for Child Safety

As you set up and use your new product, keep all of these safety tips in mind

! Don't let children climb on or play with entertainment system furniture and TVs.

! Remember that children can become excited while watching a program, especially on a "larger than life" TV. Make sure to place or install the TV stand where it cannot be pushed, pulled over, or knocked down.

! Make sure that you route all cords and cables so that they cannot be pulled or grabbed by curious children.

WARNINGS

- This product is intended only to support a television of the indicated size and weight combination. Using this product to support televisions or other products heavier than the maximum weight capacity can damage equipment and cause personal injury.
- Schoenfeld International Inc. and VIDAÖ are not responsible for any personal injury or product damage due to mishandling, incorrect mounting, incorrect assembly or incorrect use of this product.

- Do not force the bolts into the hole or use an electric drill to fasten any bolts. This could damage the equipment or cause personal injury.
- A large television requires two people to lift. Schoenfeld International and VIDAÖ are not responsible for equipment damage or personal injury due to mishandling.

FOR YOUR SAFETY, PLEASE FOLLOW THESE PRECAUTIONS:

- ! Always remove the TV and other equipment from the furniture prior to moving the assembled unit
- ! Be careful when moving the assembled furniture when there is equipment of any kind located on the furniture as this may cause the shelves and other parts to become unstable and fall.
- ! When in use, this furniture must be placed on a flat, level and solid surface.
- ! Do not lean on or place any force on the TV when it is on the TV stand. .
- ! Do not climb or step on the stand.
- ! Do not bang into or place your own weight on the shelves
- ! Do not place any items on the shelves or mounts which may exceed the maximum weight limits.
- ! Always place the heaviest component (except for your TV) on the bottom shelf

Schoenfeld International Inc. will not be responsible for failure to assemble as directed or for the improper assembly, use or handling of this stand.

VEILLER Á RESPECTER CES MESURES DE PRECAUTION!

- ! TOUJOURS ENLEVER LE TÉLÉVISEUR ET AUTRE ÉQUIPEMENT AVANT DE DÉPLACER LE MEUBLE ASSEMBLÉ.
- ! DÉPLACER LE MEUBLE AVEC PRÉCAUTION UNE FOIS QUE LE PLATEAU EN VERRE A ÉTÉ POSÉ OU LORSQU'IL Y A DU MATERIEL PLACÉ SUR LE MEUBLE CAR CELA PEUT CAUSER LE DÉCROCHEMENT ET LA CHUTE DES PLATEAUX ET AUTRES ÉLÉMENTS.
- ! DURANT L'UTILISATION, LE MEUBLE DOIT ÊTRE POSÉ SUR UNE SURFACE PLATE, SOLIDE ET HORIZONTALE.
- ! NE PAS S'APPUYER CONTRE LE TÉLÉVISEUR LORSQU'IL EST POSÉ SUR LE MEUBLE.
- ! NE PAS GRIMPER NI MARCHER SUR LE MEUBLE.
- ! NE PAS TAPER NI S'APPUYER SUR LE PLATEAU EN VERRE.

 
Schoenfeld International Inc. & VIDAO decline toute responsabilité en cas d'assemblage non conforme aux instructions ou pour l'assemblage, l'utilisation ou la manutention incorrects de ce meuble.

POR SU SEGURIDAD TENGA LAS SIGUIENTES PRECAUCIONES :


- ! SIEMPREQuite el televisor y cualquier otro equipo del mueble antes de mover la unidad armada.
- ! TENGA CUIDADO AL MOVER LA UNIDAD ARMADA UNA VEZ INSTALADO EL ESTANTE DE VIDRIO Y/O CUANDO HAYA ALGUN EQUIPO EN EL MUEBLE YA QUE ESTO PODRÍA AFLOJAR EL ESTANTE Y OTROS ARTÍCULOS Y HACER QUE SE CAIGAN.
- ! EL MUEBLE DEBE ESTAR UBICADO EN UNA SUPERFICIE PLANA, SÓLIDA Y NIVELADA CUANDO SE LO ESTE UTILIZANDO.
- ! NO INCLINE EL TELEVISOR CUANDO ESTE EN EL SOPORTE PARA TV.
- ! NO SE SUBA NI SE PARE SOBRE EL SÓPORTE.
- ! NO GOLPEE EL ESTANTE DE VIDRIO NI SE APOYE CON SU PESO SOBRE EL MISMO.

Schoenfeld International Inc. & VIDAO no se hara responsable en caso de que no se instale la base segun las instrucciones, ni de la instalación, uso o manejo incorrectos de esta base.


PARTS

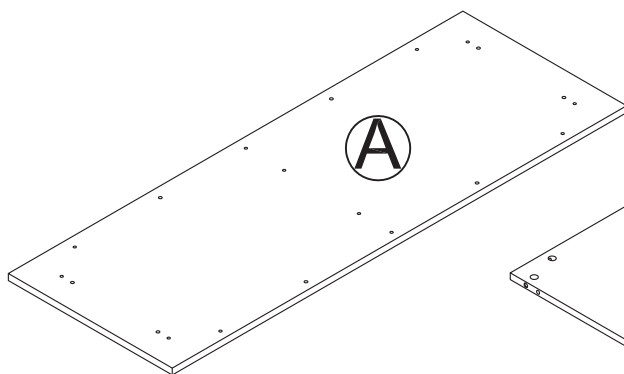


TOP

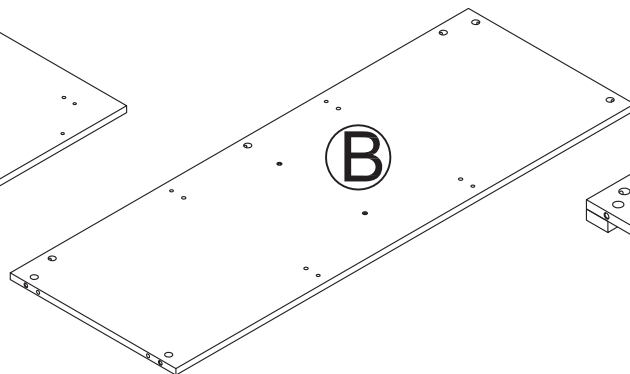 


FIXED SHELF

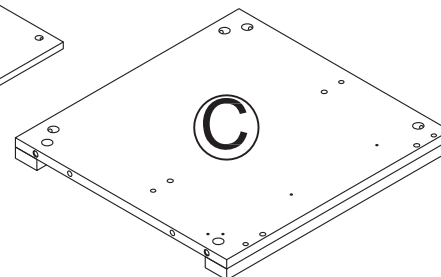 


LEFT SIDE PANEL

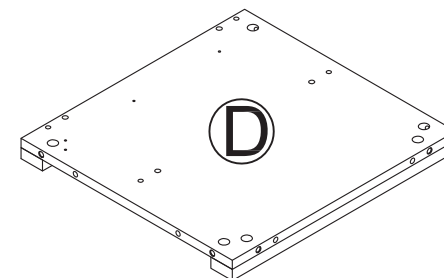 


RIGHT SIDE PANEL

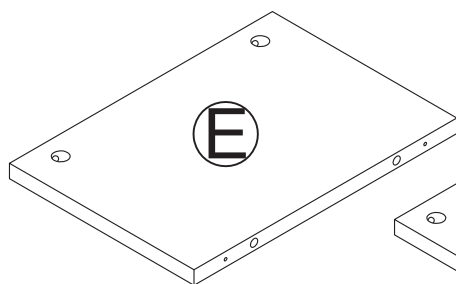 


TOP PARTITION

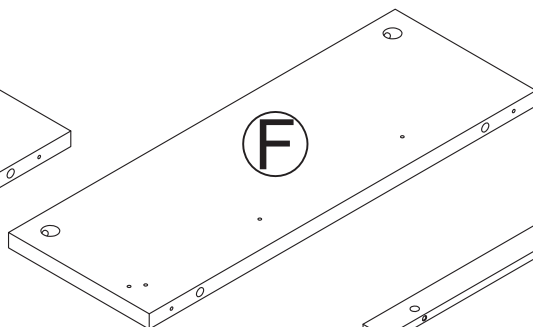 


LOWER PARTITION
QTY: 2PCS

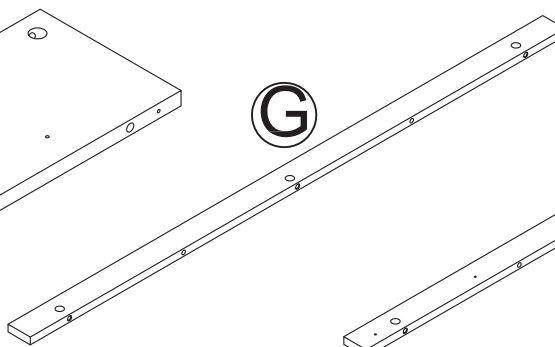 

TOP RAIL

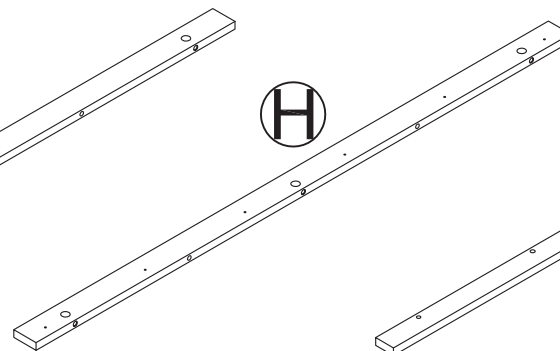 


BACK RAIL

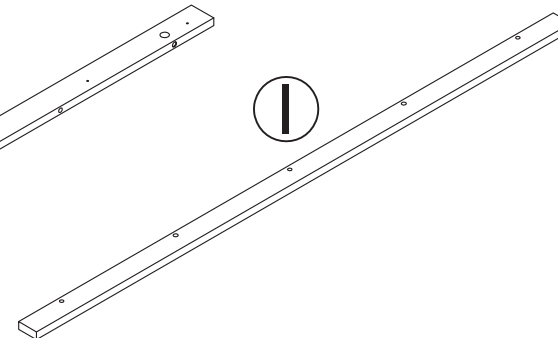 

MIDDLE RAIL


PARTS

 J

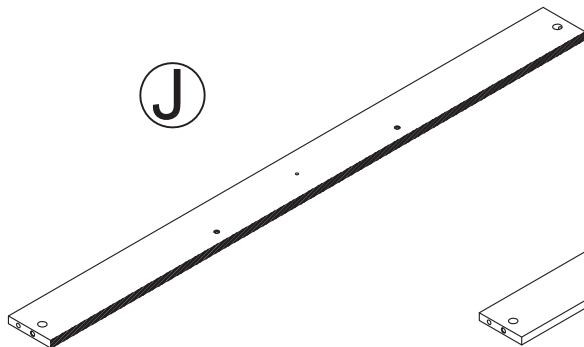


FRONT BOTTOM SURPORT

 K

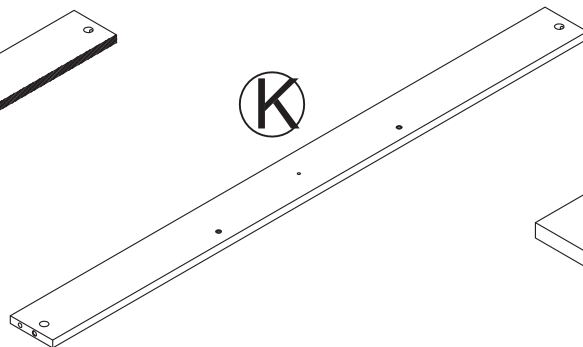


REAR BOTTOM SURPORT

 L

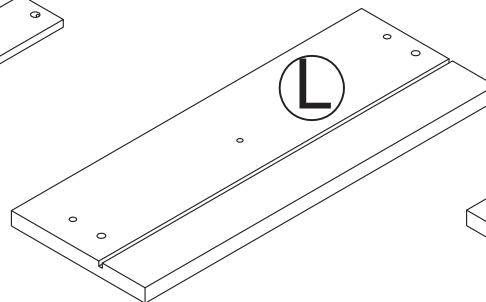


LEFT DRAWER FRONT

 M

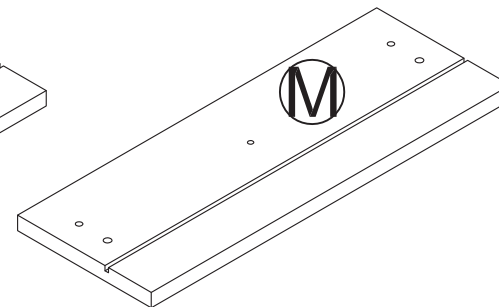


MIDDLE DRAWER FRONT

 N

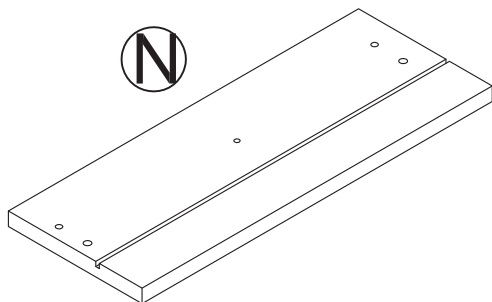


RIGHT DRAWER FRONT

 O

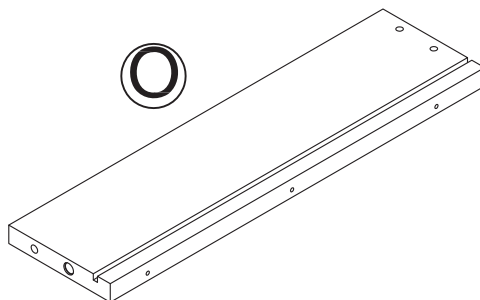


LEFT DRAWER SIDE
QTY: 3PCS

 P

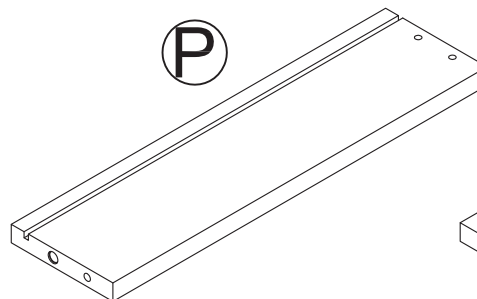


RIGHT DRAWER SIDE
QTY: 3PCS

 
Q

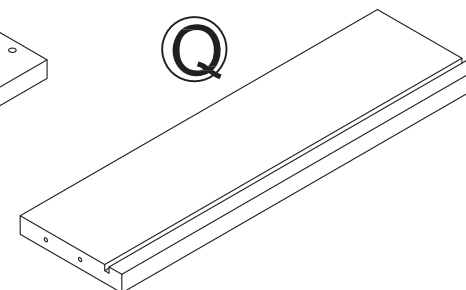


DRAWER BACK
QTY: 3PCS

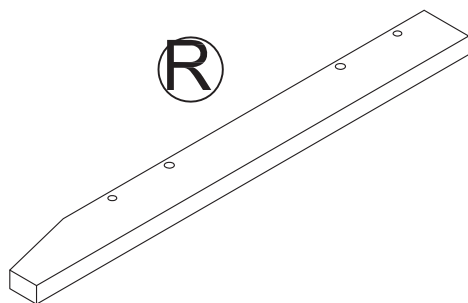 


FRONT LEFT LEG

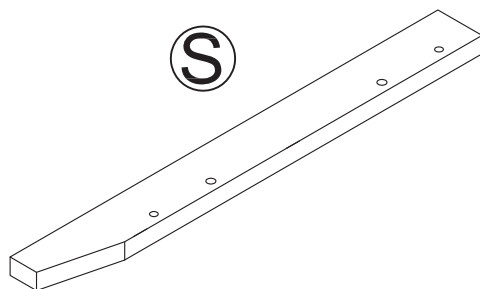 


FRONT RIGHT LEG

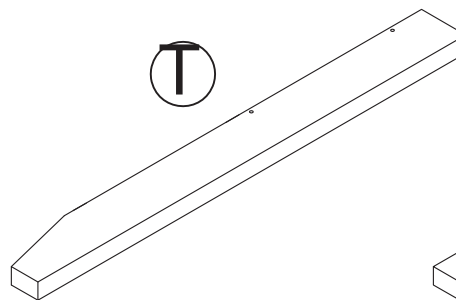 


REAR LEFT LEG

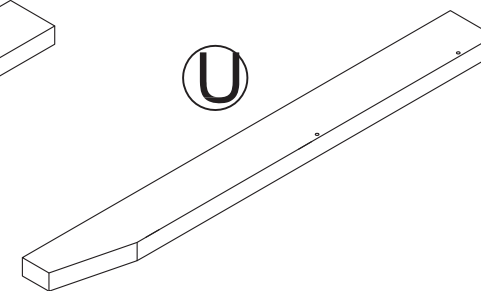 


REAR RIGHT LEG

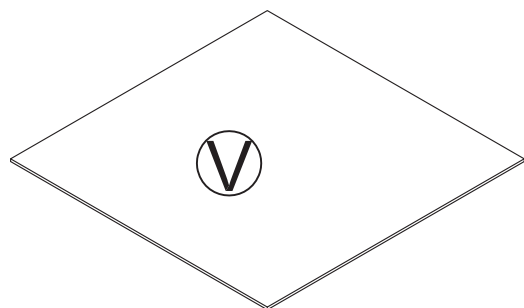 


DRAWER BOTTOM
QTY: 3PCS

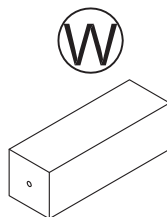 


FOOT
QTY: 2PCS

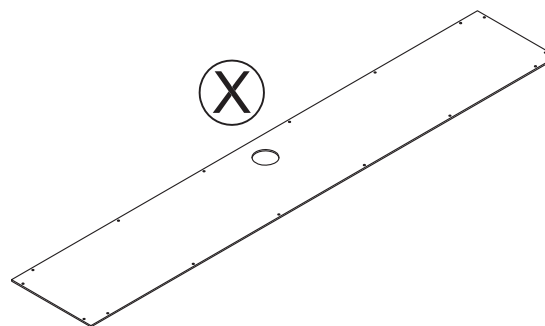 


BACK PANEL

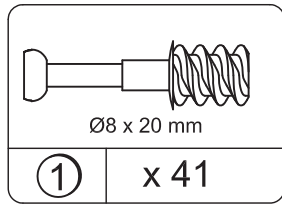 


CAM BOLT

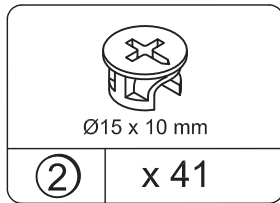 


CAM LOCK

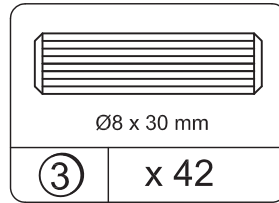 


WOOD DOWEL

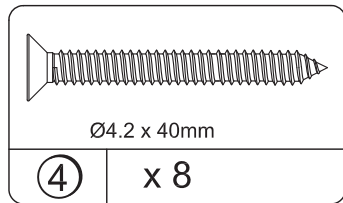 


SCREW

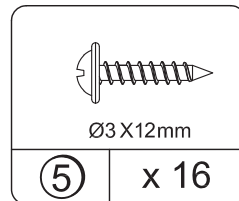 


SCREW

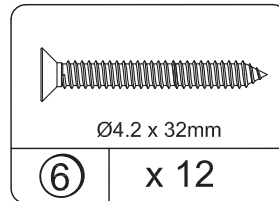 


SCREW

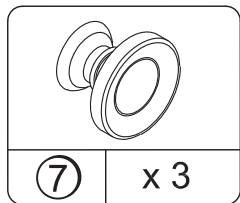 


HANDLE

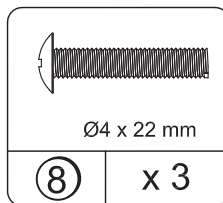 


BOLTS

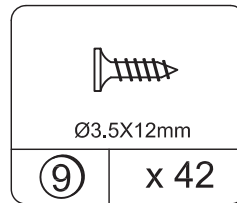 

SCREW

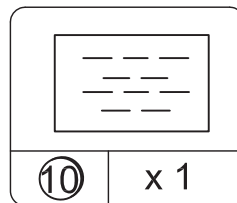 


WARNING LABEL

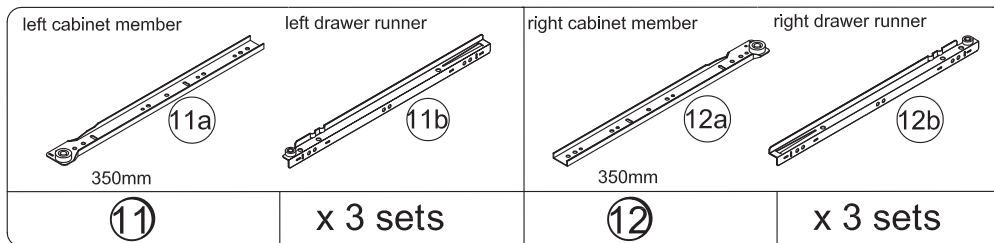 


METAL SLIDE

This illustration shows how the cam fastening system works.

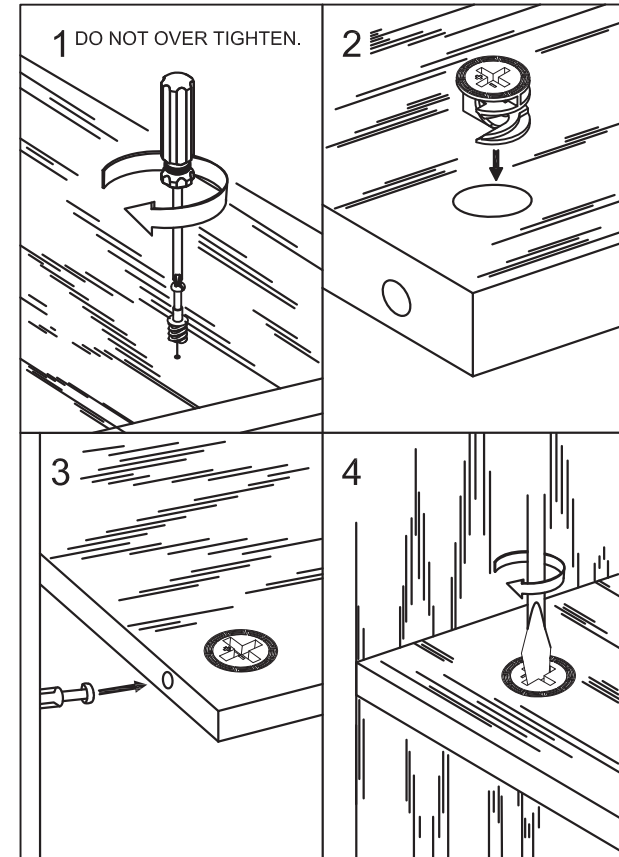 


1

 - Insert Wood Dowels (3) into the holes of Side Panels (C&D) and Fixed Panel (B) as below shown.
- Screw CAM Bolts (1) into the holes of Top (A), Side Panels (C&D), Fixed Panel (B) and Legs (R,S,T&U) as below shown.

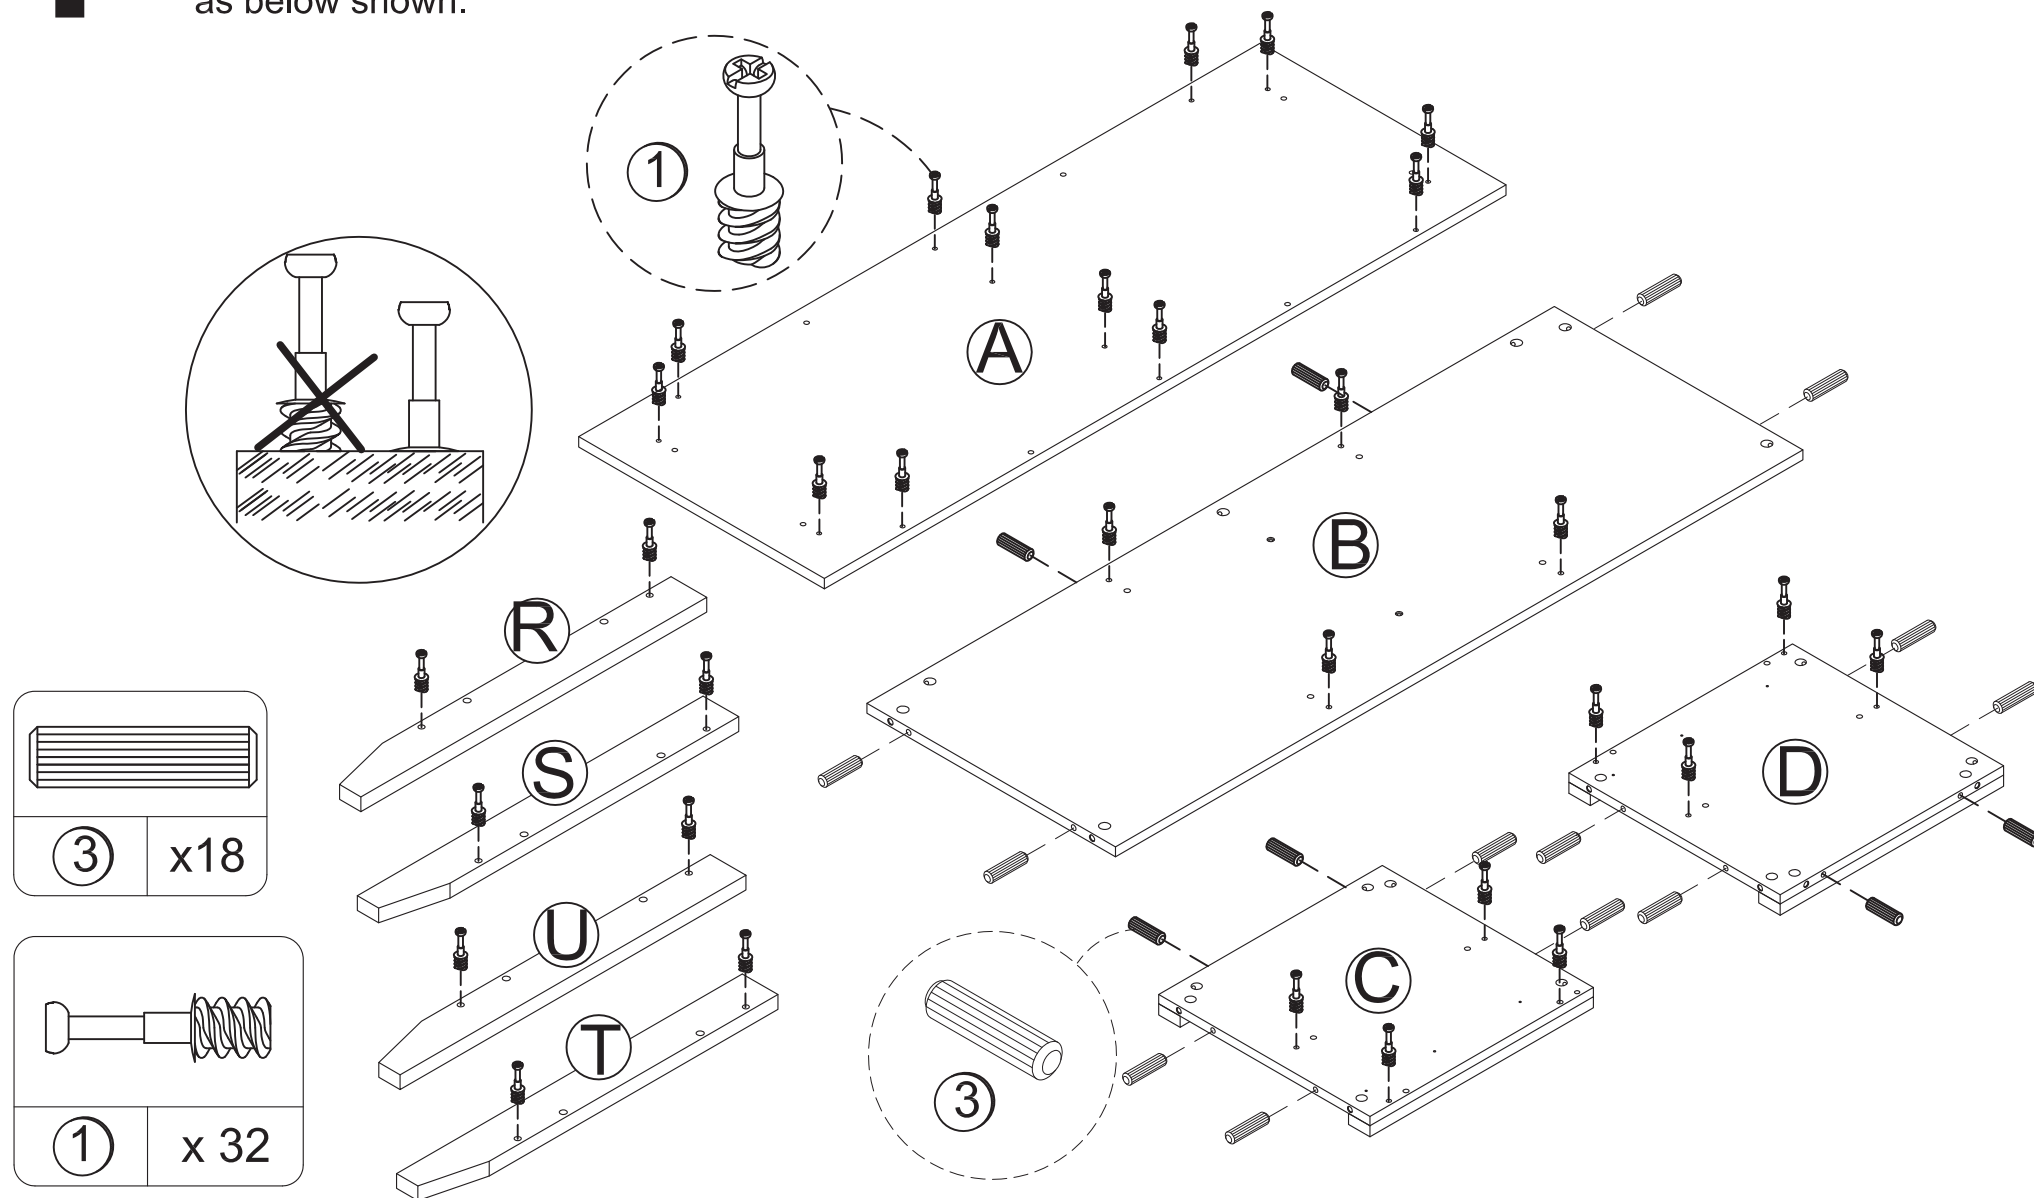


2

 - Insert Wood Dowels (3) into the holes of Drawer side (O&P) as below shown.
- Screw CAM Bolts (1) into the holes of Drawer front (L,M&N) and Middle Rail (I) as below shown.







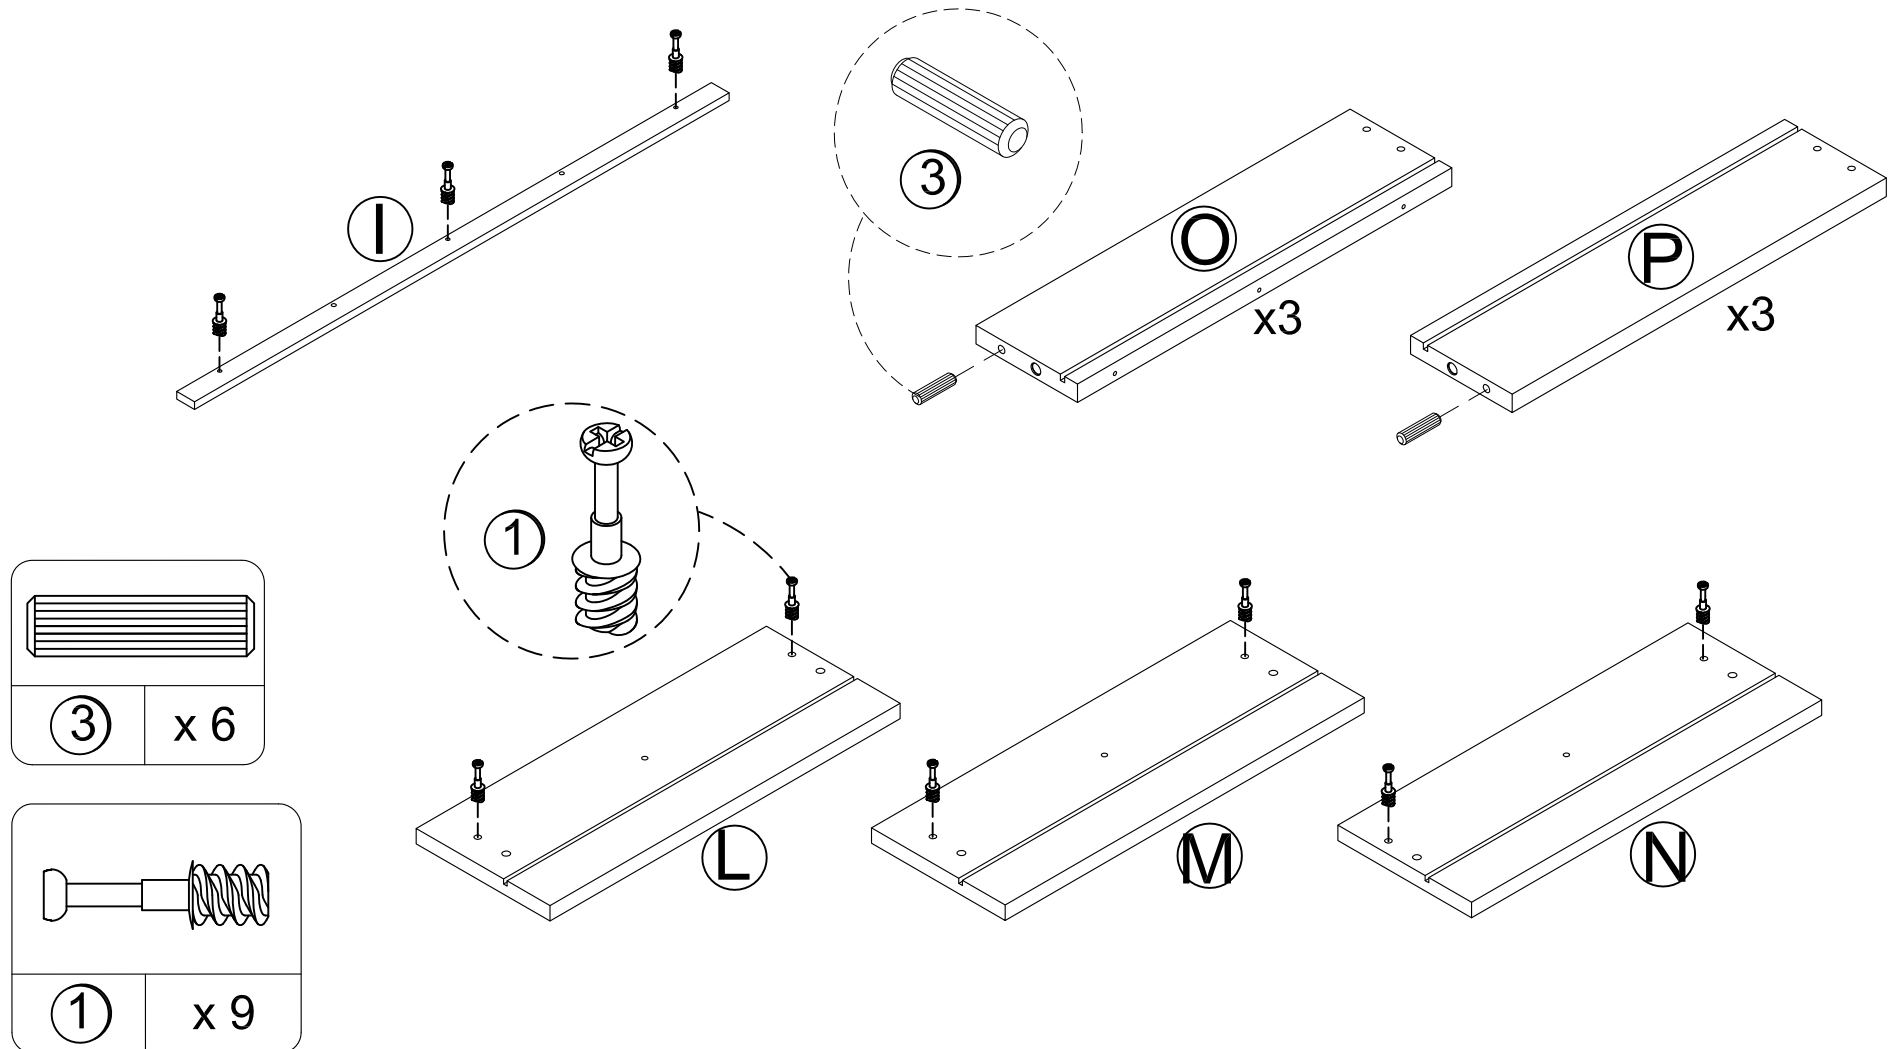


3

 - Attach legs (R,S,T&U) to Side Panels (C&D) with CAM Locks (2) as below shown.
- Attach Metal Slides (11a&12a) to Side Panels (C&D) with Screws (9) as below shown.


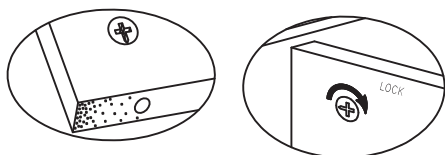


Proper orientation of CAM LOCK

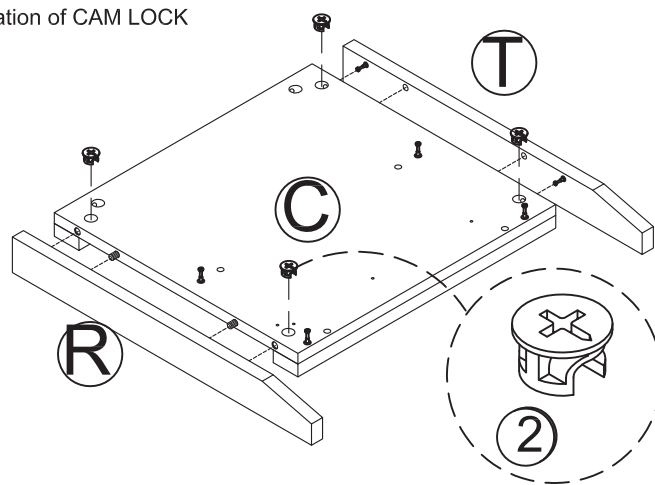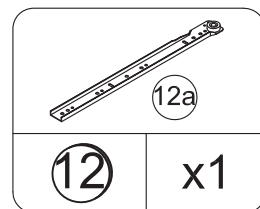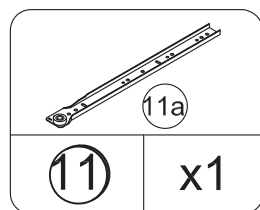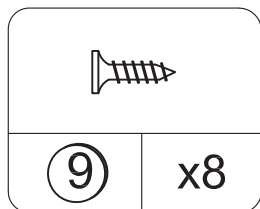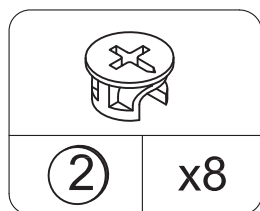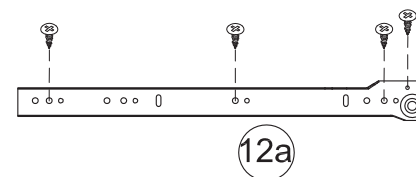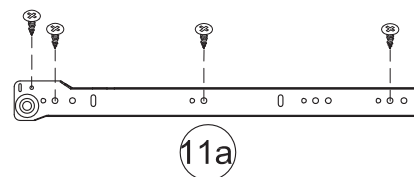       


R

  2

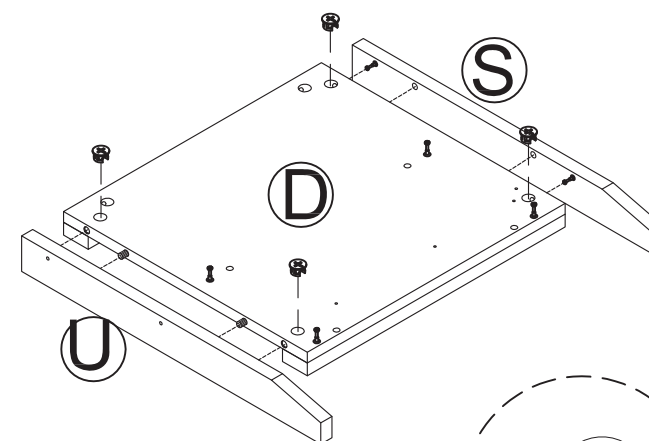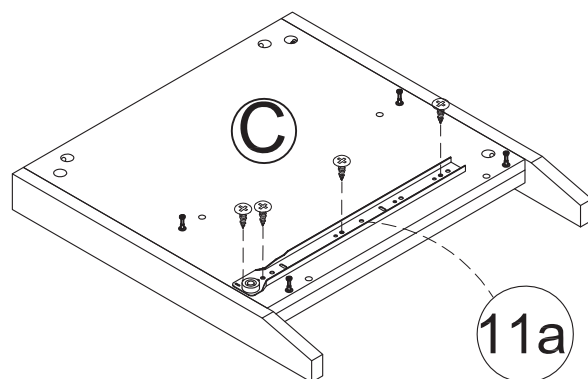


U

 9

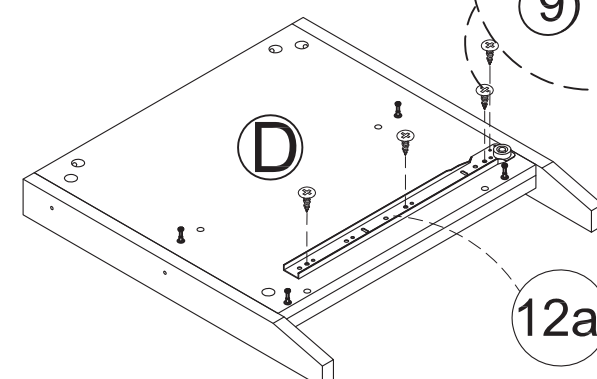


4

 - Insert Wood Dowels (3) into the holes of Partitions (E&F) and Rails (G&H) as below shown.

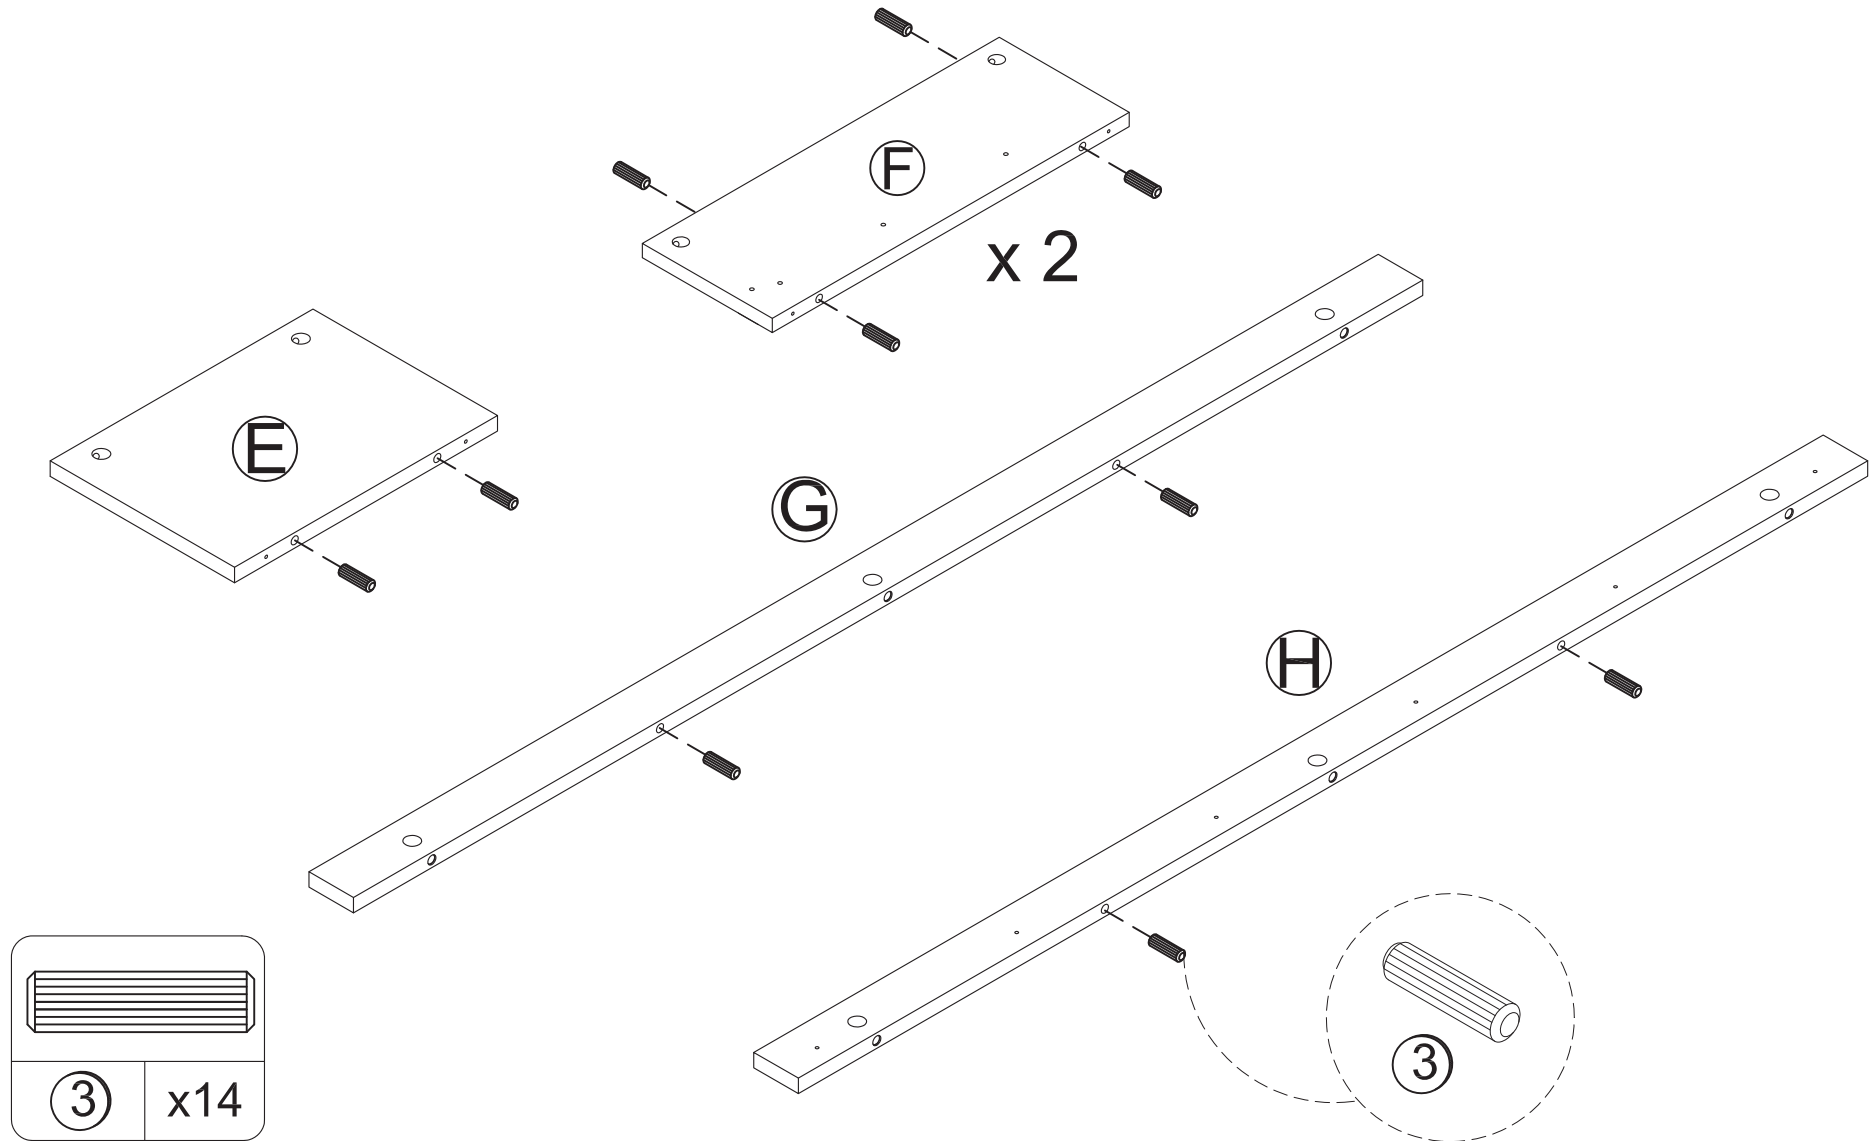



5

 - Attach Middle Rail (I) to Fixed Panel (B) with CAM Locks (2) as below shown.
- Attach Rails (G&H) to Top (A) with CAM Locks (2) as below shown.

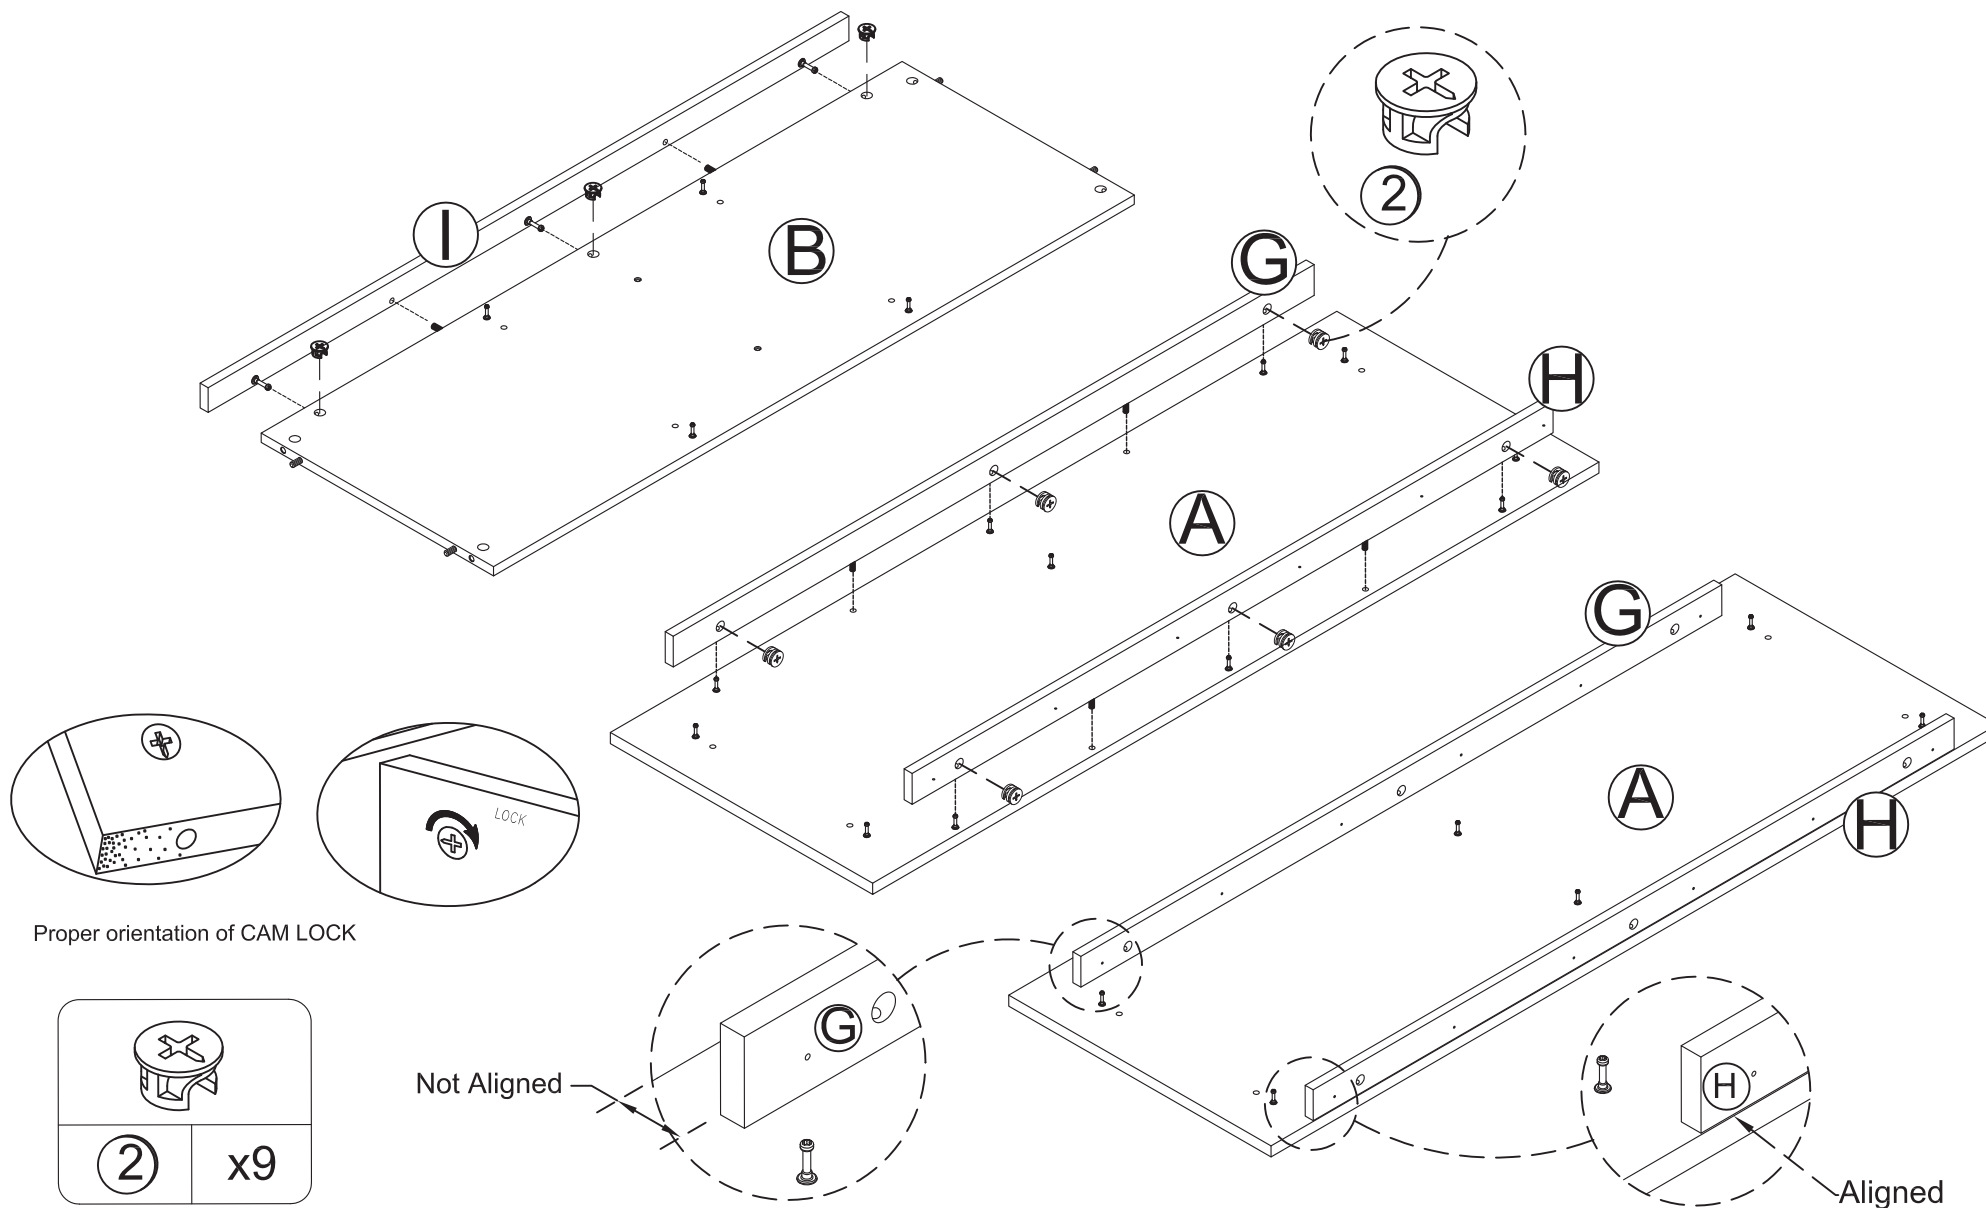


6

  - Attach Metal slides (11a & 12a) to Lower partitions (F) with Screws (9) as below shown.

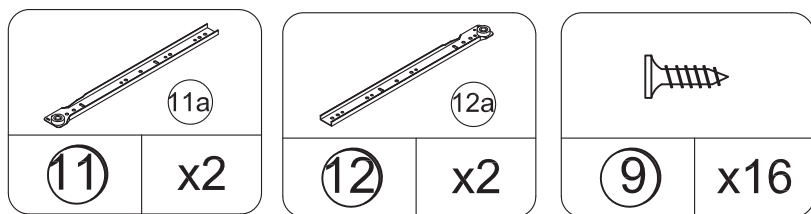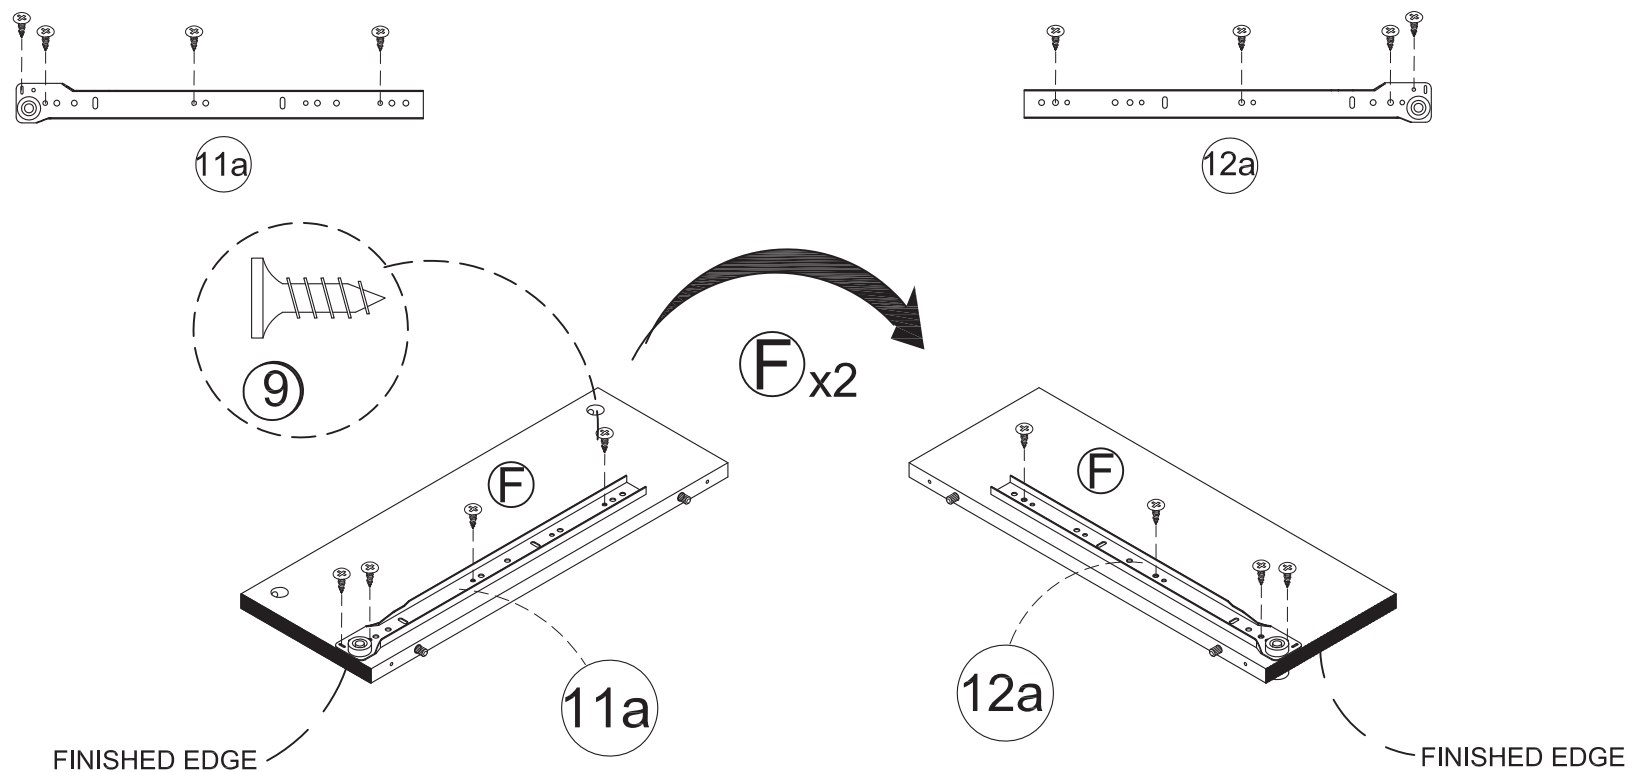




7

 - Attach Partitions (E&F) to Fixed Panel (B) with CAM Locks (2) and Screws (4) as below shown.

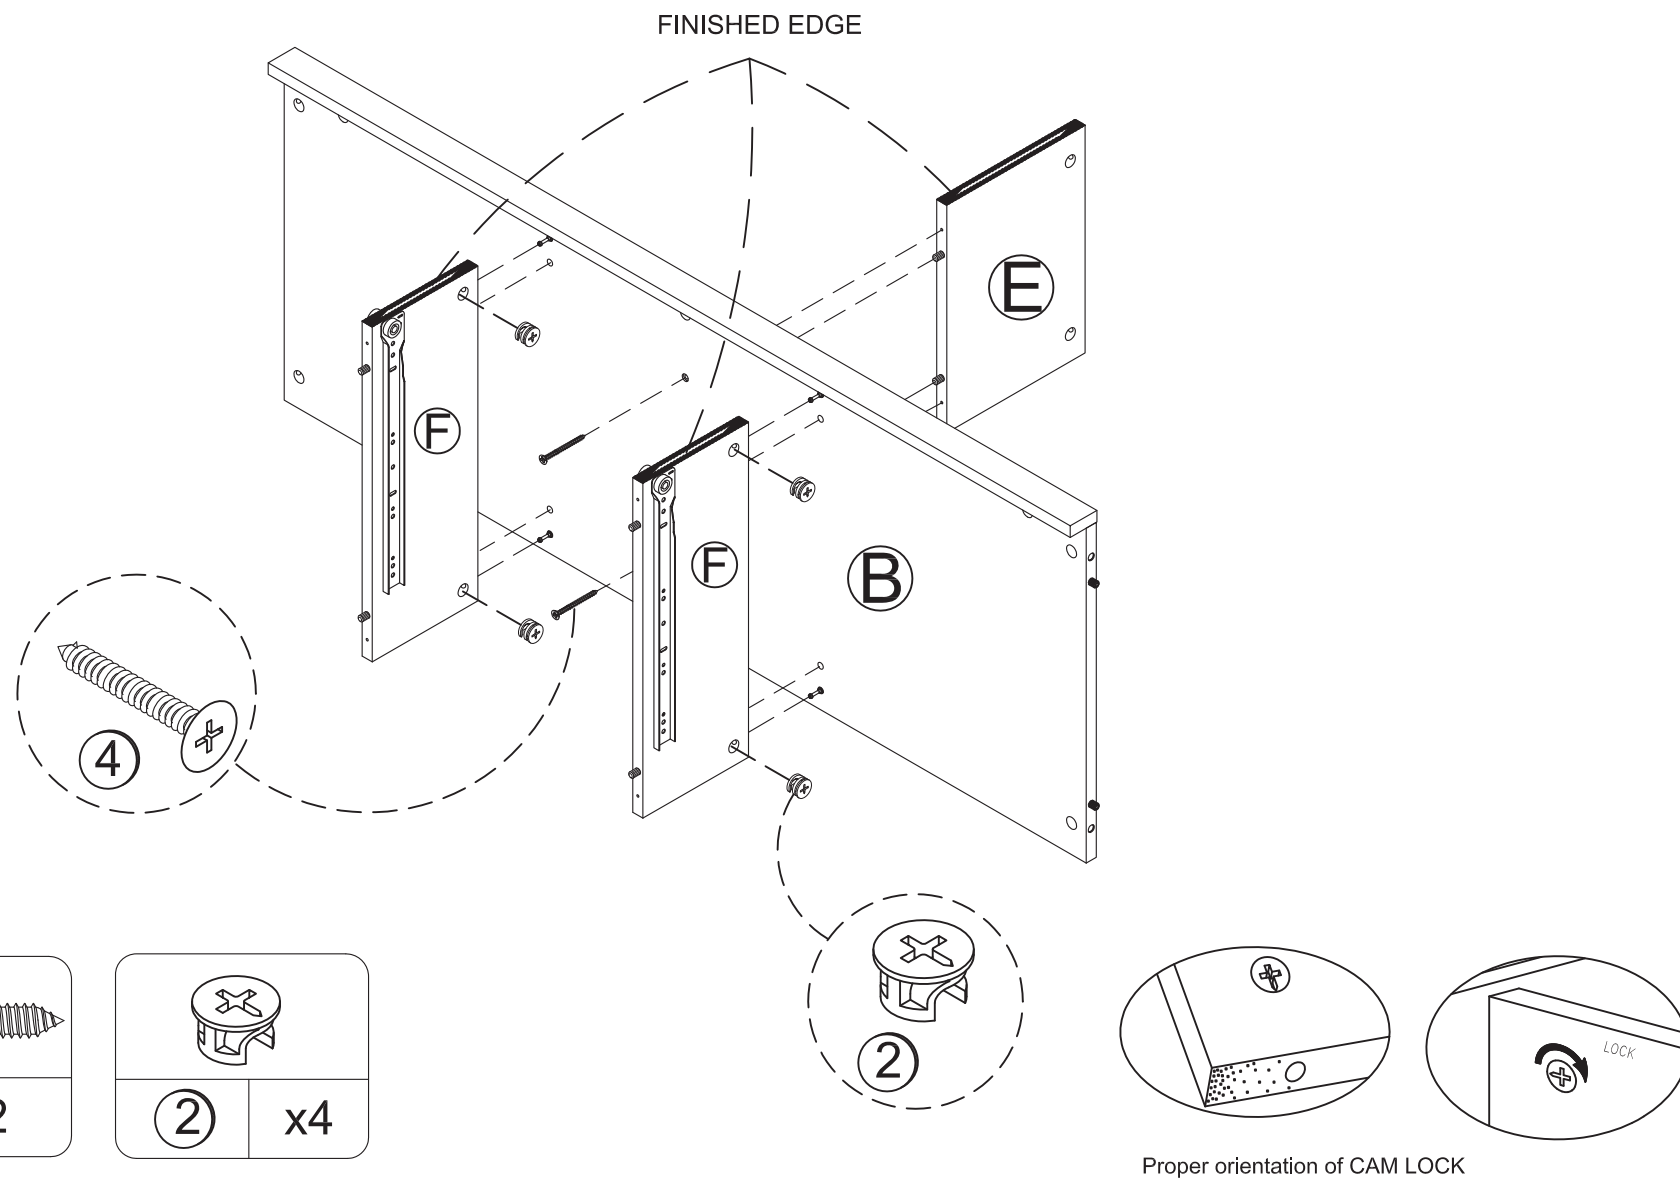


8

   - Attach Feet (W) to Bottom Supports (J&K) with Screws (4) as below shown.
- Insert Wood Dowels (3) into the holes of Bottom Supports (J&K) as below shown.

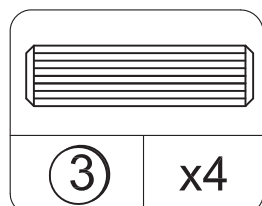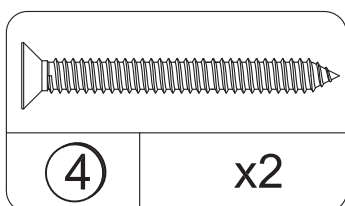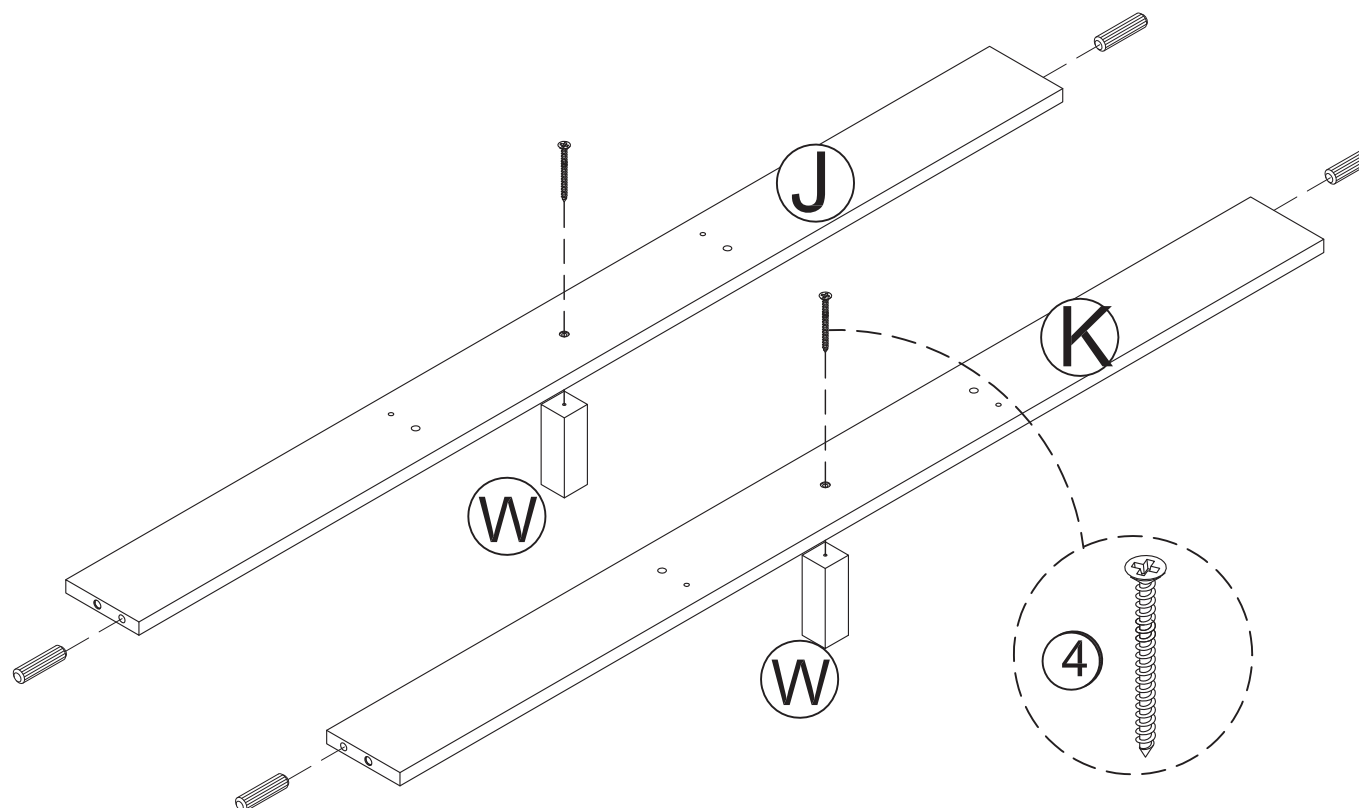




9

 - Attach Bottom Supports (J&K) to Lower Partitions (F) with Screws (4) as below shown.

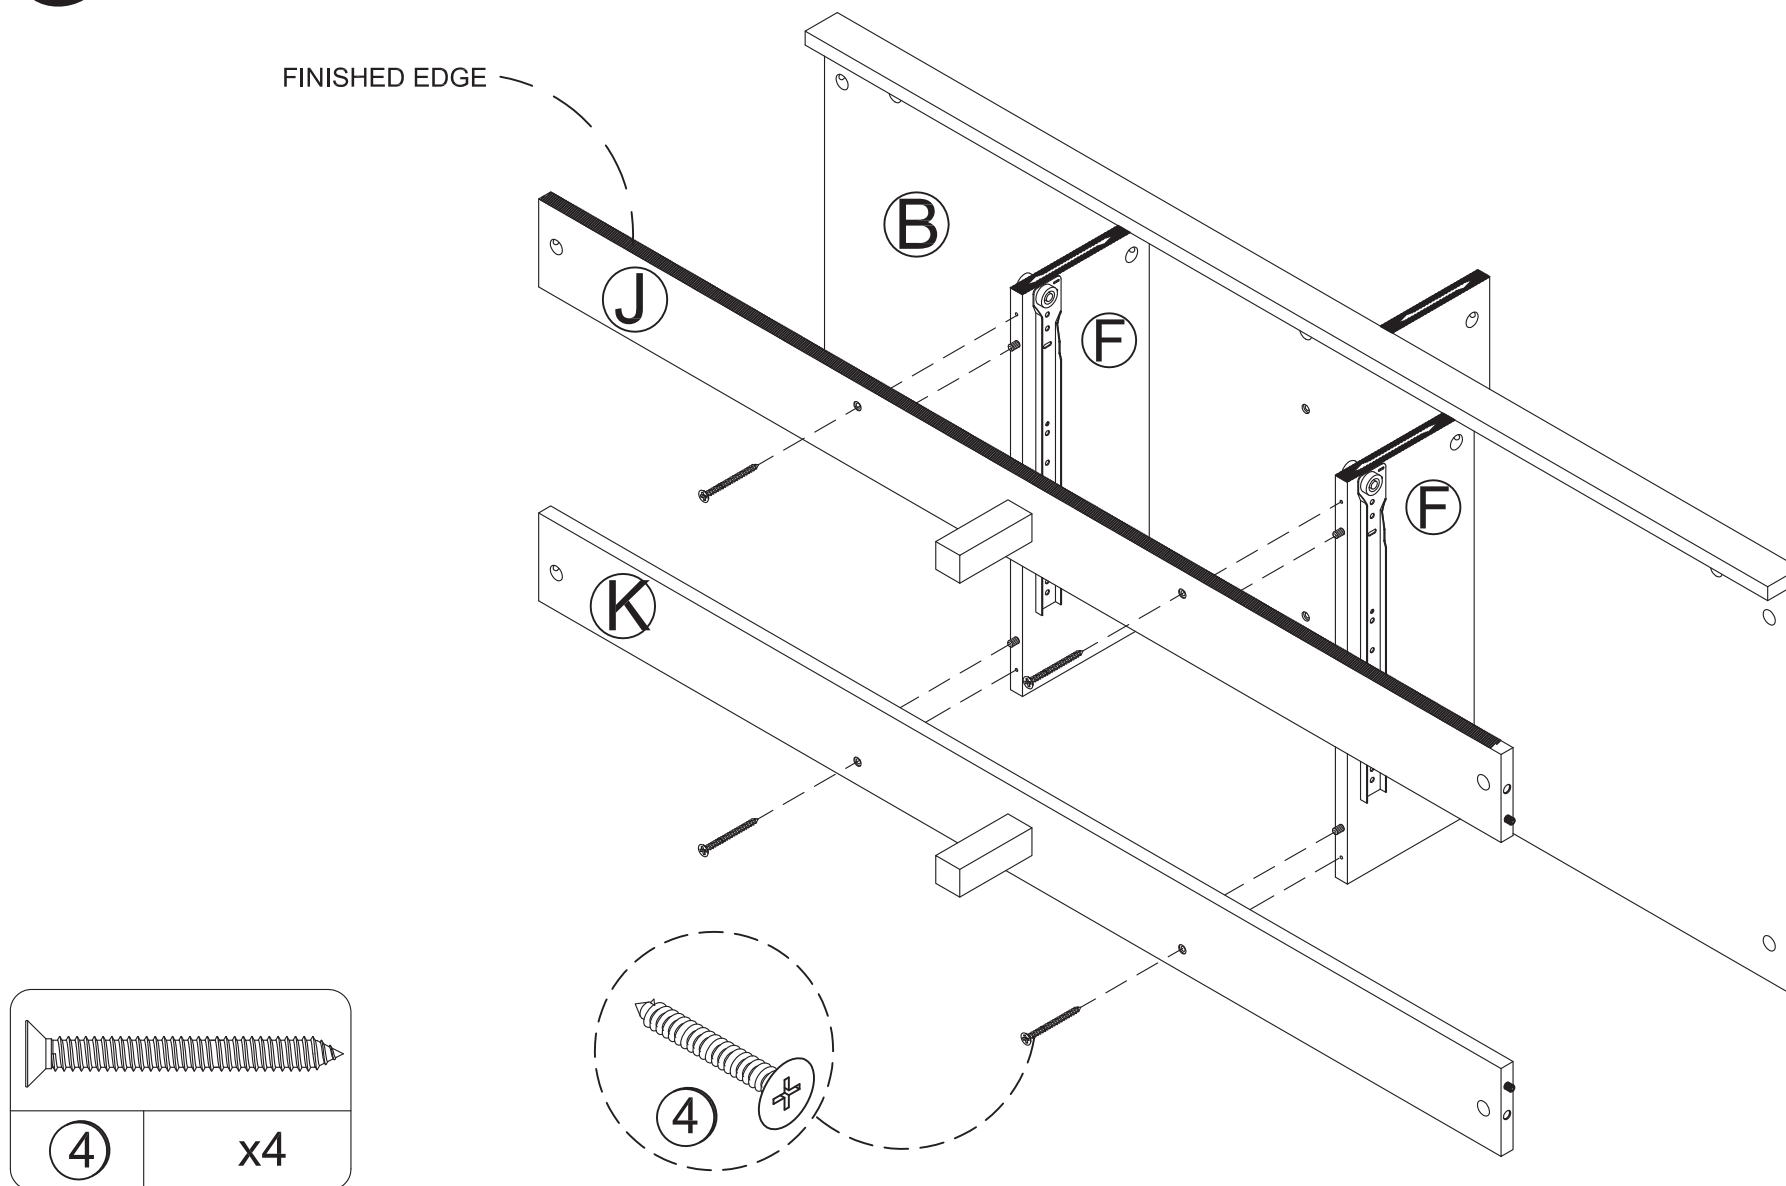

10

   - Attach Side Panels (C&D) to Fixed Panel (B) and Bottom Supports (J&K) with CAM Locks (2) as below shown.
- Attach Rails (G&H) to Top (A) with CAM Locks (2) as below shown.

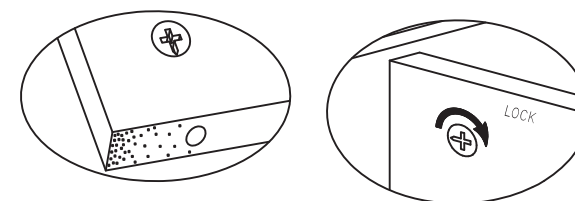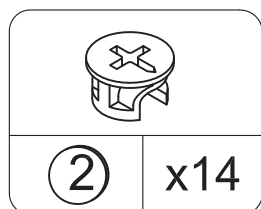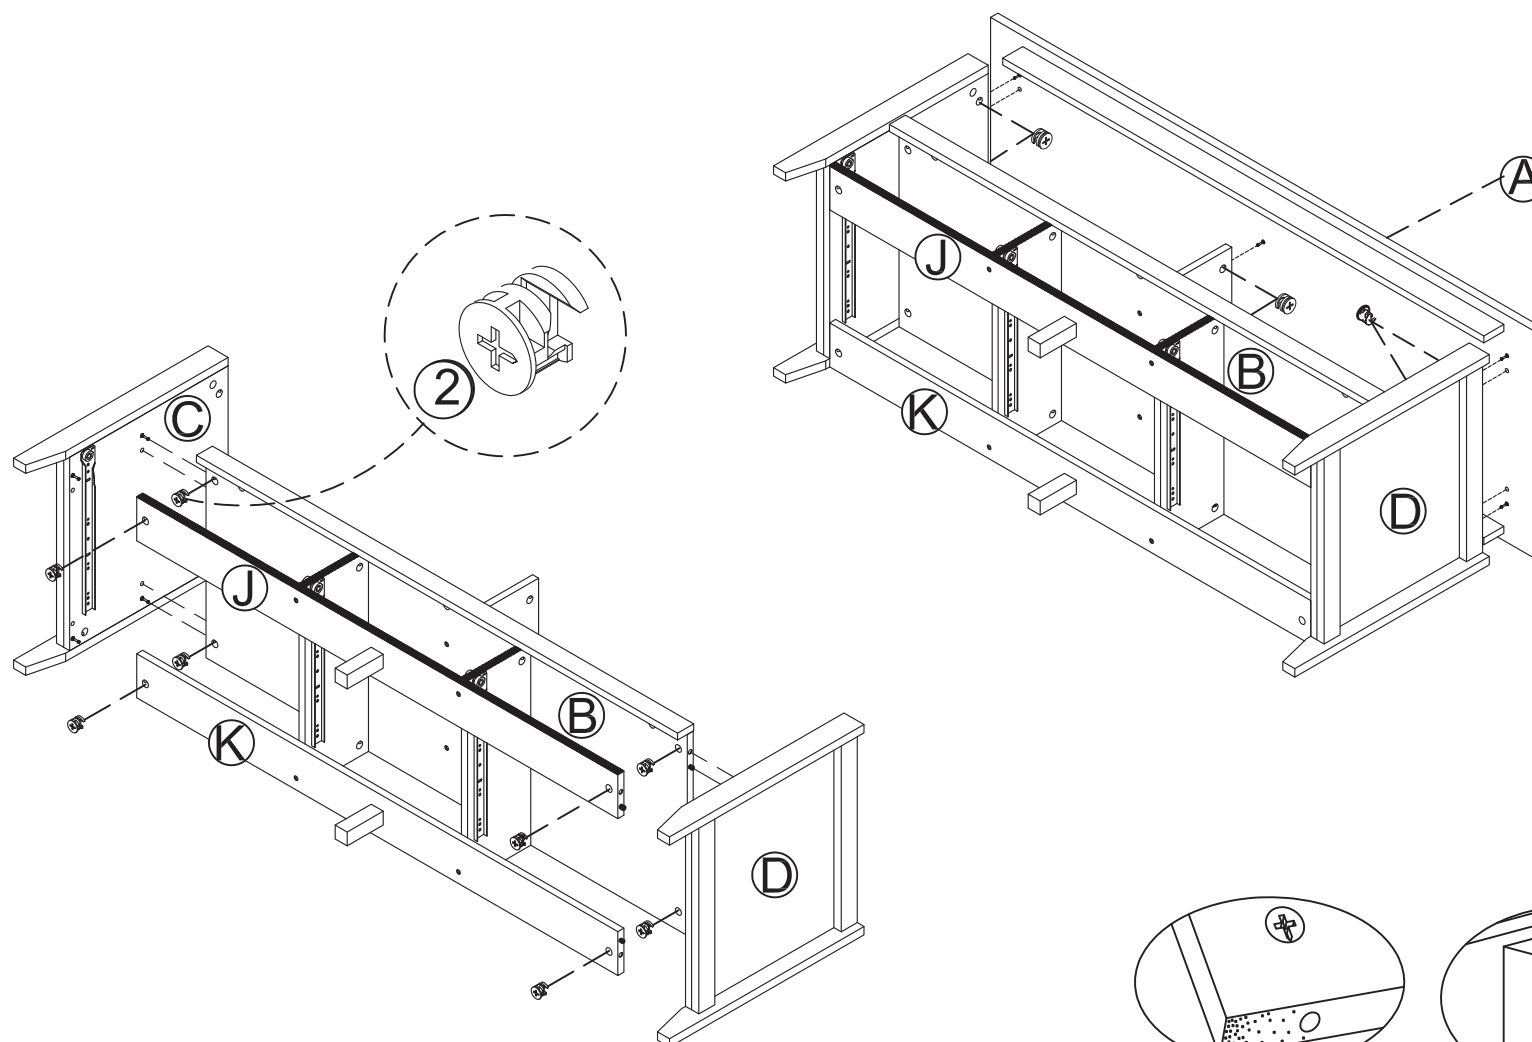

Proper orientation of CAM LOCK

 
 
11

- Attach Back Panel (X) to the product with Screws (5) as below shown.

⚠ WARNING

Please make sure that the backs are attached securely. All screws must be driven into the parts straight and tightened firmly. Failure to do so could cause instability, product collapse, and/or serious injury.

Before attaching the back panel, be sure that the unit is at 90°

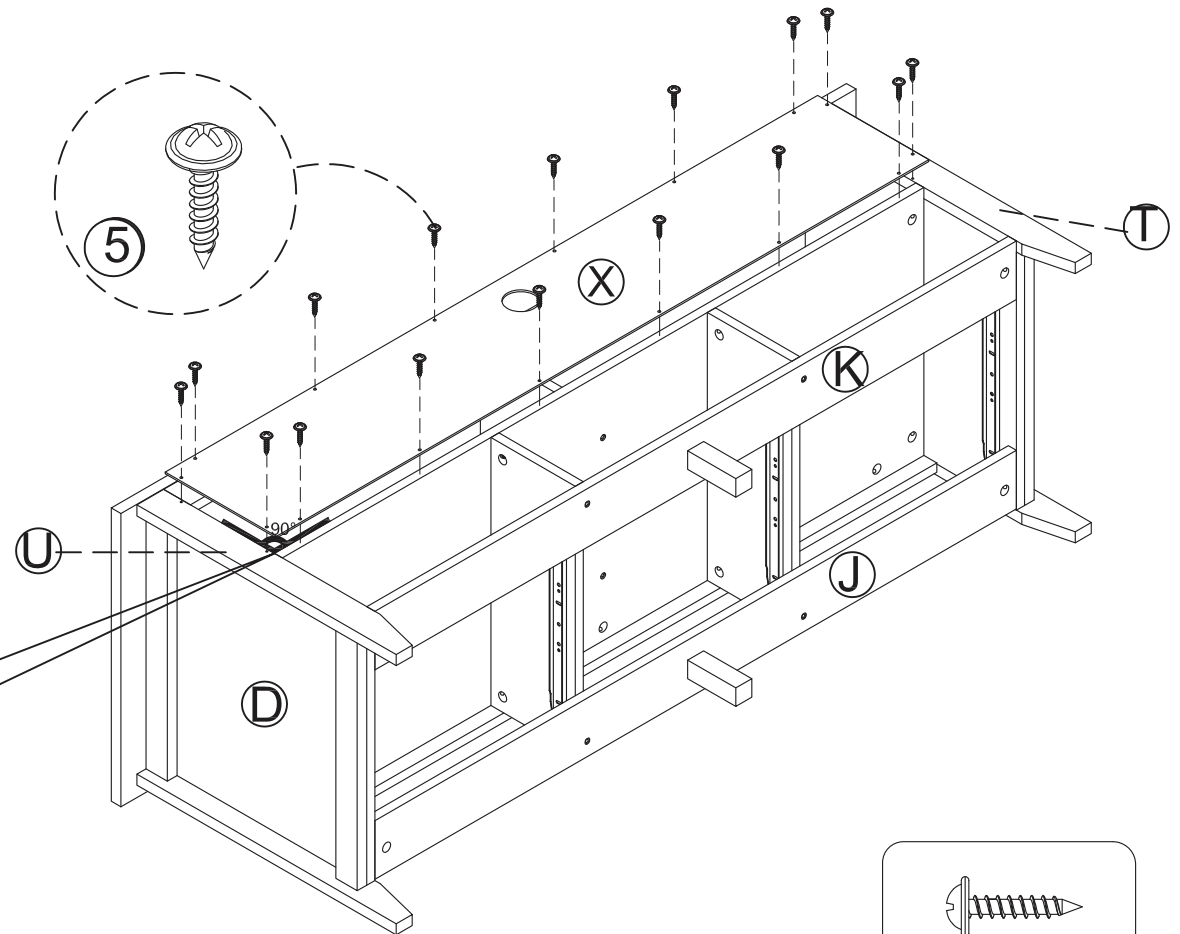


⑤

x16









12

 - Attach Drawer Sides (O&P) to Drawer Fronts (L,M&N) with CAM Locks (2) as below shown.
- Insert Drawer Bottom (Q) into Drawer Front (L,M&N) as below shown.
- Attach Drawer Back (V) to Drawer Sides (O&P) with Screws (6) as below shown.

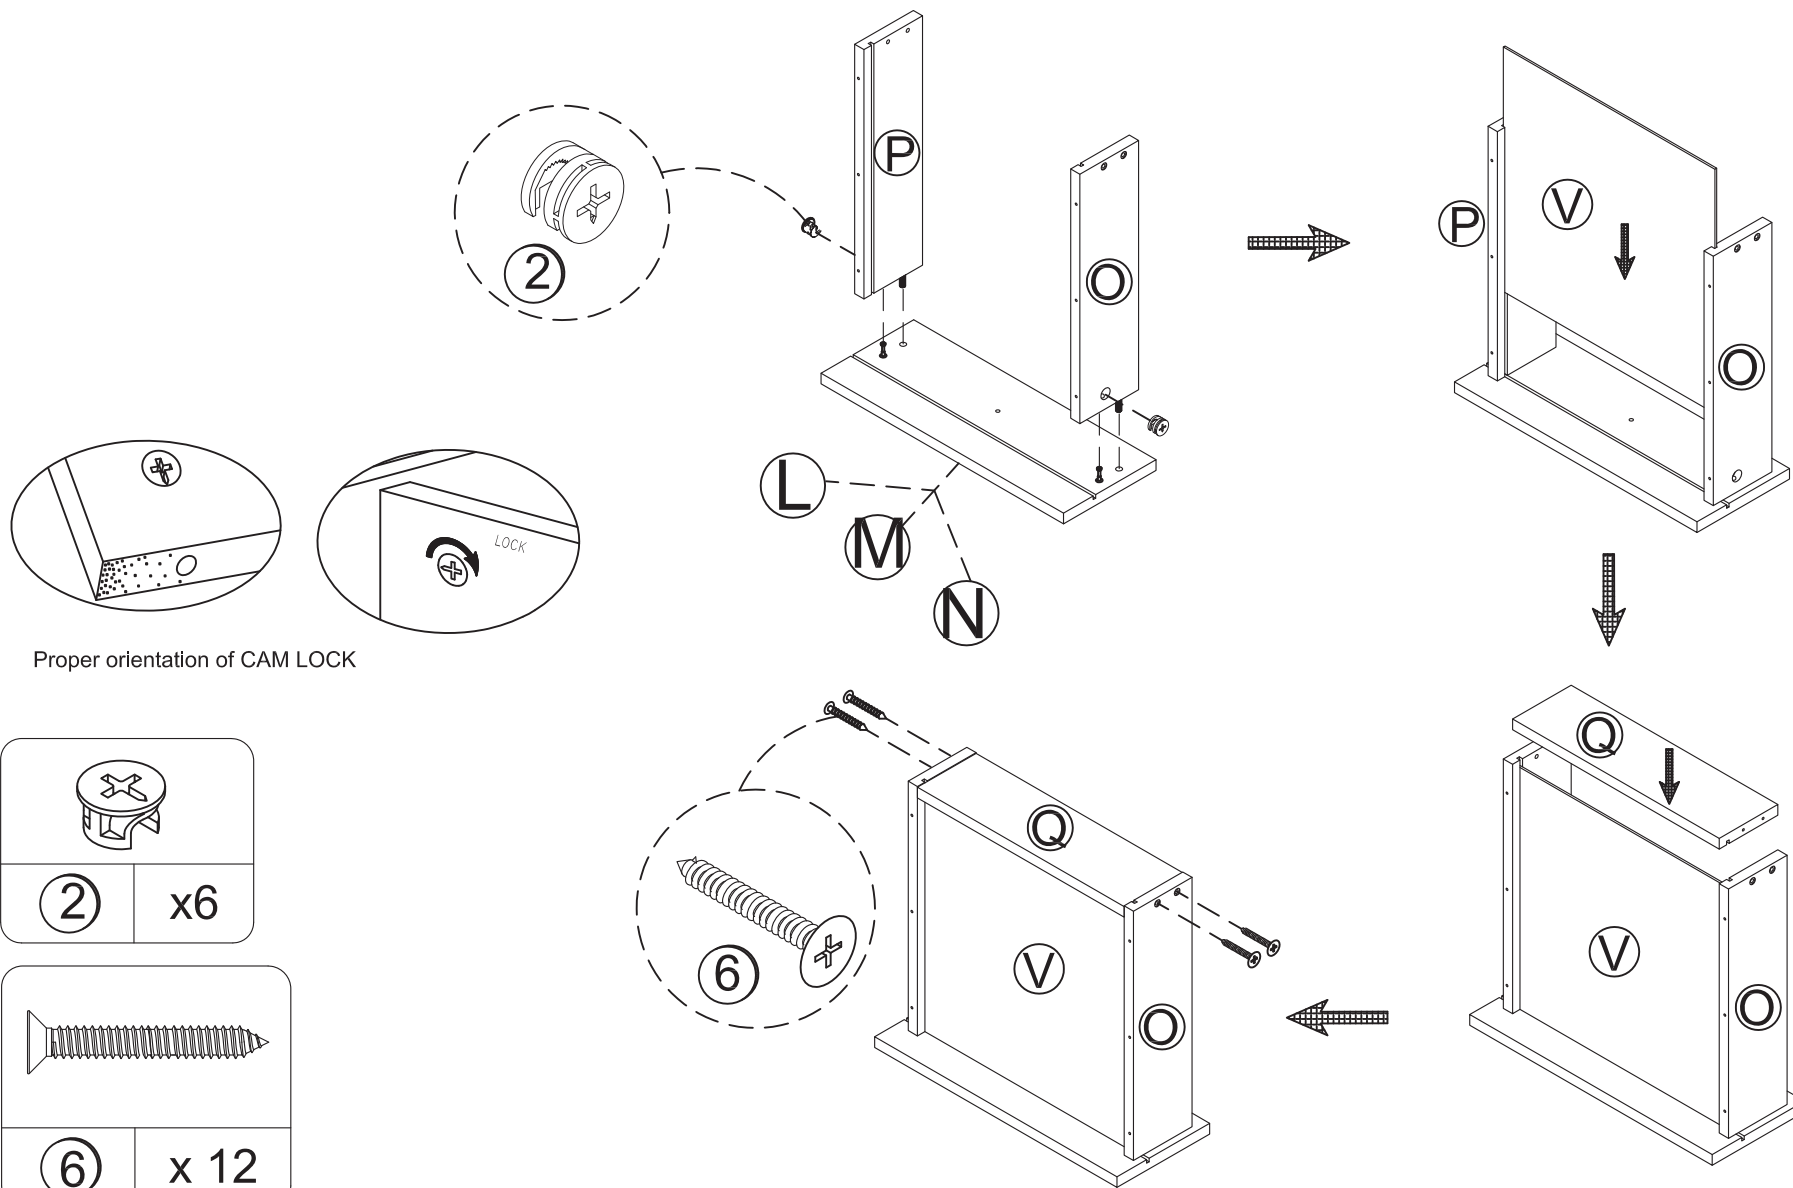


13

        - Attach Metal Slides (11b&12b) to Drawer Sides (O&P) with Screws (9) as below shown.
- Attach Handles (7) to Drawer Fronts (L,M&N) with Bolts (8) as below shown.

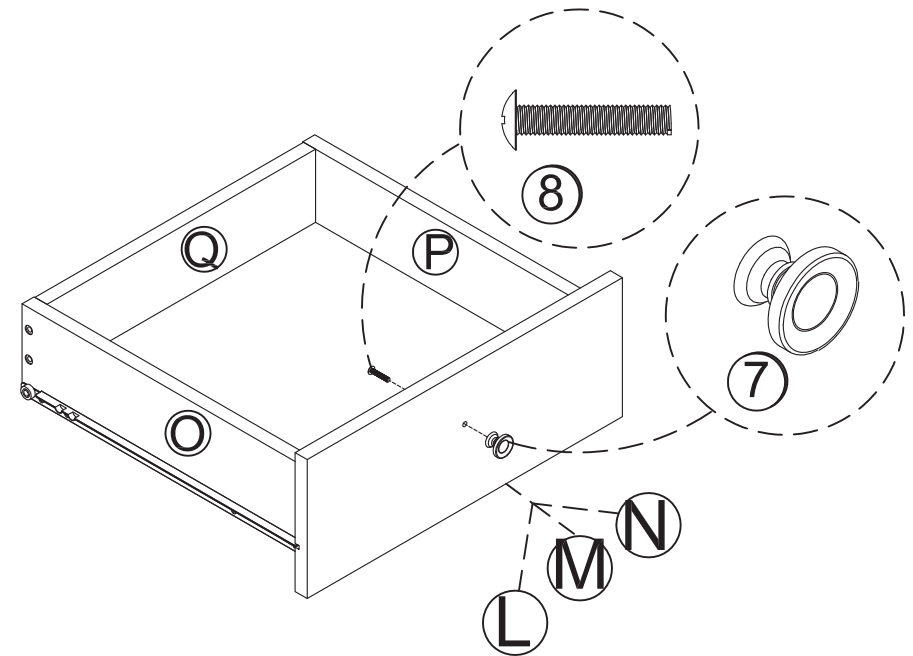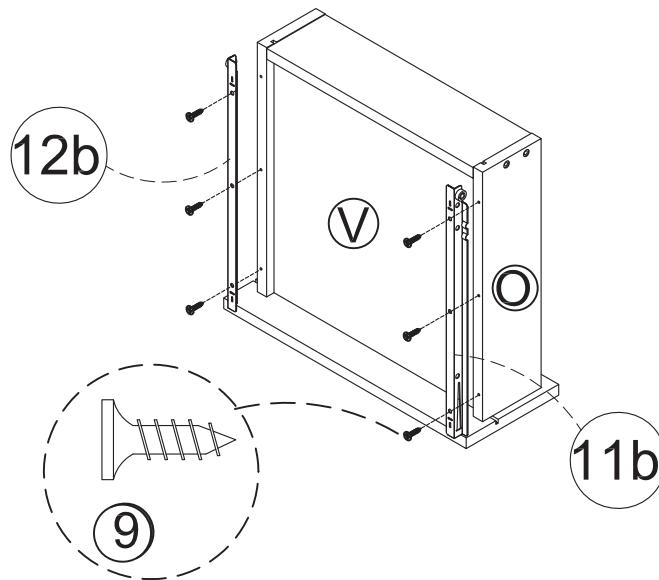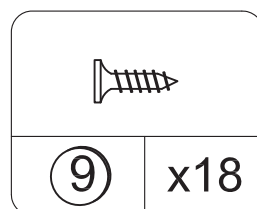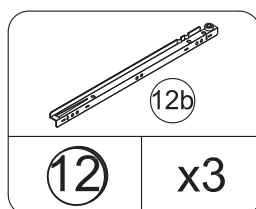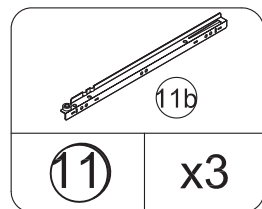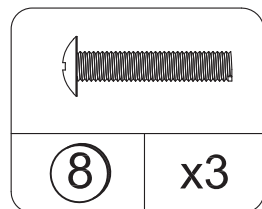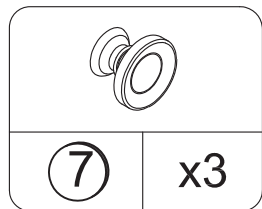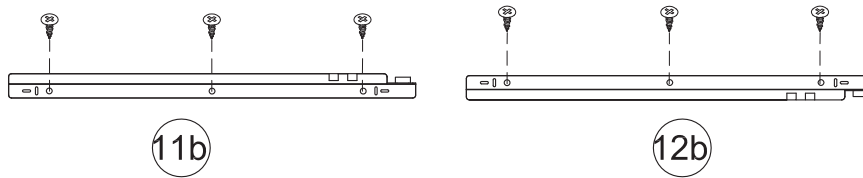

14

 - Insert Drawers into the Product as below shown.

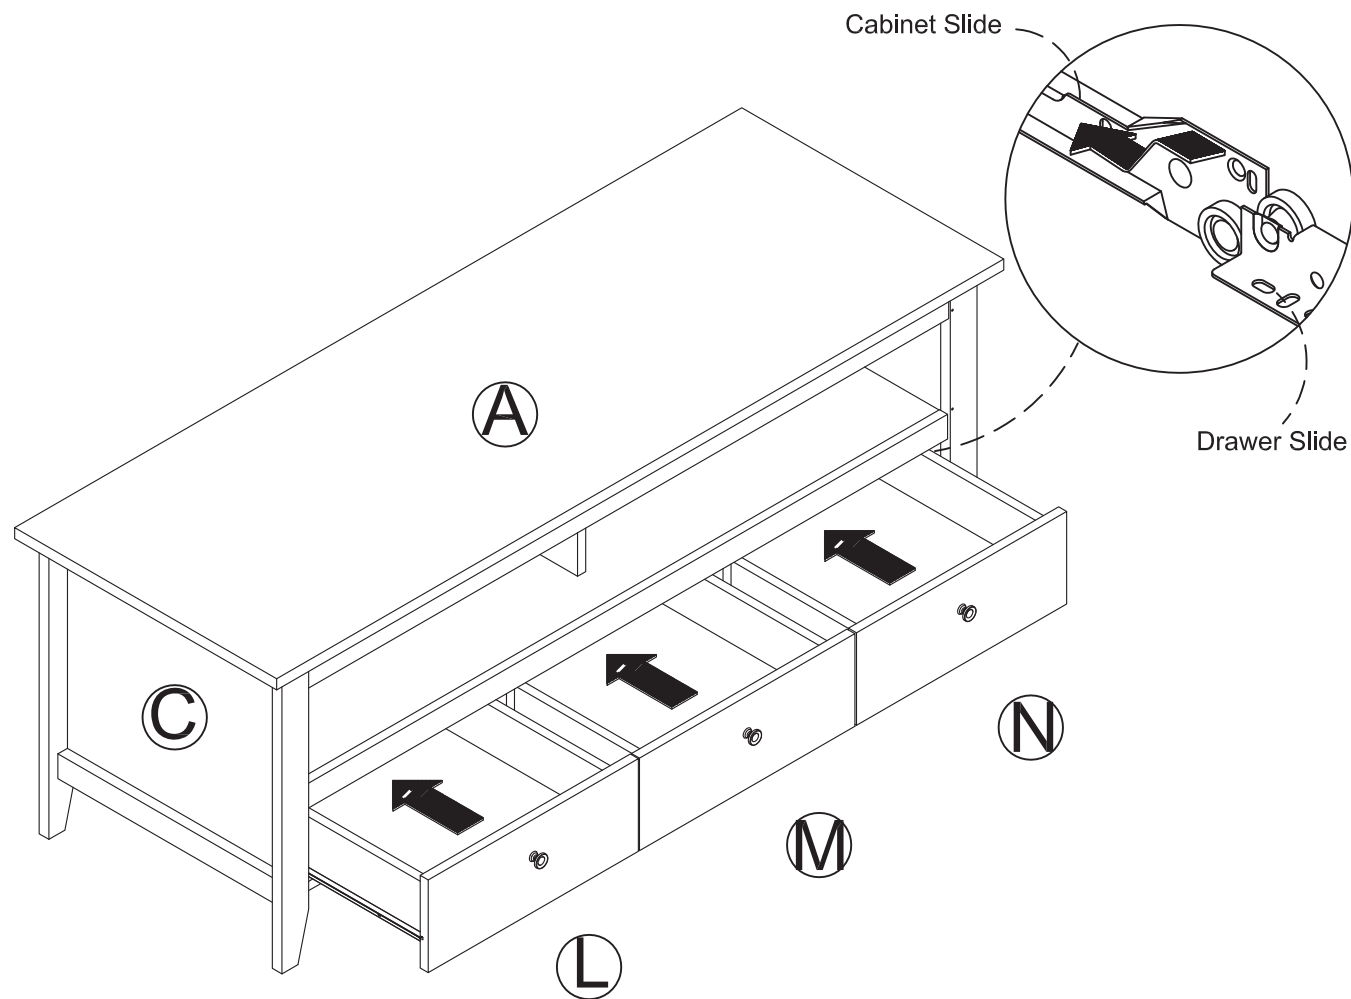



LIMITED SIX-YEAR FURNITURE WARRANTY

We warrant this product to you, the original purchaser at the time of purchase printed on a dated store receipt from an authorized VIDAO retailer and for a period of six-years thereafter that our furniture product and all its parts and components are free of defects in material and workmanship under normal use. This warranty is subject to the provisions below. VIDAO's sole obligation and the purchaser's exclusive remedy pursuant to these warranties are limited to replacement at VIDAO's sole discretion. There are no other warranties except as expressly set forth below either expressed or implied, including any warranty of merchantability for any particular purpose.

Should you be missing any of the assembly parts or components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

Our Customer Support Center is available Monday to Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us please call 1-855-998-4326 or visit www.sibrandssupport.com

This warranty is expressly limited to the replacement of furniture parts and components described in the parts list located in the Instruction Manual included with the product.

This warranty applies under conditions of normal use.

This warranty does not cover: any product, which has been subject to damage due to improper assembly or disassembly, products which were not assembled, installed, used, or maintained in accordance with the product assembly instructions & warnings, acts of nature, misuse, neglect, accidents, abuse, exposure to elements, outdoor use, extreme temperature ranges, damage during transit, commercial use, modification of, or to any part of the product or attachments to the product not approved by VIDAO. Also not covered are costs for assembly/dis-assembly labor, costs incurred in shipping the unit or parts for warranty repair/exchange or any products purchased from unauthorized VIDAO sellers. Under no circumstances shall VIDAO, be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product. Nor shall VIDAO have any responsibility for incidental or consequential damages resulting from the breach of this warranty including but not limited to inconvenience, purchase or rental of replacement products, loss of profits or commercial loss.

We reserve the right to request damaged parts or units be shipped to our offices for inspection or confirmation of any warranty claims.

This warranty does not cover product sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.