

Maximum Weight Capacity:
Top Shelf: 135 Lbs
Middle Shelves: 50 Lbs Each
Bottom Shelves: 50 Lbs Each



MODEL VW60C ASSEMBLY INSTRUCTIONS

Important! Read all warnings before starting assembly.

**For technical assistance or troubleshooting please
call 1-855-998-4326 or visit www.sibrandssupport.com**

READ THIS FIRST!

Read all of the warnings and cautions contained in this manual before assembly.

- Do not attempt to assemble this product if you do not understand the instructions.
- Contact a professional if you have any doubts about safe and secure TV furniture assembly.
- Check all the parts carefully to make sure there are no missing or damaged parts.
- Improper assembly may result in damage to your TV, property, and personal injury.
- This product is intended only to support a television of the indicated size and weight combination. Using this product to support televisions heavier than the maximum weight capacity can damage product and cause personal injury.
- Schoenfeld International Inc. and VIDAÖ are not responsible for any personal injury or product damage due to mishandling, incorrect mounting, incorrect assembly or incorrect use of this product.

CHILD SAFETY WARNINGS

How and where you use your television stand is extremely important for Child Safety

As you set up and use your new product, keep all of these safety tips in mind

- Don't let children climb on or play with entertainment system furniture and TVs.
- Remember that children can become excited while watching a program, especially on a "larger than life" TV. Make sure to place or install the TV stand where it cannot be pushed, pulled over, or knocked down.
- Make sure that you route all cords and cables so that they cannot be pulled or grabbed by curious children.

WARNINGS

- This product is intended only to support a television of the indicated size and weight combination. Using this product to support televisions or other products heavier than the maximum weight capacity can damage equipment and cause personal injury.
- Schoenfeld International Inc. and VIDAÖ are not responsible for any personal injury or product damage due to mishandling, incorrect mounting, incorrect assembly or incorrect use of this product.
- Do not force the bolts into the hole or use an electric drill to fasten any bolts. This could damage the equipment or cause personal injury.
- A large television requires two people to lift. Schoenfeld International and VIDAÖ are not responsible for equipment damage or personal injury due to mishandling.

FOR YOUR SAFETY, PLEASE FOLLOW THESE PRECAUTIONS:

- Always remove the TV and other equipment from the furniture prior to moving the assembled unit
- Be careful when moving the assembled furniture when there is equipment of any kind located on the furniture as this may cause the shelves and other parts to become unstable and fall.
- When in use, this furniture must be placed on a flat, level and solid surface.
- Do not lean on or place any force on the TV when it is on the TV stand.

- Do not climb or step on the stand.
- Do not bang into or place your own weight on the shelves
- Do not place any items on the shelves or mounts which may exceed the maximum weight limits.
- Always place the heaviest component (except for your TV) on the bottom shelf

Schoenfeld International Inc. and VIDAIO will not be responsible for failure to assemble as directed or for the improper assembly, use or handling of this stand.

VEILLER À RESPECTER CES MESURES DE PRECAUTION!

- OUJOURS ENLEVER LE TÉLÉVISEUR ET AUTRE ÉQUIPEMENT AVANT DE DÉPLACER LE MEUBLE ASSEMBLÉ.
- DÉPLACER LE MEUBLE AVEC PRÉCAUTION UNE FOIS QUE LE PLATEAU EN VERRE A ÉTÉ POSÉ OU LORSQU'IL Y A DU MATÉRIEL PLACÉ SUR LE MEUBLE CAR CELA PEUT CAUSER LE DÉCROCHEMENT ET LA CHUTE DES PLATEAUX ET AUTRES ÉLÉMENTS.
- DURANT L'UTILISATION, LE MEUBLE DOIT ÊTRE POSÉ SUR UNE SURFACE PLATE, SOLIDE ET HORIZONTALE.
- NE PAS S'APPUYER CONTRE LE TÉLÉVISEUR LORSQU'IL EST POSÉ SUR LE MEUBLE.
- NE PAS GRIMPER NI MARCHER SUR LE MEUBLE.
- NE PAS TAPER NI S'APPUYER SUR LE PLATEAU EN VERRE.
- Schoenfeld International Inc. y VIDAIO decline toute responsabilité en cas d'assemblage non conforme aux instructions ou pour l'assemblage, l'utilisation ou la manutention incorrects de ce meuble.

POR SU SEGURIDAD TENGA LAS SIGUIENTES PRECAUCIONES:

 
- SIEMPRE quite el televisor y cualquier otro equipo del mueble antes de mover la unidad armada.
- TENGA CUIDADO AL MOVER LA UNIDAD ARMADA UNA VEZ INSTALADO EL ESTANTE DE VIDRIO Y/O CUANDO HAYA ALGUN EQUIPO EN EL MUEBLE YA QUE ESTO PODRÍA AFLOJAR EL ESTANTE Y OTROS ARTÍCULOS Y HACER QUE SE CAIGAN.
- EL MUEBLE DEBE ESTAR UBICADO EN UNA SUPERFICIE PLANA, SÓLIDA Y NIVELADA CUANDO SE LO ESTE UTILIZANDO.
- NO INCLINE EL TELEVISOR CUANDO ESTE EN EL SOPORTE PARA TV.
- NO SE SUBA NI SE PARE SOBRE EL SÓPORTE.
- NO GOLPEE EL ESTANTE DE VIDRIO NI SE APOYE CON SU PESO SOBRE EL MISMO.
- Schoenfeld International Inc. y VIDAIO no se hará responsable en caso de que no se instale la base según las instrucciones, ni de la instalación, uso o manejo incorrectos de esta base.

IMPORTANT


Before you begin: Open, identify and count all parts prior to assembly. Lay out parts on a flat and non-abrasive surface. You will need the parts identified on page 5 and 6 of this instruction manual.

NOTE: IT IS VERY IMPORTANT TO USE GLUE WITH DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH DAMP CLOTH.

Insert the Dowel at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

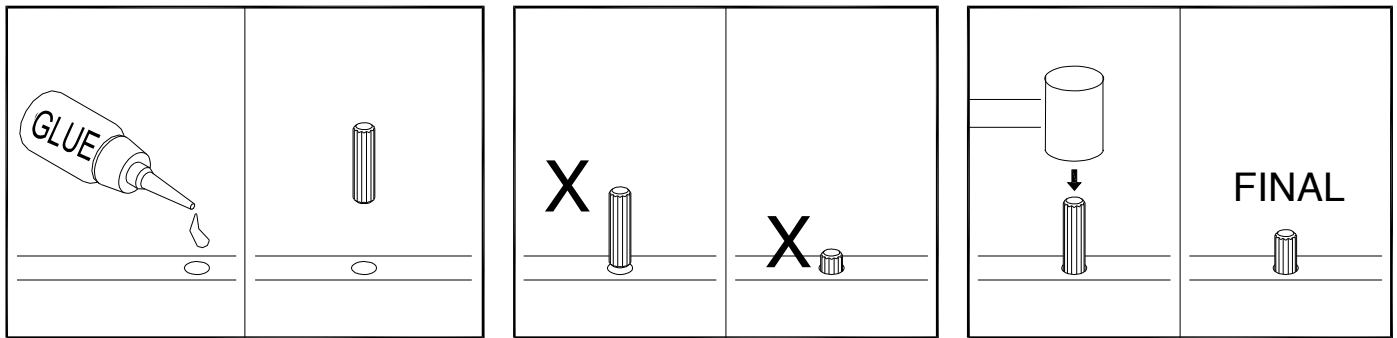

CAM LOCK SYSTEM OPERATION

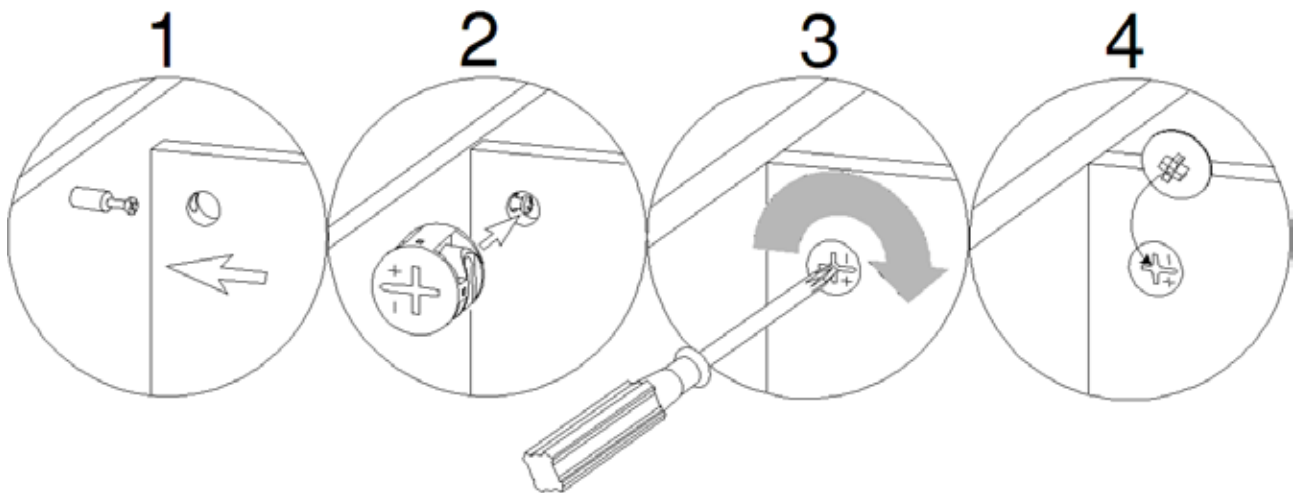 


HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


1. Screw the Cam Bolt into the threaded inserts on the panel. Connect both panels together; making sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock faces out and points towards Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt in place.
4. Plug the Cam Lock Cover into the cross slot of the Cam Lock to conceal the Cam.

Parts and Hardware List

 
Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

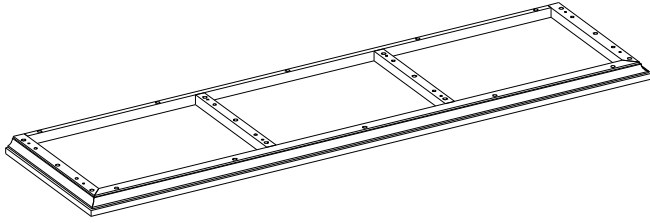


A- Top Panel (Qty. 1)

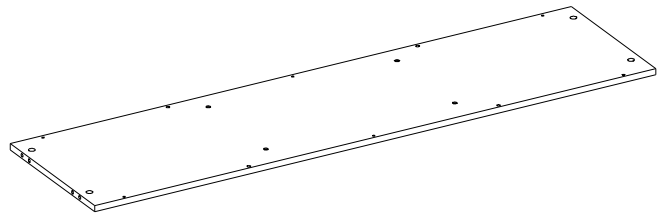 


B- Bottom Panel (Qty. 1)

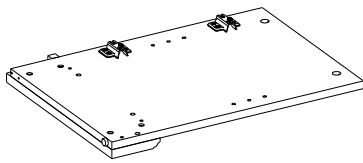 


C- Left Side Panel (Qty. 1)

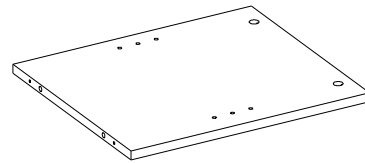 


D- Left Partition Panel (Qty. 1)

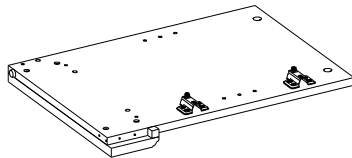 


E- Right Side Panel (Qty. 1)

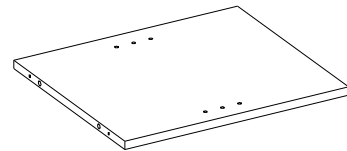 


F- Right Partition Panel (Qty. 1)

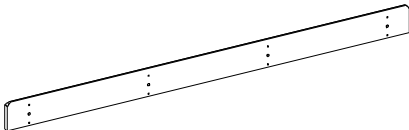 


G- Bottom Front Molding (Qty. 1)

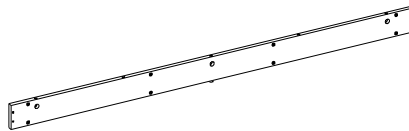 


H- Bottom Front Stretcher (Qty. 1)

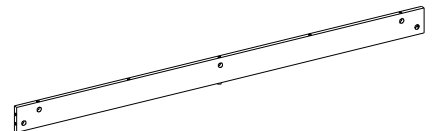 


I- Bottom Back Stretcher (Qty. 1)

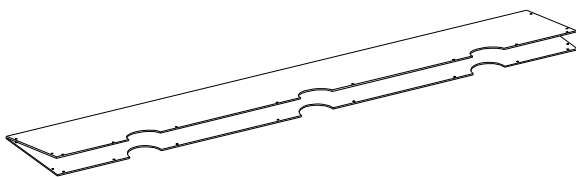 


J- Back Panel (Qty. 1)

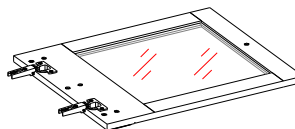 


K- Door (Qty. 2)

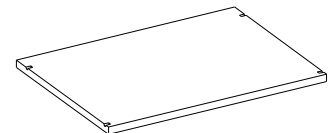 

L- Middle Adjustable Shelf (Qty. 1)

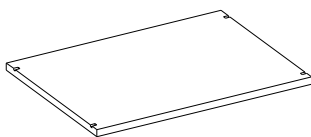 

M- Side Adjustable Shelf (Qty. 2)

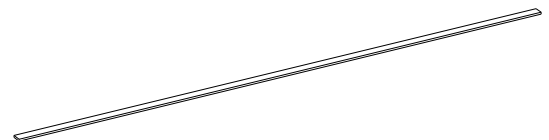 


N- Stop Rail (Qty. 1)

Parts and Hardware List


Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.



 
(1) Cam Lock
(Qty. 20+1 extra)



 
(2) Cam Bolt
(Qty. 20+1 extra)



 
(3) M8 x 30 mm Wood Dowel
(Qty. 22+1 extra)



 
(4) M8 x 20 mm Wood Dowel
(Qty. 4+1 extra)



 
(5) M3.5 x 15 mm Flat Head Screw
(Qty. 8+1 extra)



 
(6) M4 x 25 mm Screw
(Qty. 8+1 extra)



 
(7) M4 x 50 mm Screw
(Qty. 8+1 extra)



 (8) M3.5 x 15 mm Washer Head Screw
(Qty. 24+1 extra)



 
(9) Cam Lock Cover
(Qty. 8+1 extra)




(10) Shelf Pin
(Qty. 12+1 extra)



 (11) Knob
(Qty. 2)



 
(12) Knob Bolt
(Qty. 2)




(13) Triangle Metal Plate
(Qty. 2)



 (14) Floor Leveler
(Qty. 2)



 
(15) Rubber Bumper
(Qty. 4+1 extra)



Glue (Qty. 1)




 Touch-up Pen (Qty. 1)



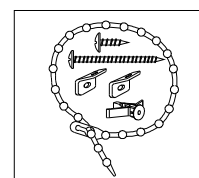


Tipping Restraint Hardware Kit (Qty. 2)
(Included in plastic bag)

 
Tools required: Phillips screwdriver and rubber mallet (not provided).

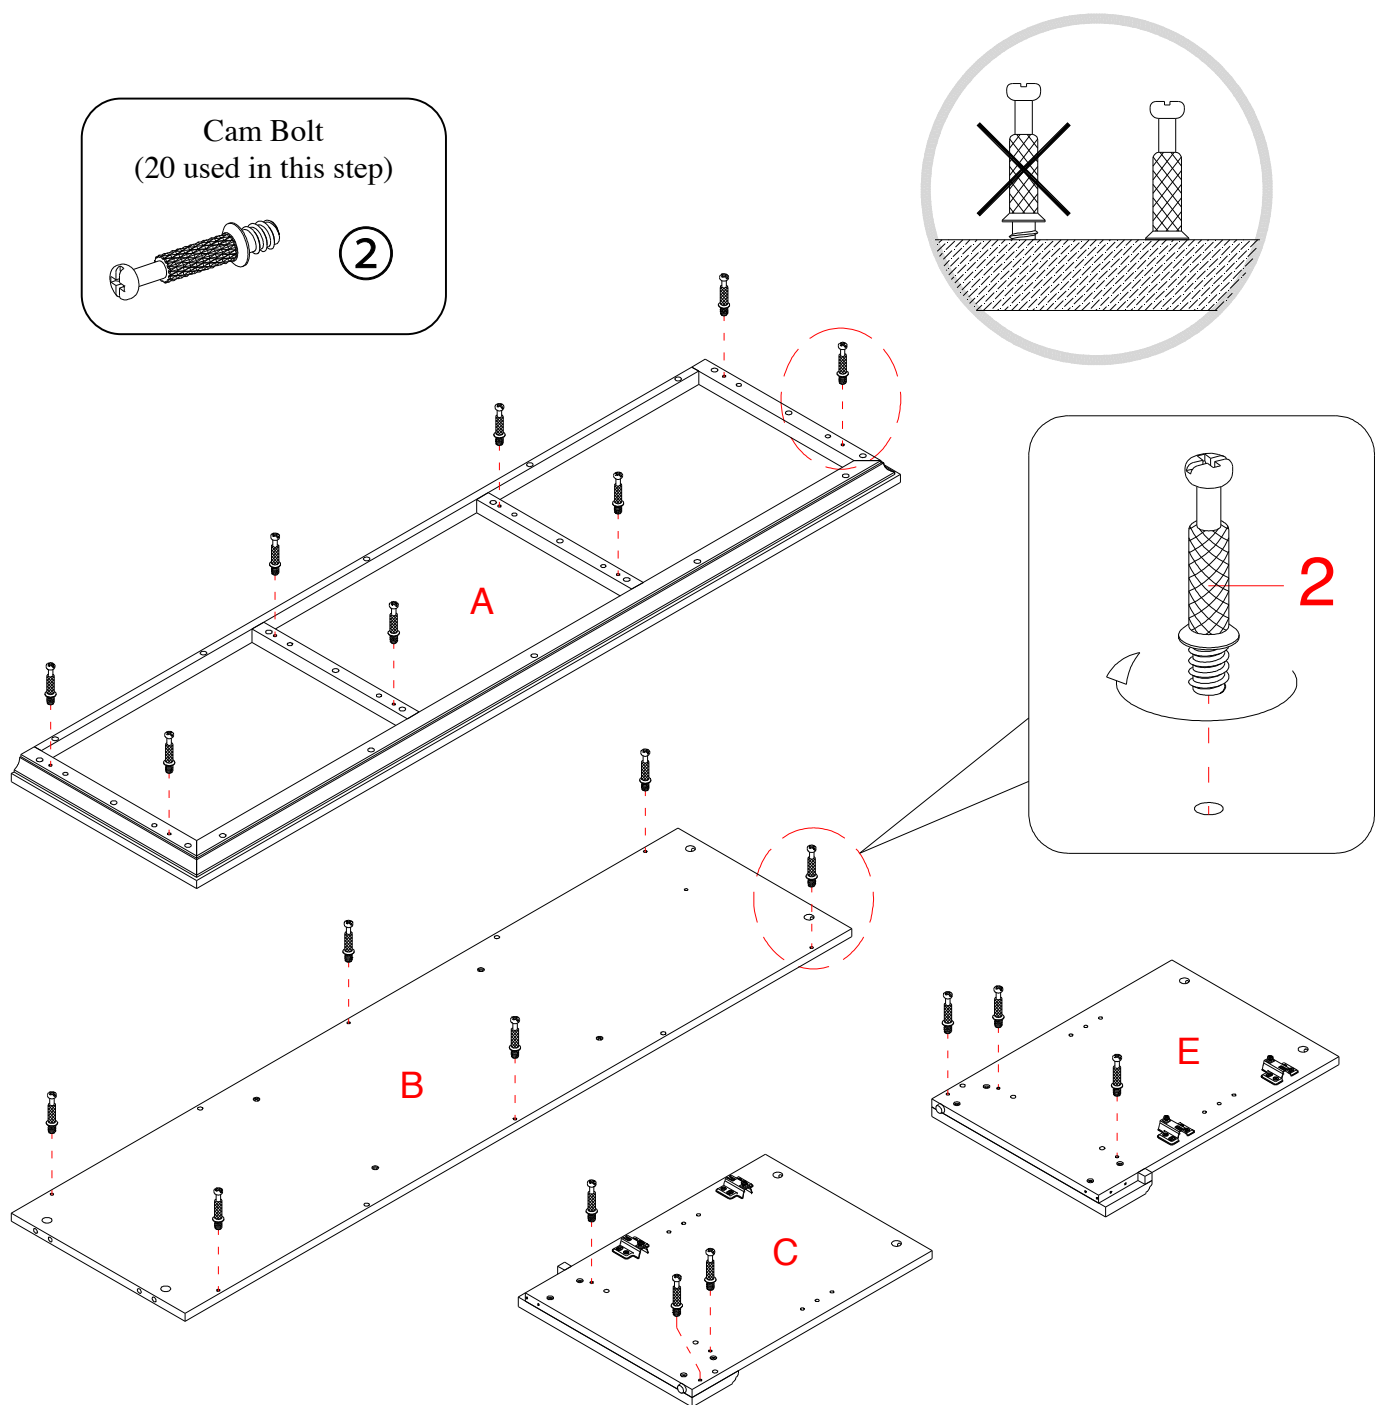

   
1. Unpack the unit and confirm that you have all the hardware and required parts. Assemble the unit on a carpeted floor or the empty carton to avoid any scratching.
2. Securely screw the Cam Bolts (2) into the designated small holes on the Top Panel (A), Bottom Panel (B) and Side Panels (C and E) using a Phillips screwdriver.

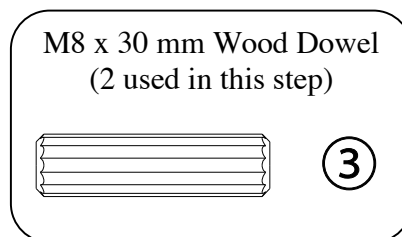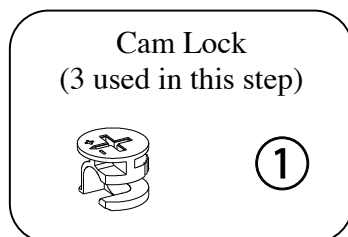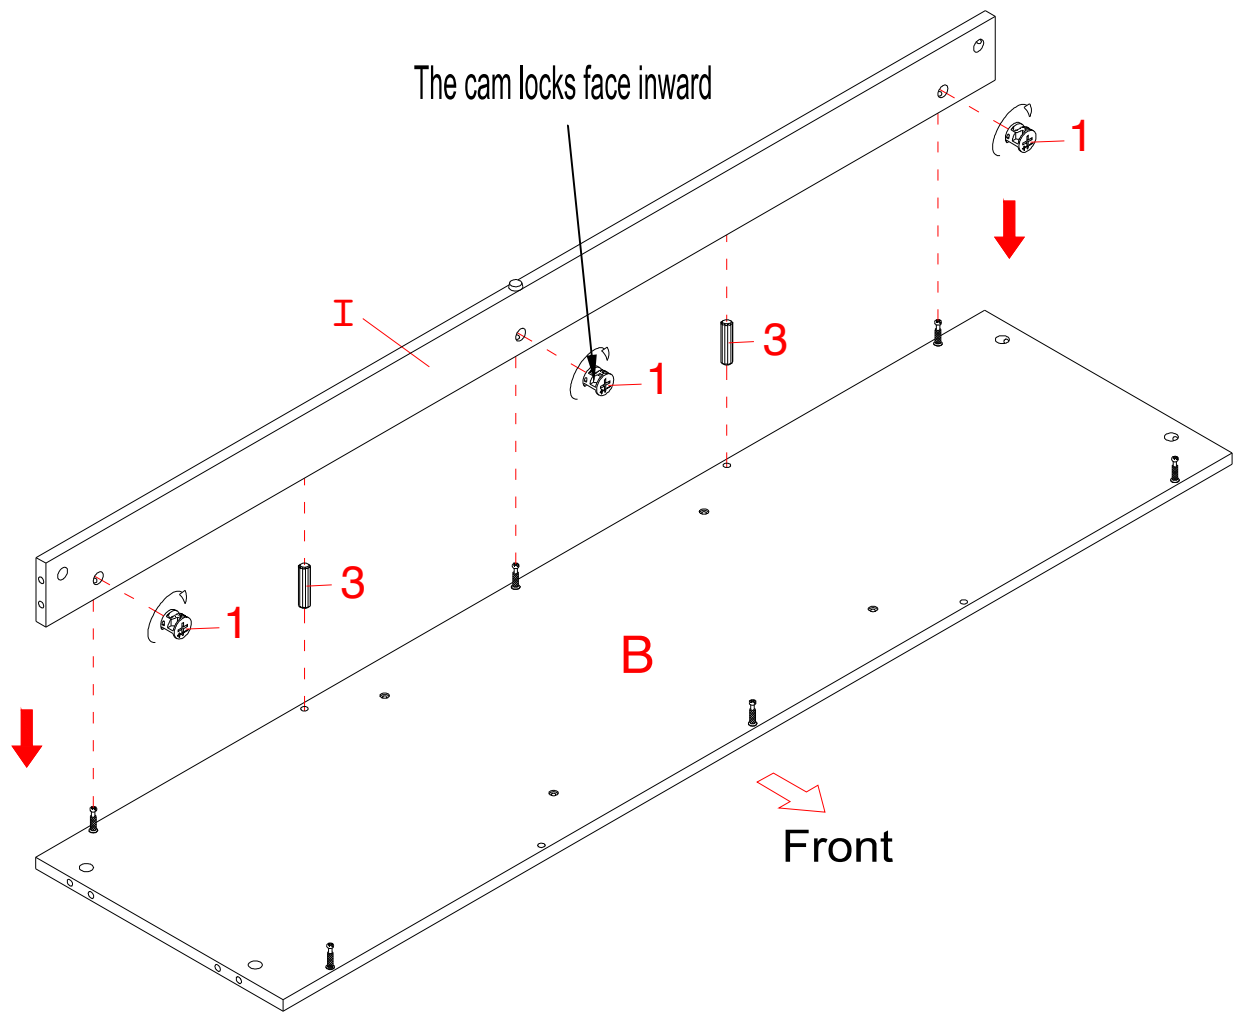

3. Attach the Bottom Back Stretcher (I) to the Bottom Panel (B) with two 30 mm Wood Dowels (3) and three Cam Locks (1).

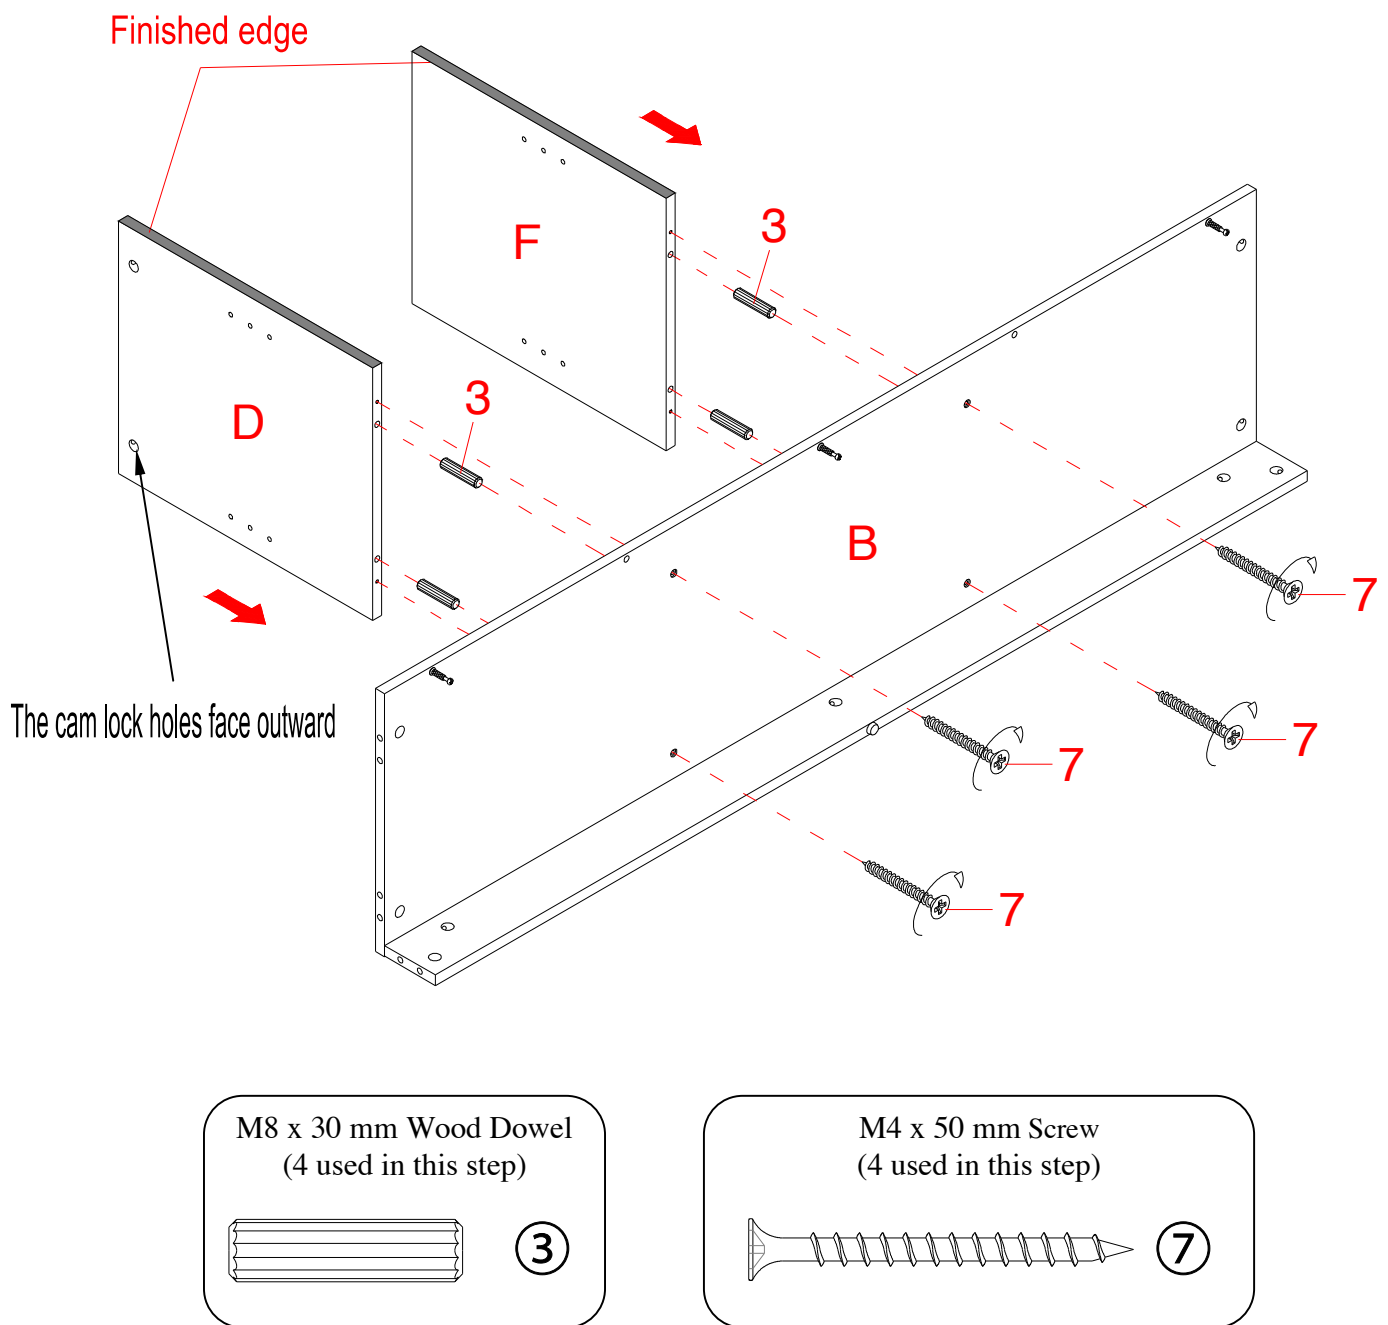 

4. Attach the Partition Panels (D and F) to the Bottom Panel (B) with four 30 mm Wood Dowels (3) and four 50 mm Screws (7) as shown.

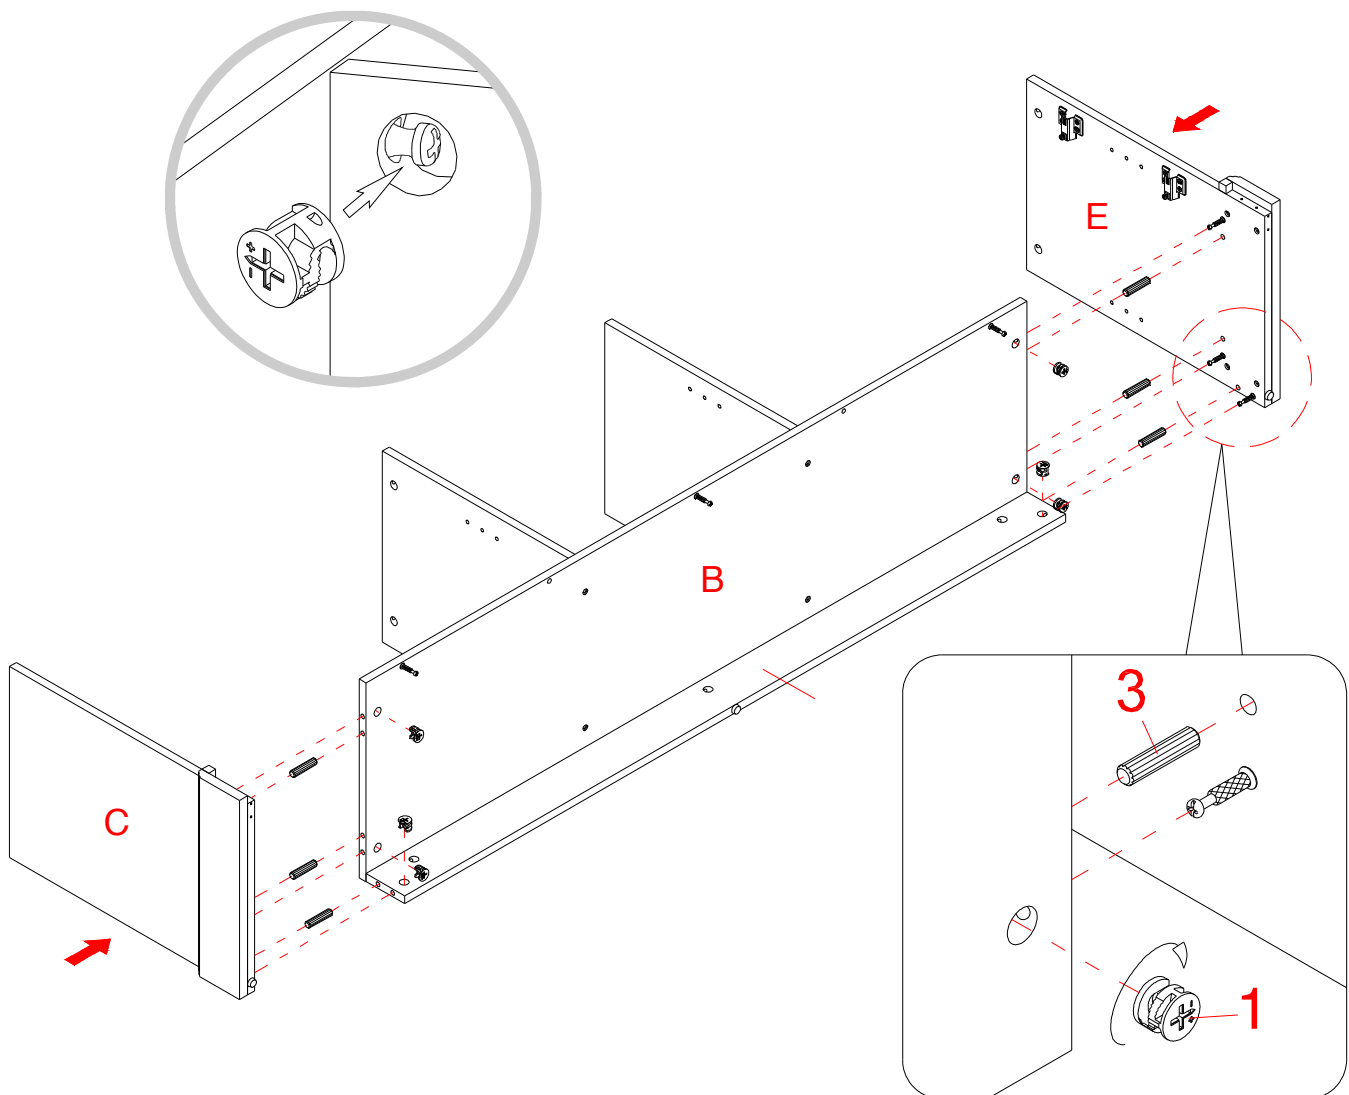 

Cam Lock
(6 used in this step)




①

M8 x 30 mm Wood Dowel
(6 used in this step)



③

 5. Attach the Left Side Panel (C) to the Bottom Panel (B) and Bottom Back Stretcher (I) with three 30 mm Wood Dowels (3) and three Cam Locks (1).
6. Repeat the same procedure to attach the Right Side Panel (E) at the opposite end.

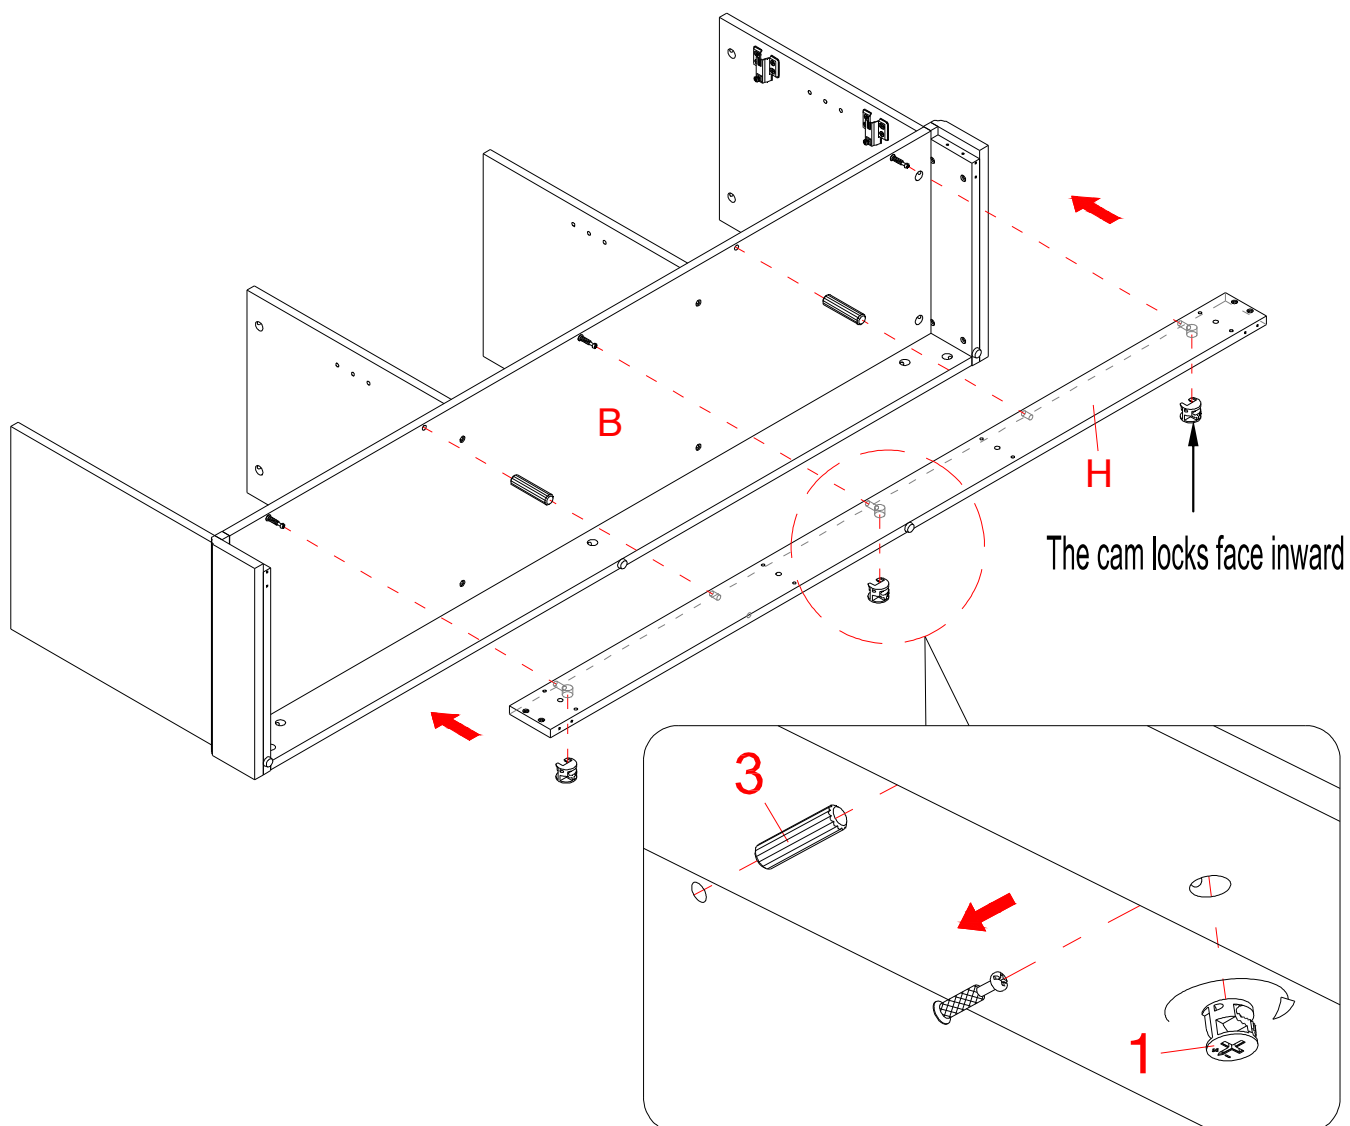

Cam Lock
(3 used in this step)




①

M8 x 30 mm Wood Dowel
(2 used in this step)




③

 
7. Attach the Bottom Front Stretcher (H) to the Bottom Panel (B) with two 30 mm Wood Dowels (3) and three Cam Locks (1) as shown.

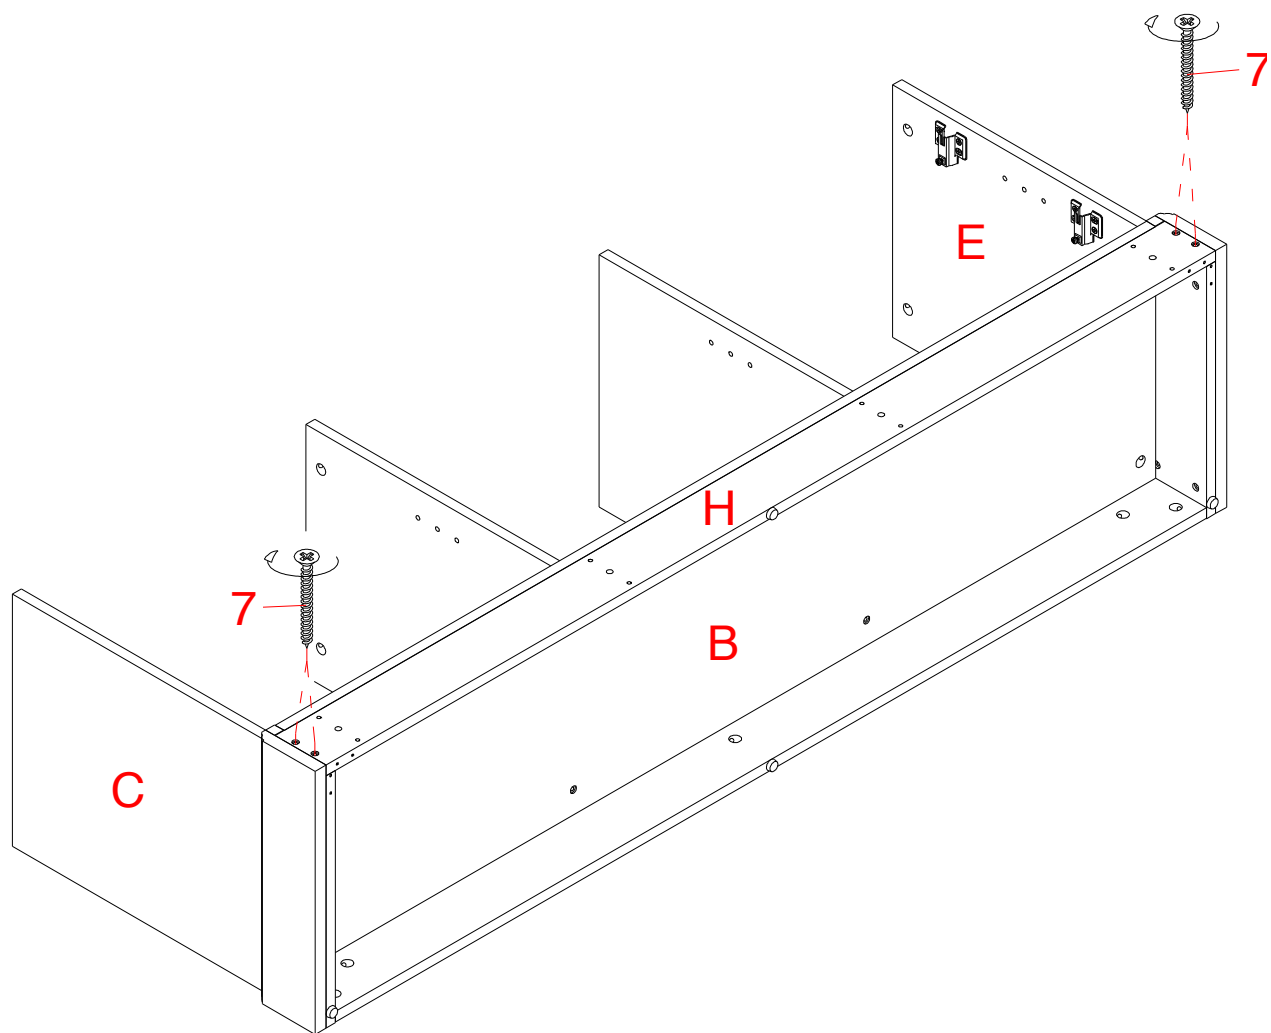


M4 x 50 mm Screw
(4 used in this step)

 

 
8. Fasten the Bottom Front Stretcher (H) to the Side Panels (C and E) with four 50 mm Screws (7).

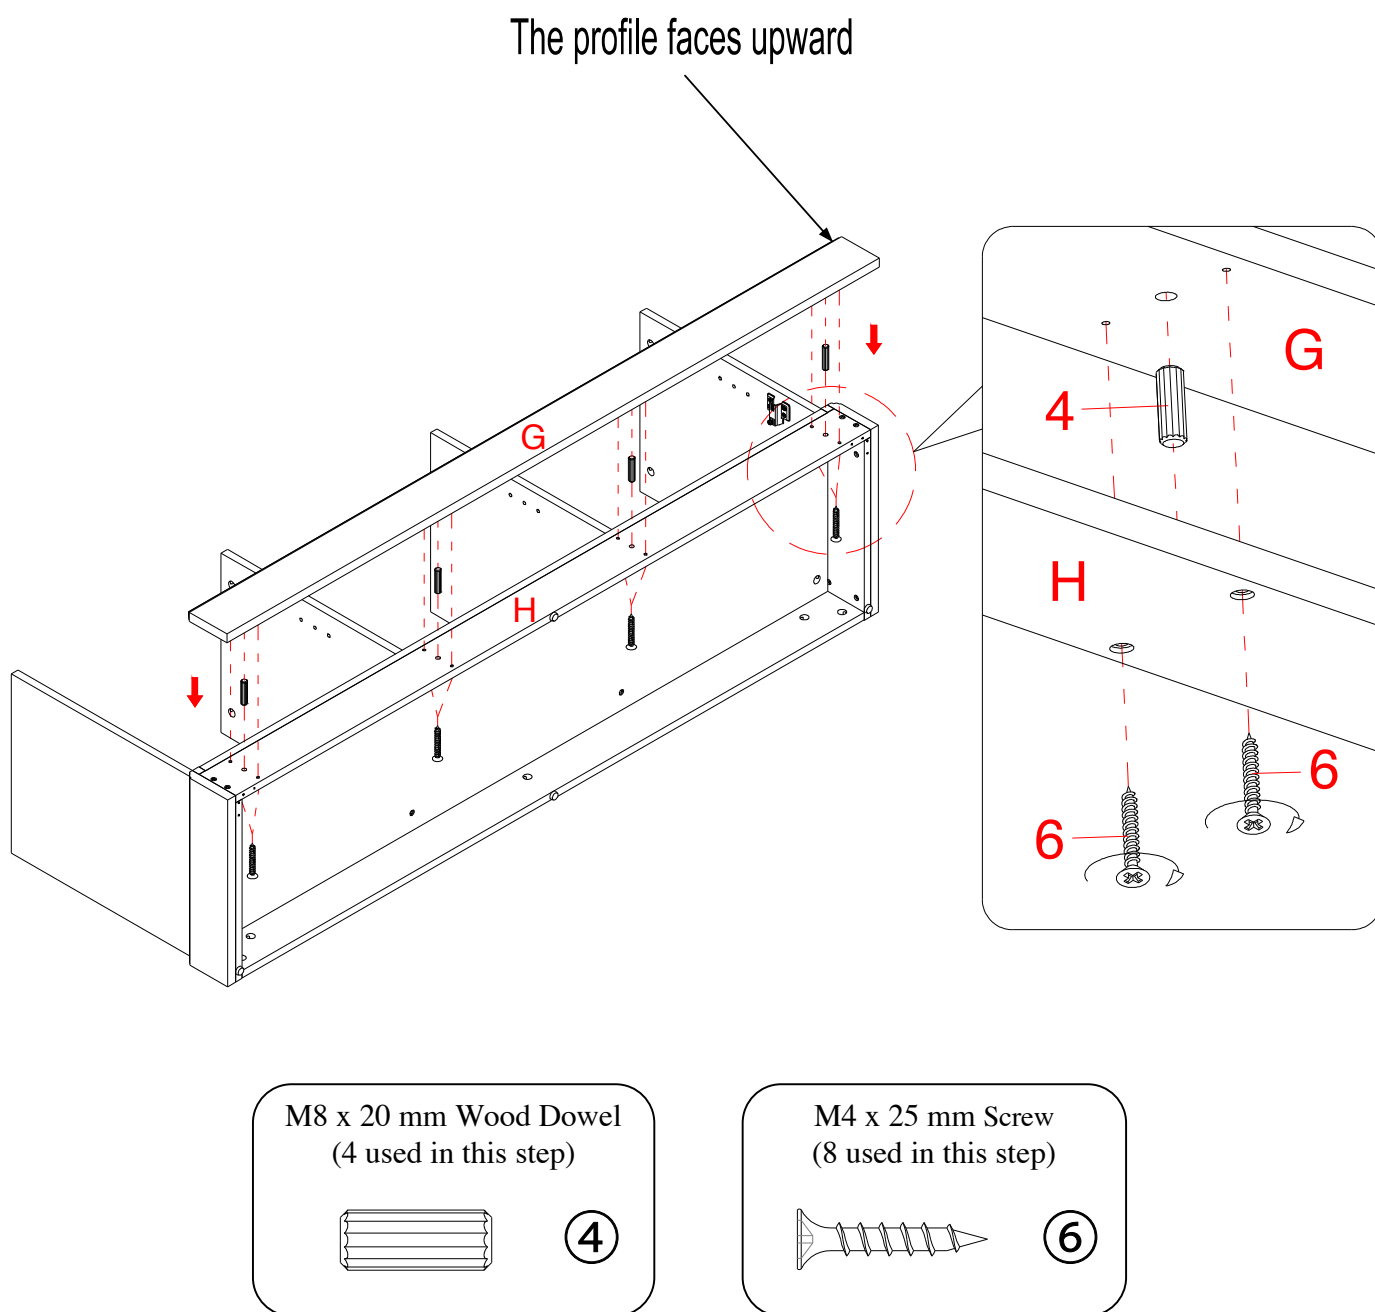


9. Attach the Bottom Front Molding (G) to the Bottom Front Stretcher (H) with four 20 mm Wood Dowels (4) and eight 25 mm Screws (6).

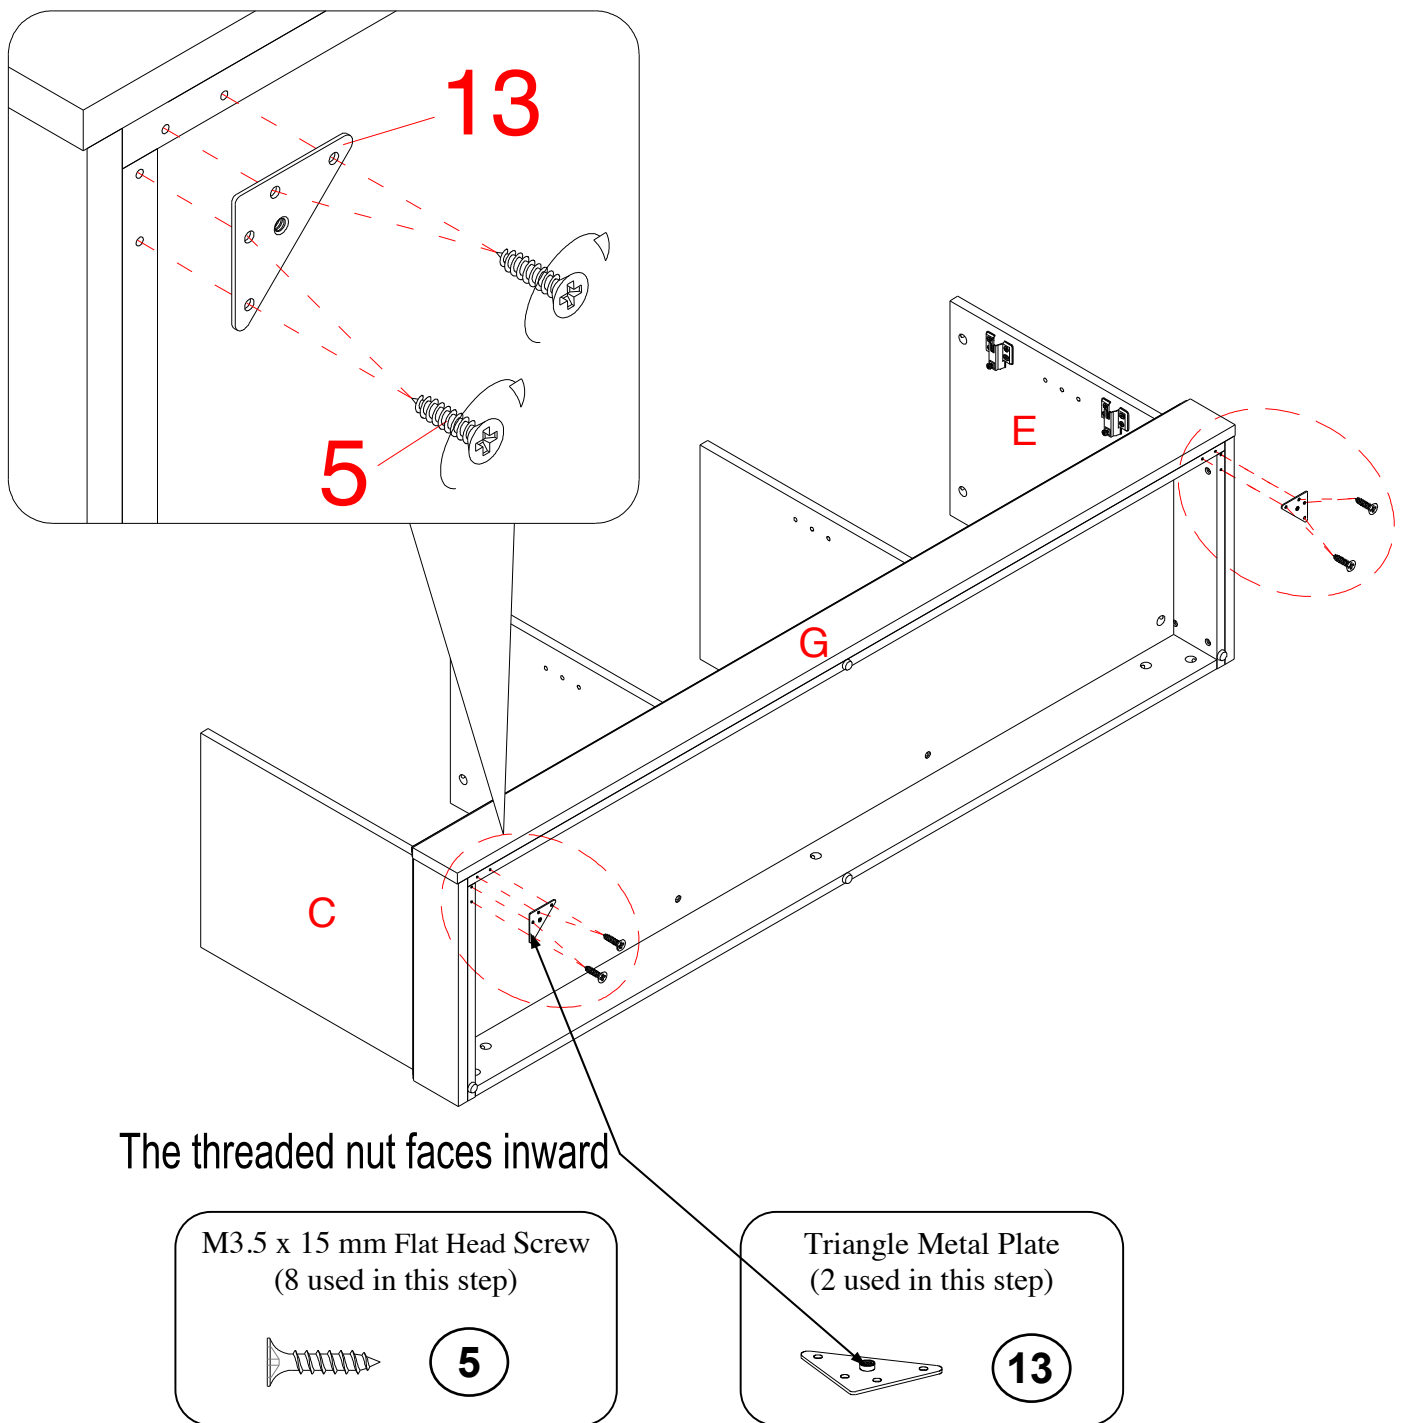 

 10. Using the pilot holes as a guide, fasten two Triangle Metal Plates (13) at the bottom joints between Side Panels (C and E) and Bottom Front Stretcher (H) with eight 15 mm Flat Head Screws (5).

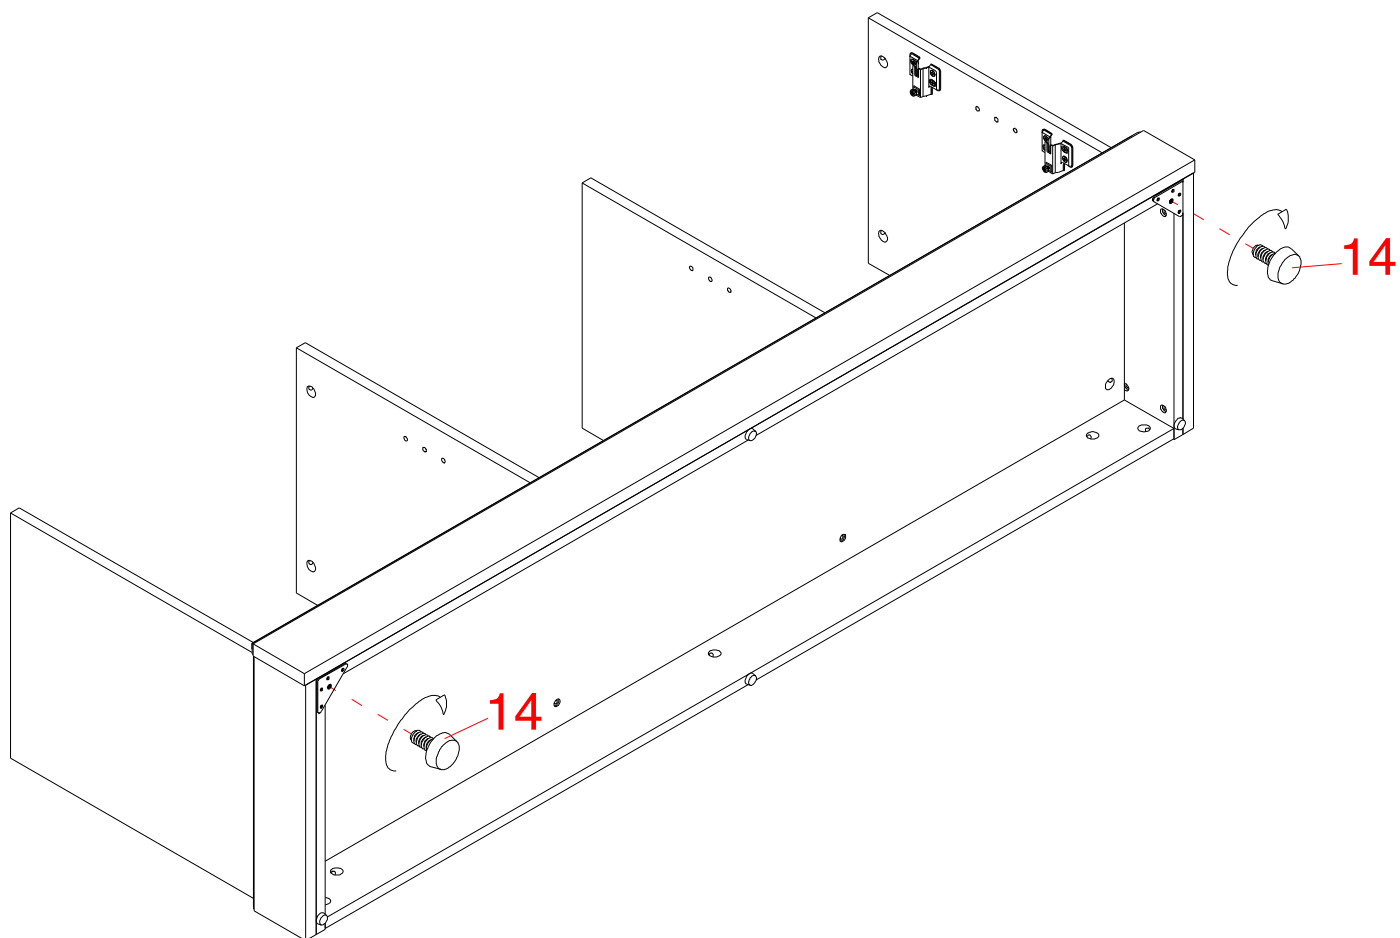


Floor Leveler
(2 used in this step)

 


14

 
11. Screw two Floor Levelers (14) into the installed Triangle Metal Plates (13).

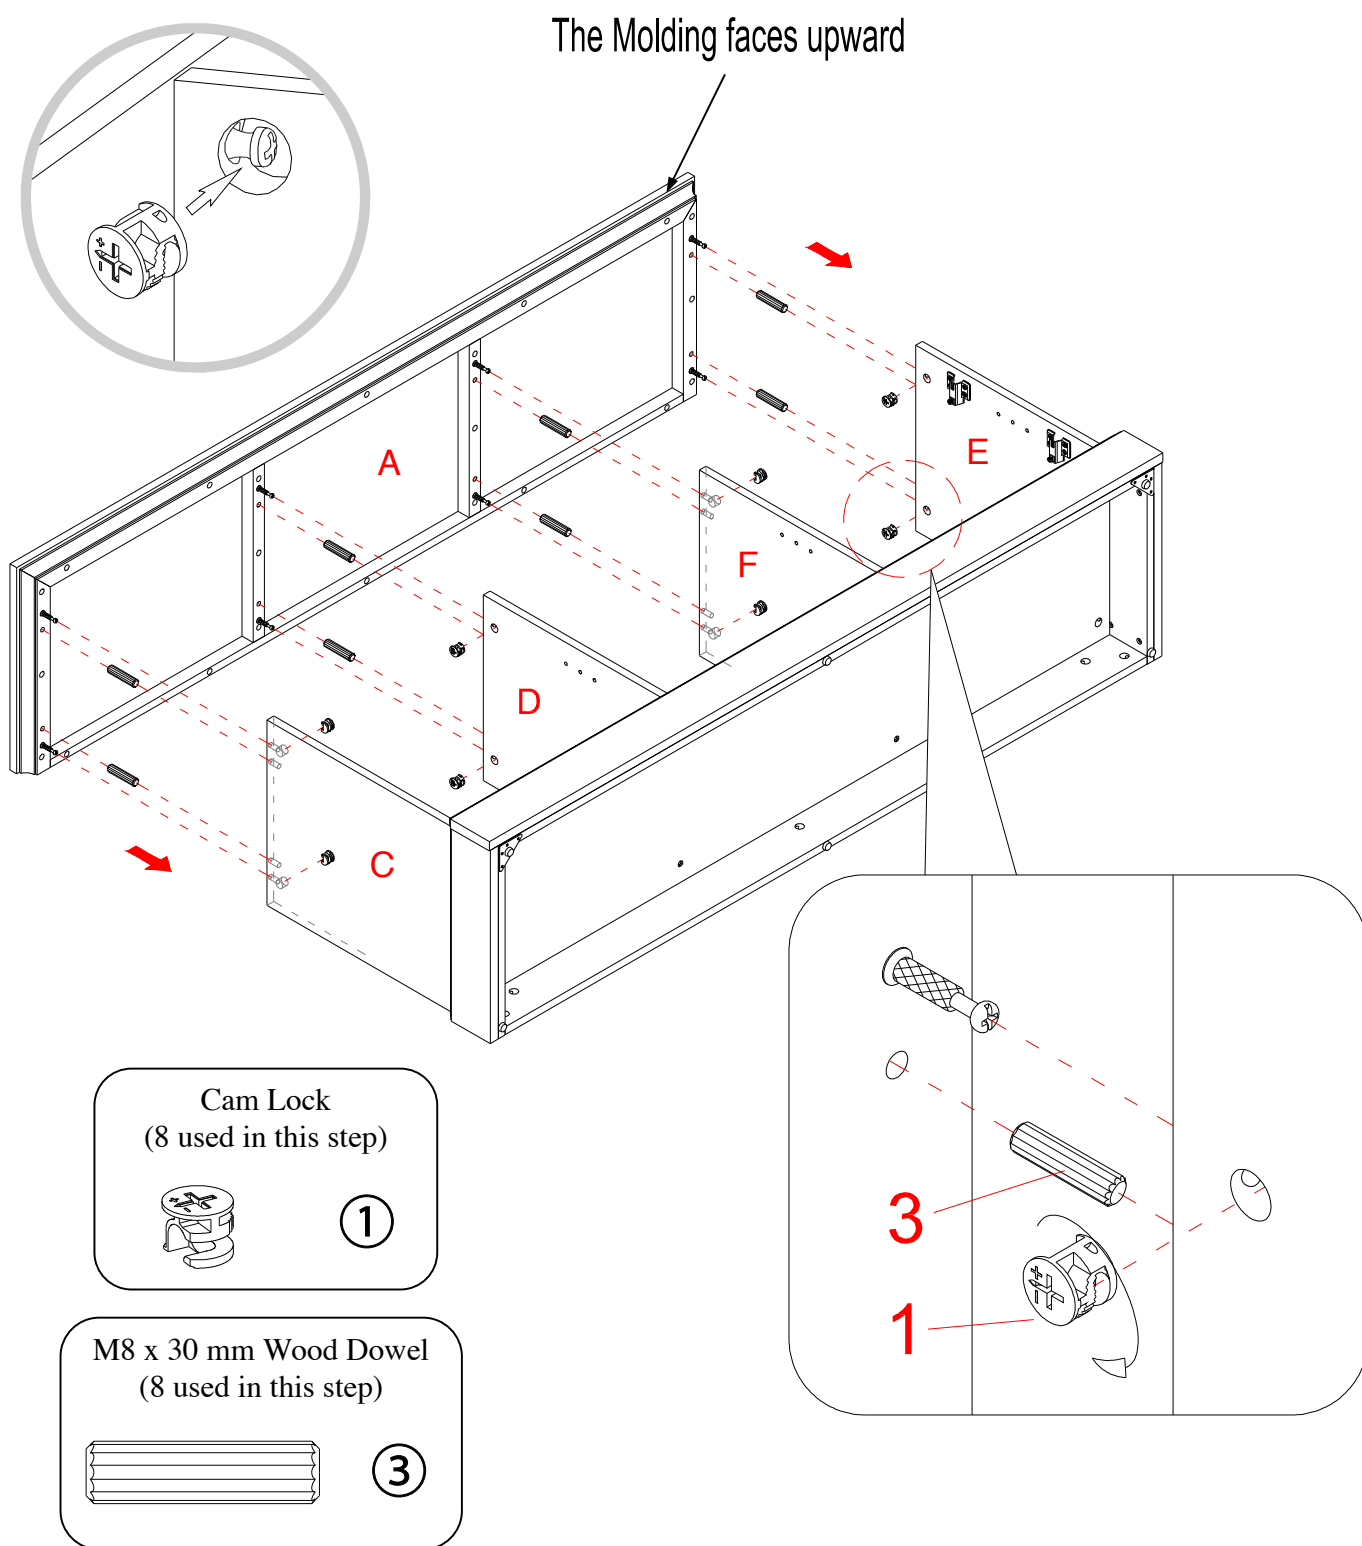




12. Attach the Top Panel (A) to the vertical panels (C, D, E and F) with eight 30 mm Wood Dowels (3) and eight Cam Locks (1).

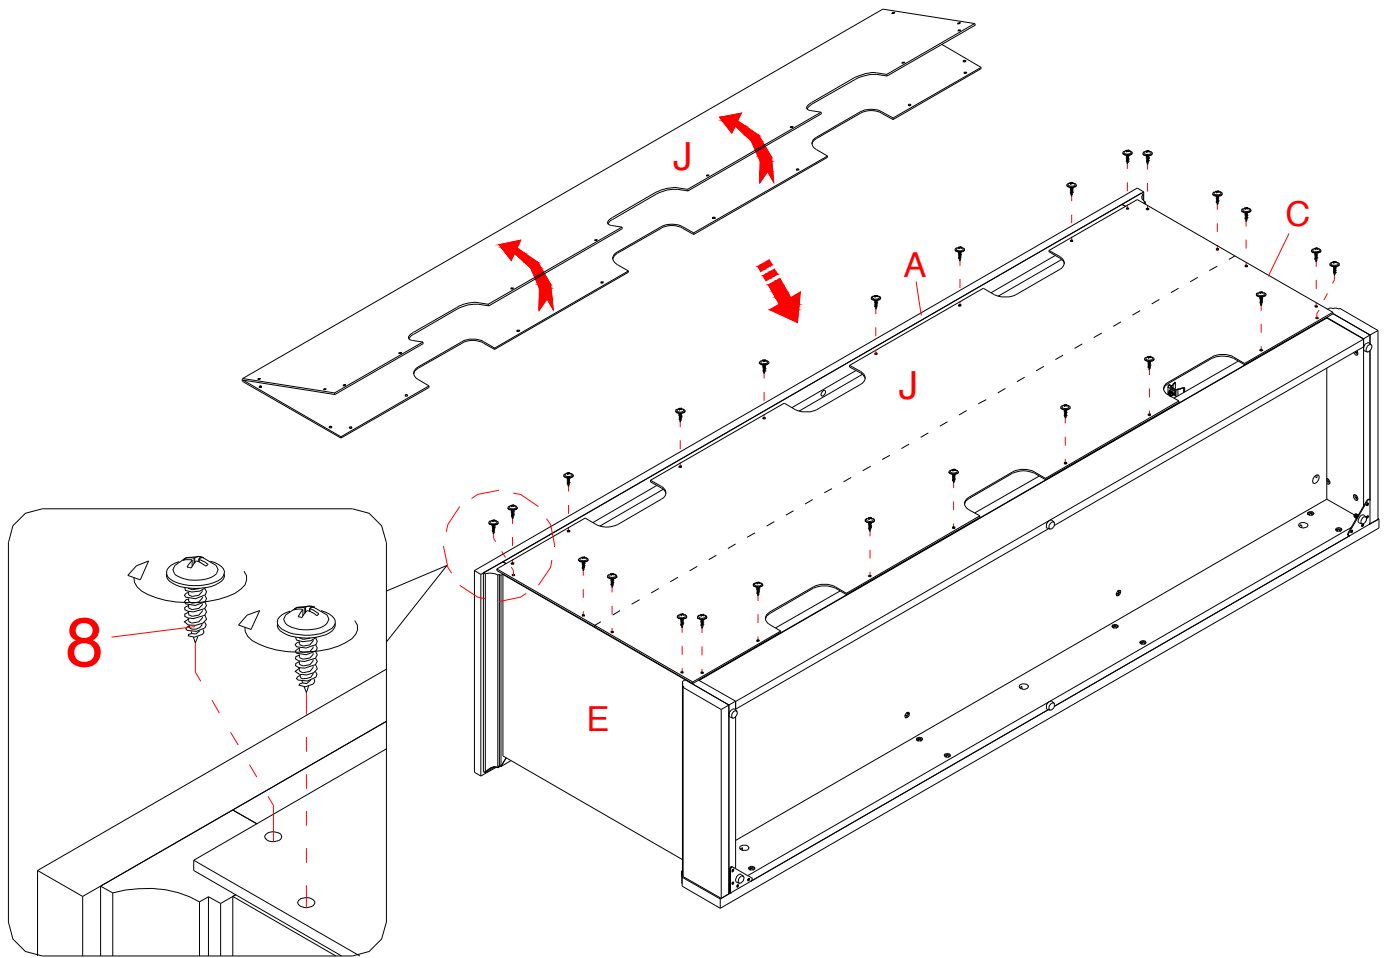 

 M3.5 x 15 mm Washer Head Screw
(24 used in this step)






   13. Now, go back and securely tighten all the Cam Locks and the Screws. Make sure that all the parts are tight and there are no gaps between the parts. This will help keep the unit square.
14. Unfold the Back Panel (J) and align the pre-drilled holes against the upper long edge with the pilot holes on the back stretcher of the Top Panel (A). Attach the Back Panel (J) in place using the provided Washer Head Screws (8).

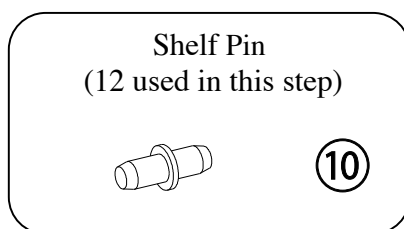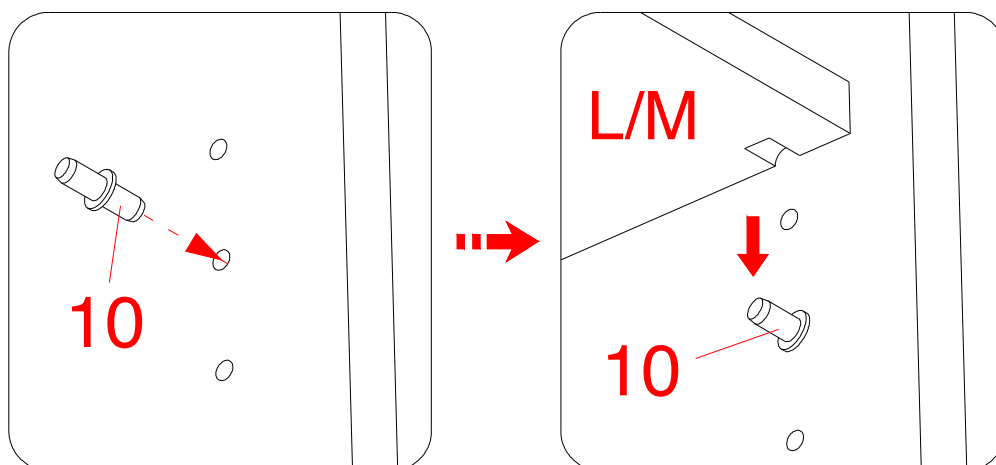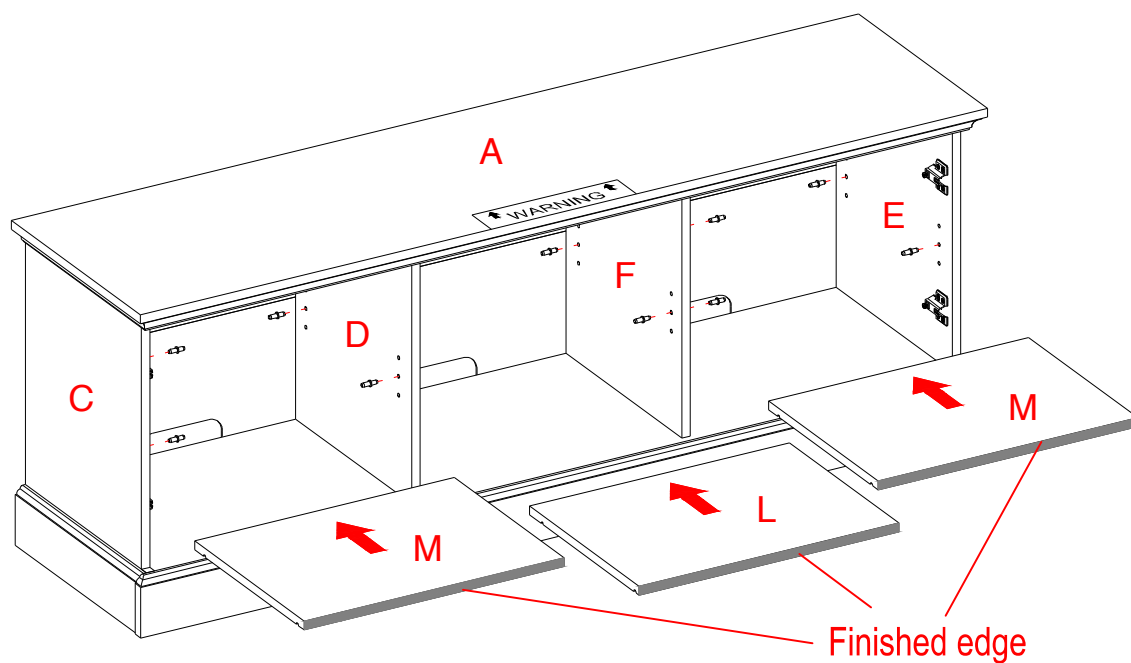

15. Stand the unit upright.

   16. Insert the Shelf Pins (10) into the desired holes in the sides of the compartments. Make sure you place the four Shelf Pins in the same level so the shelf is not tilted. Tilt and rest the Adjustable Shelves (L and M) onto the Shelf Pins (10) with the end notches of the Shelf fit onto the Shelf Pins properly.

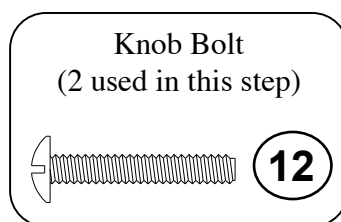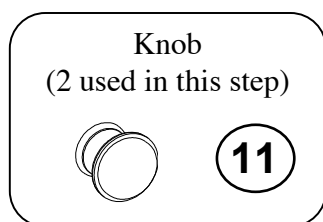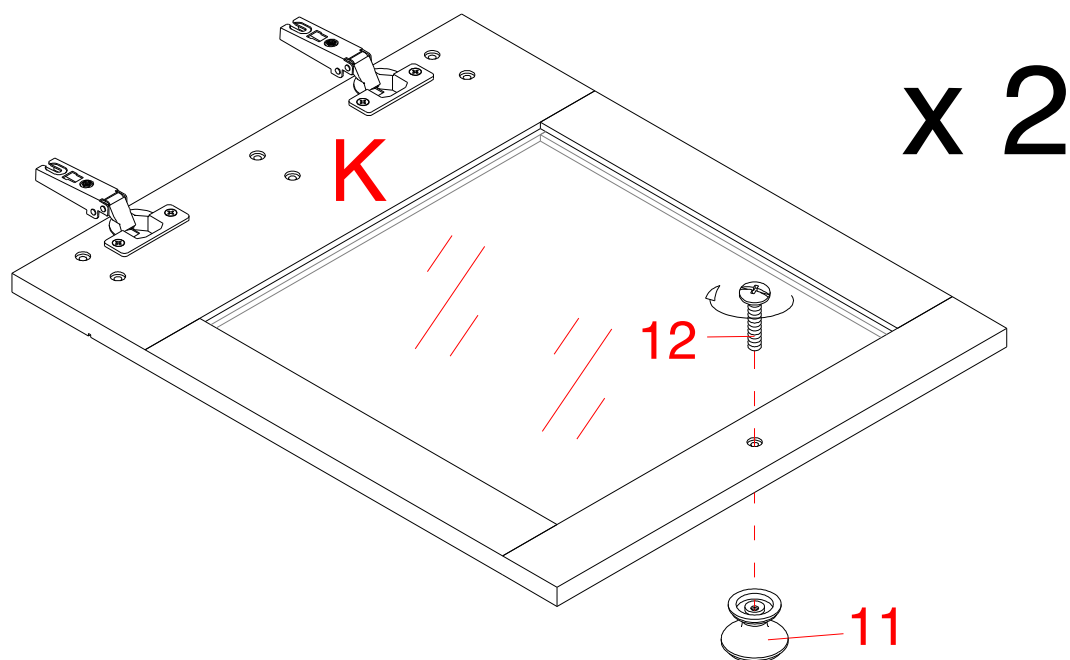

17. Attach one Knob (11) to the front side of each Door (K) with the provided Knob Bolt (12).

 
How to adjust the European adjustable hinges on doors


Shipping may cause doors to go out of alignment. If you find that the doors need to be adjusted slightly, turn the appropriate screw, as illustrated below:

1 - TO ADJUST DOOR FORWARD OR BACKWARD.


2 - TO ADJUST DOOR TO RIGHT OR TO LEFT.

3 - TO ADJUST DOOR UP OR DOWN.

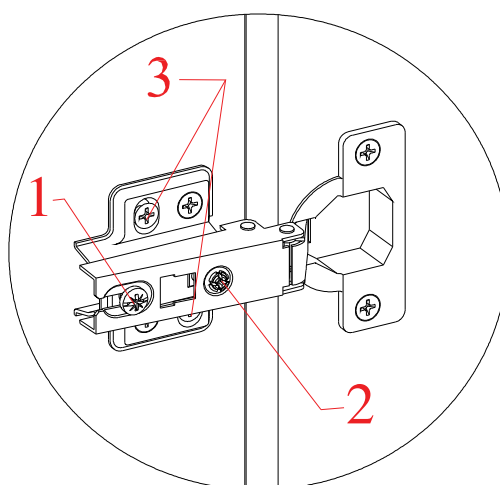

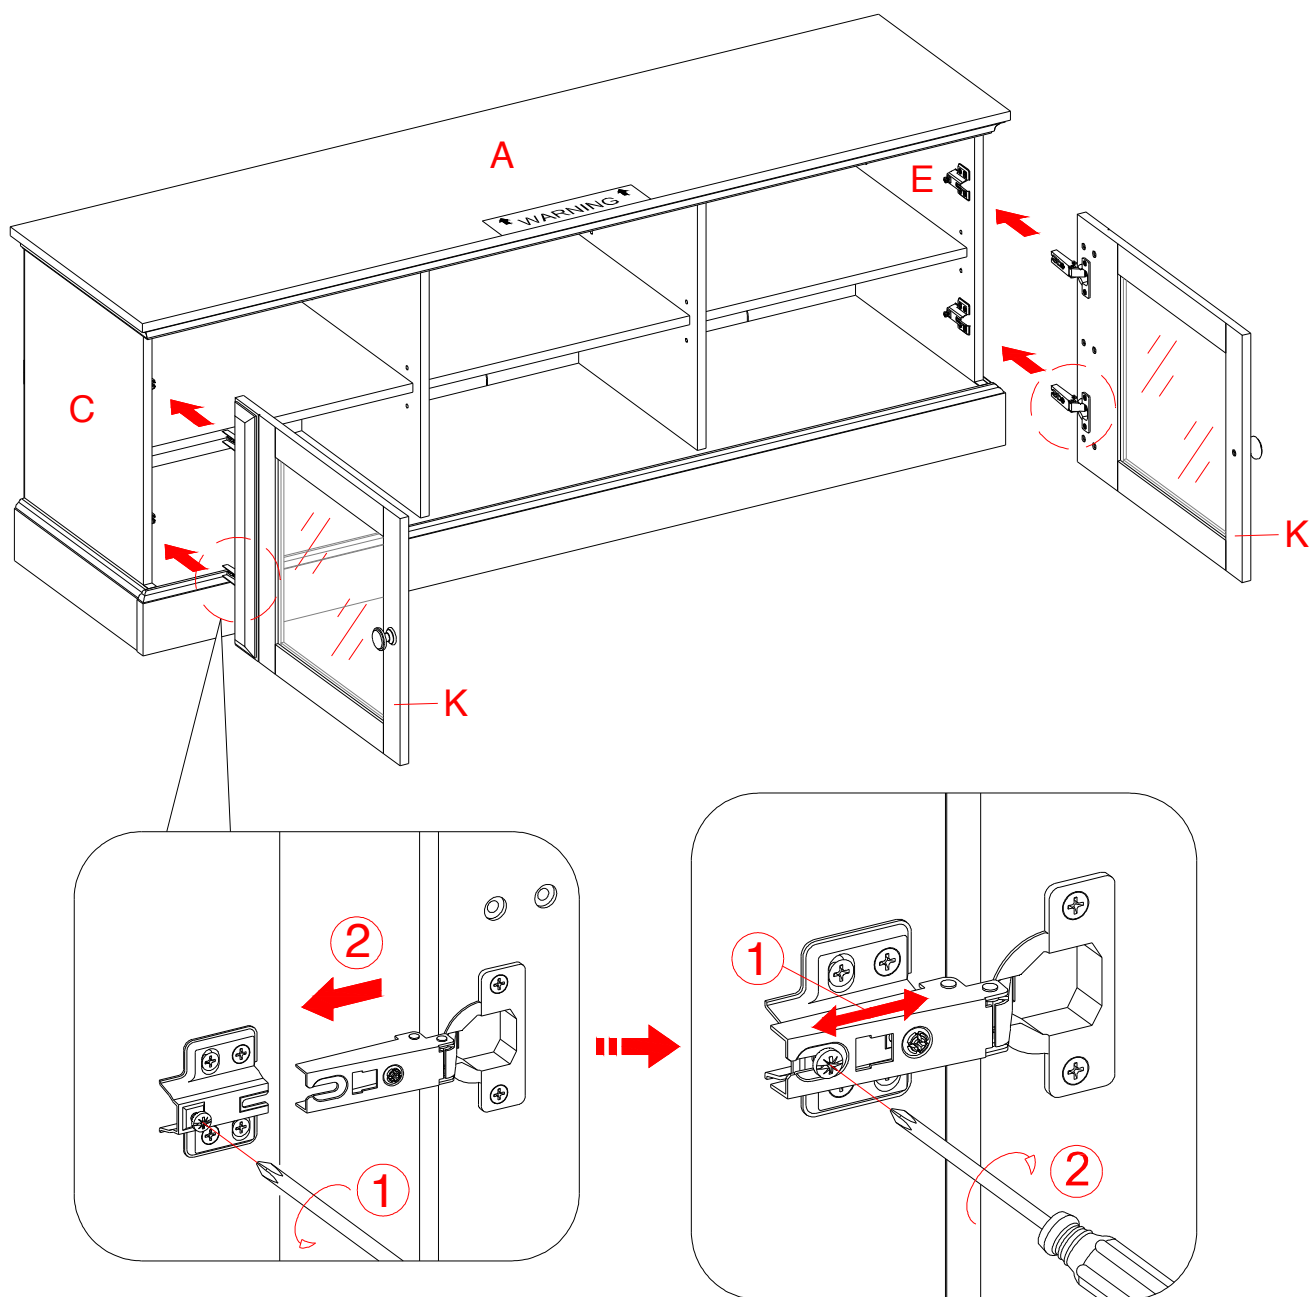


18. Pick up one Door (K) and attach the extended Hinge Arms to the Hinge Bases installed on Left Side Panel (C). Loosen the bolt on the back of Hinge Base for an easy fit. Align and insert the “U” slot on Hinge Arm under the bolt head on the back of Hinge Base. Make sure that both door hinges engage and function properly. Tighten the bolt on the Hinge Base to lock the hinges in place.
19. Repeat the same procedure to attach the other Door (K) to the Right Side Panel (E).
20. Open and close the doors to make sure they are aligned and shut correctly. If necessary, adjust the screws for a good fit. Refer to the hinge sticker on the door for adjustment.

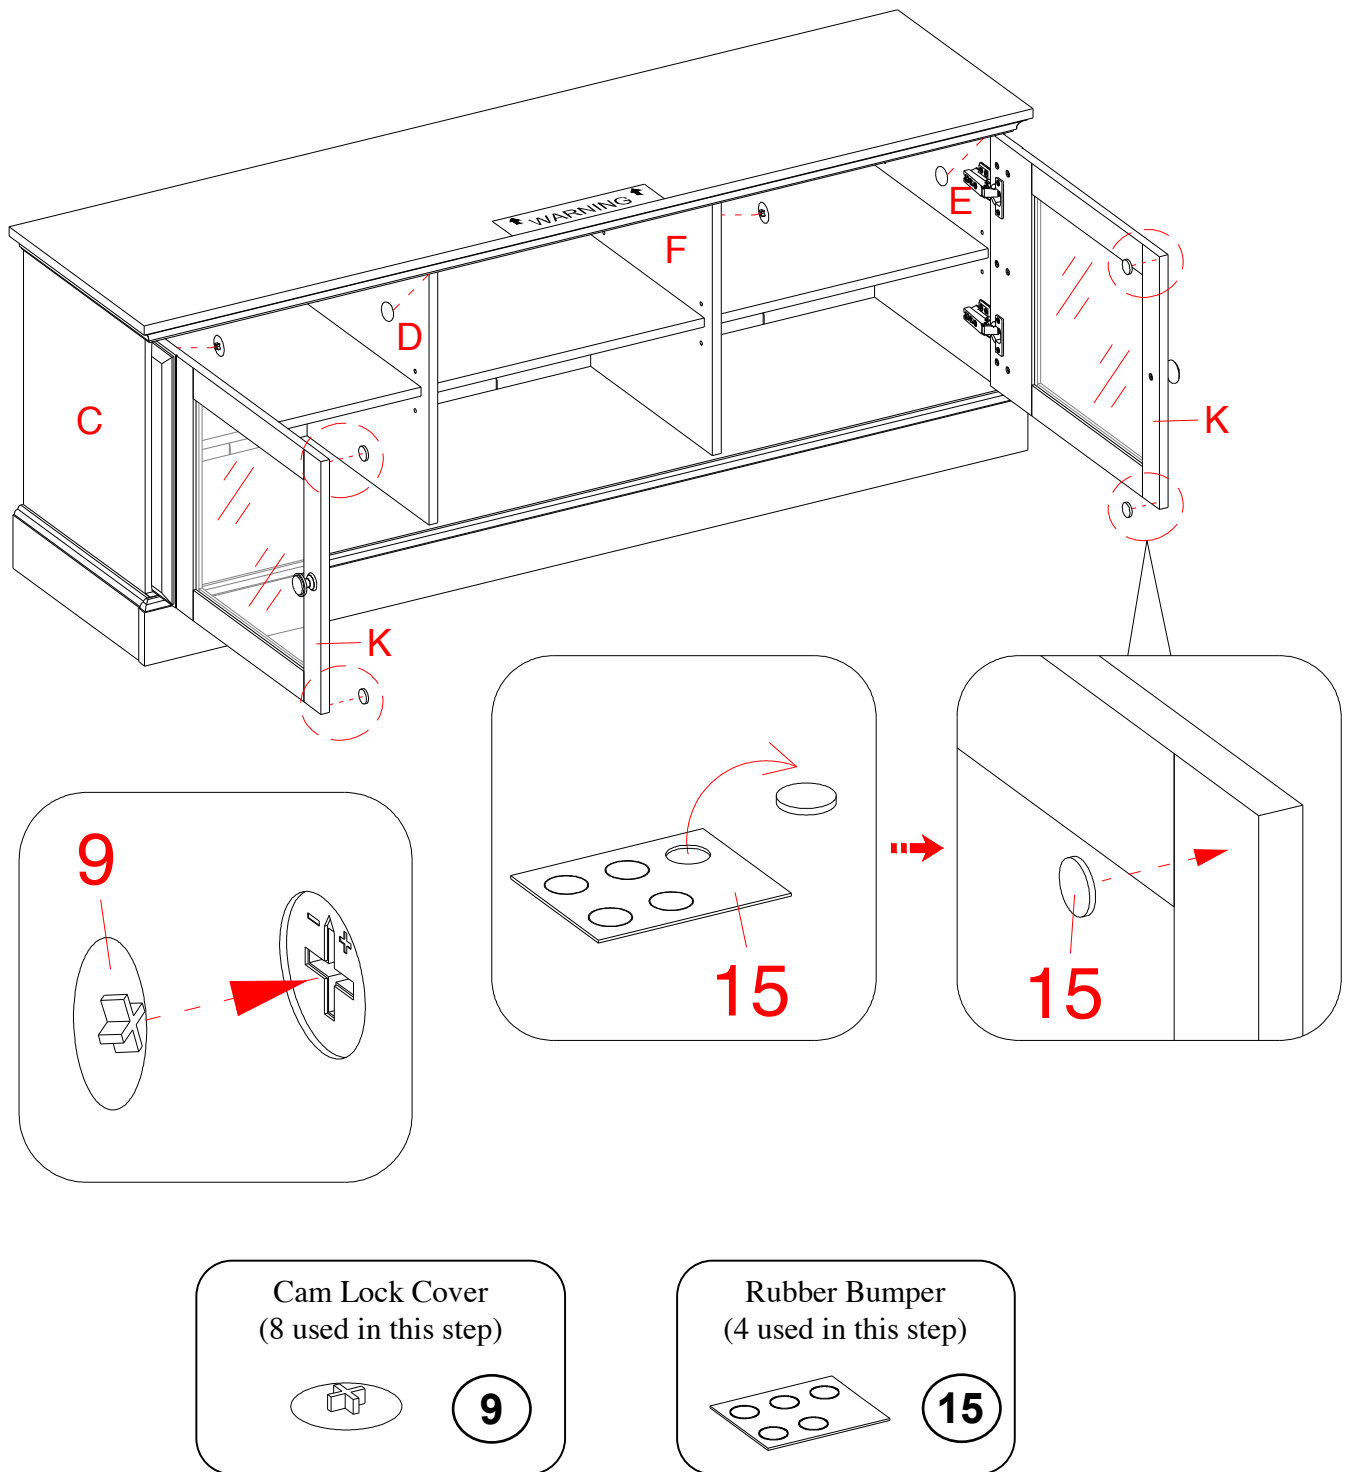

21. Plug the Cam Lock Covers (9) onto the visible Cams Locks to conceal the Cams.

22. Peel off the Rubber Bumpers (15) from the bumper card and stick them at the outer corners of the Doors (K) where they come in contact with the Partition Panels (D and F).

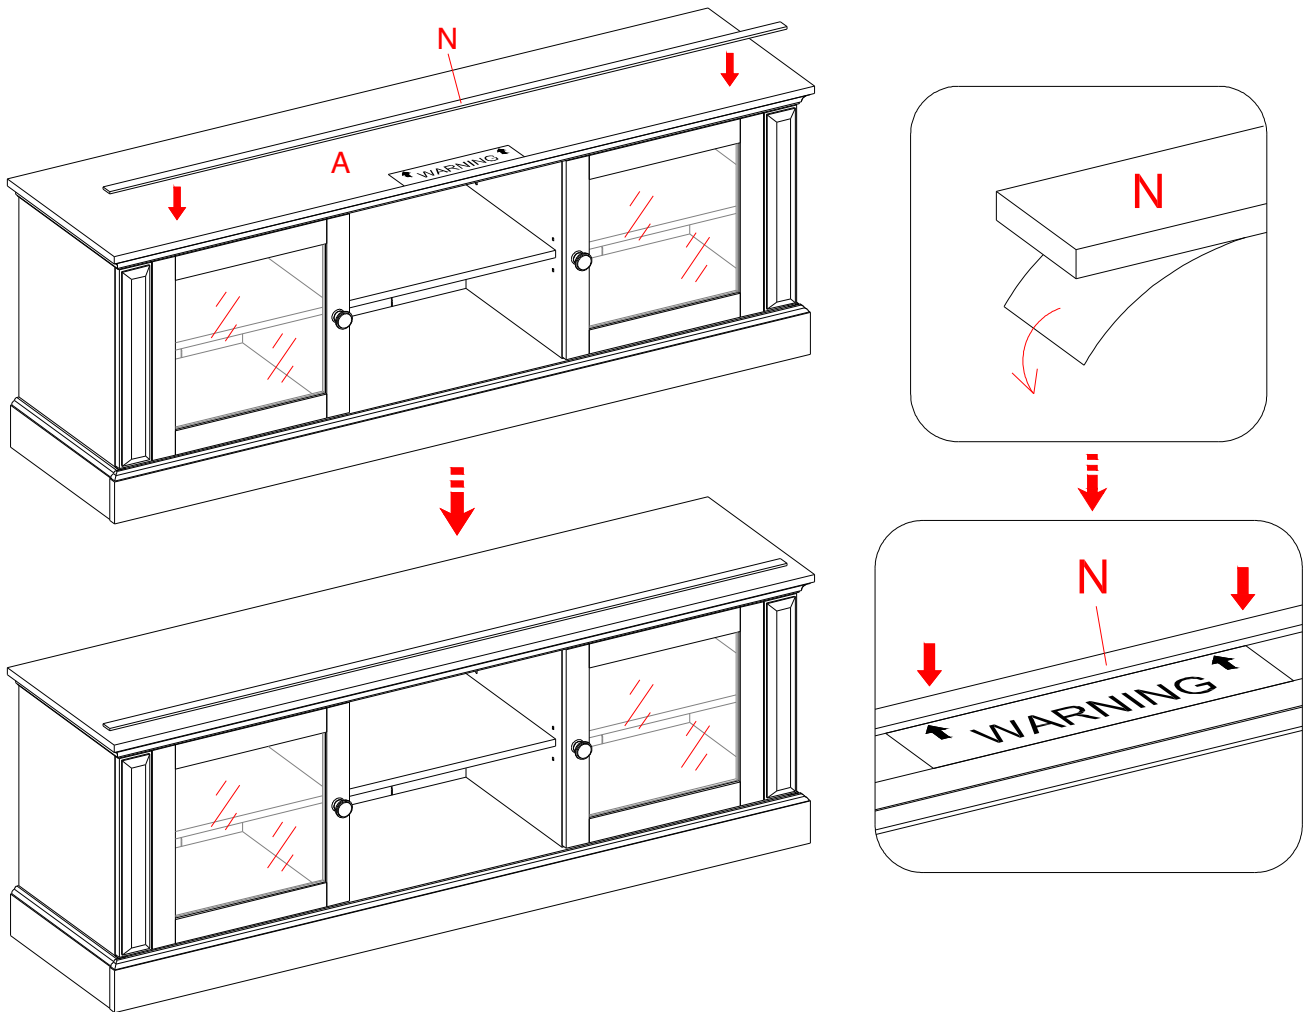

NOTE: You must install the strip stopper to prevent the TV from tipping when placing your flat panel television directly on the console.

23. Remove the paper backing from the Stop Rail (N), then properly align the Stop Rail with the top edge of the stopper template on the Top Panel (A). Press down on the Stop Rail to help adhesion.
24. Carefully remove the stopper template from the Top Panel (A).



LIMITED SIX-YEAR FURNITURE WARRANTY

We warrant this product to you, the original purchaser at the time of purchase printed on a dated store receipt from an authorized VIDAO retailer and for a period of six-years thereafter that our furniture product and all its parts and components are free of defects in material and workmanship under normal use. This warranty is subject to the provisions below. VIDAO's sole obligation and the purchaser's exclusive remedy pursuant to these warranties are limited to replacement at VIDAO's sole discretion. There are no other warranties except as expressly set forth below either expressed or implied, including any warranty of merchantability for any particular purpose.

Should you be missing any of the assembly parts or components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

Our Customer Support Center is available Monday to Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us please call 1-855-998-4326 or visit www.sibrandssupport.com.

This warranty is expressly limited to the replacement of furniture parts and components described in the parts list located in the Instruction Manual included with the product.

This warranty applies under conditions of normal use.

This warranty does not cover: any product, which has been subject to damage due to improper assembly or disassembly, products which were not assembled, installed, used, or maintained in accordance with the product assembly instructions & warnings, acts of nature, misuse, neglect, accidents, abuse, exposure to elements, outdoor use, extreme temperature ranges, damage during transit, commercial use, modification of, or to any part of the product or attachments to the product not approved by VIDAO. Also not covered are costs for assembly/dis-assembly labor, costs incurred in shipping the unit or parts for warranty repair/exchange or any products purchased from unauthorized VIDAO sellers. Under no circumstances shall VIDAO, be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product. Nor shall VIDAO have any responsibility for incidental or consequential damages resulting from the breach of this warranty including but not limited to inconvenience, purchase or rental of replacement products, loss of profits or commercial loss.

We reserve the right to request damaged parts or units be shipped to our offices for inspection or confirmation of any warranty claims.

This warranty does not cover product sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

Schoenfeld International Inc and VIDAO
5001 American Boulevard West
Suite 275
Bloomington, Minnesota 55437

©Schoenfeld International Inc., 2017
VW60C Rev. 1.0 August 2017