


Tilting, Swiveling & Rotating Flat Panel Wall Mount



Installation Guide

Model: VXAT4290

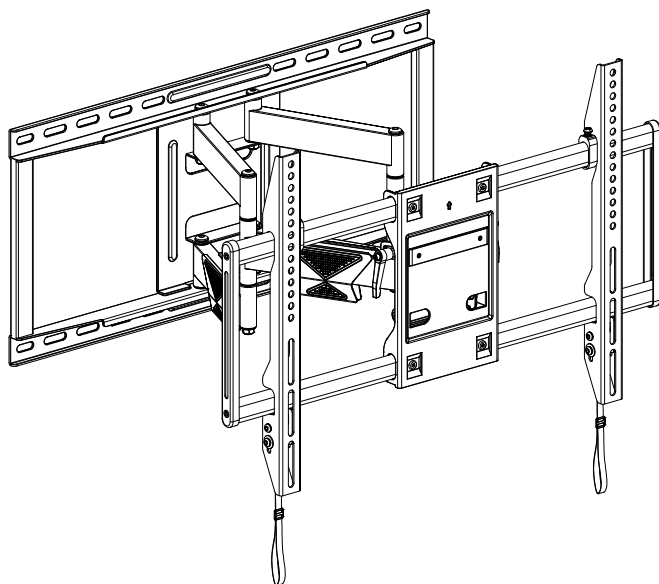

- Easy installation
- Low profile
- Safety locks secure the TV on the mount
- Easy to adjust tilt angles: +5 to -15 degrees
- Rotation adjustment
- 90 degree left to right swivel range



- Supports most 42"- 90" Flat Panel TVs
- Maximum Weight Capacity: 150 lbs.
- Supports VESA Sizes up to 600x400

**For technical assistance or troubleshooting please call
1-855-998-4326 or visit www.sibrandssupport.com**



This product Wall Mount frame is intended for use only with an apparatus which has a maximum weight of 150 lbs. See apparatus instructions. Using with an apparatus heavier than the maximum weight indicated may result in instability and cause possible injury.

READ THIS FIRST

Read this entire manual! Do not attempt to install this product if you do not understand the instructions. Contact a qualified mount installer if you have any doubts about a safe and secure mount installation, or if you are not sure what specific wall materials you are attaching this mount to. Check all the parts carefully to make sure there are no missing or damaged parts. Improper installation may result in damage to your TV, property, and personal injury.



This product is intended only to mount a television of the indicated size and weight. Using this product to mount televisions heavier than the maximum weight capacity can damage equipment and cause personal injury.

Schoenfeld International Inc. and VIDA0 are not responsible for personal injury or product damage due to mishandling, incorrect mounting, incorrect assembly, or incorrect use of this product.



CHILD SAFETY

How and where you use your television wall mount is extremely important for Child Safety. As you set up and use your new product, keep all of these safety tips in mind.

- **One size of TV wall mount does not fit all TVs. Use only a TV wall mount rated for the weight of your TV and the size of your screen. Your TV wall mount assembly instructions contains specific information on the maximum weight and screen size combination that your wall mount can safely support. Do not exceed the maximum weight of screen size for any TV wall mount.**
- **Carefully read all of enclosed instructions for proper use of this product. If you have any doubts about safe and secure assembly, please contact a professional.**
- **Don't let children climb on or play with mounts or TVs.**
- **Remember that children can become excited while watching a program, especially on a "larger than life" TV. Make sure to place or install the TV wall mount where it cannot be pushed, pulled on, or knocked down.**
- **Make sure that you route all cords and cables so that they cannot be pulled or grabbed by curious children.**







Always wear safety goggles to when drilling or installing hardware.

Tools

For your convenience, we have included an allen wrench with this mount. For the best assembly experience and mounting safety, we always recommend using full-size tools for each assembly step.

Below is a recommended tool list you will need for proper and safe installation. See applicable warnings in this manual about certain types of mounting surface materials and the special hardware and tools that should be used.

- **Drill with a specific size drill bit to pre-drill holes in the wall**
- **Stud finder**
- **Tape measure**
- **Pencil**
- **Screw drivers**
- **Socket wrenches**
- **Small hammer**
- **Safety goggles**

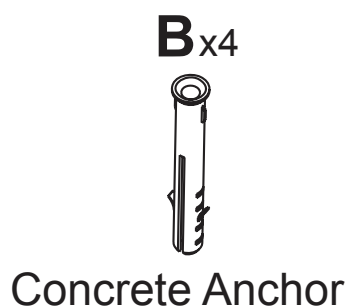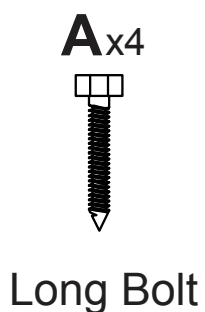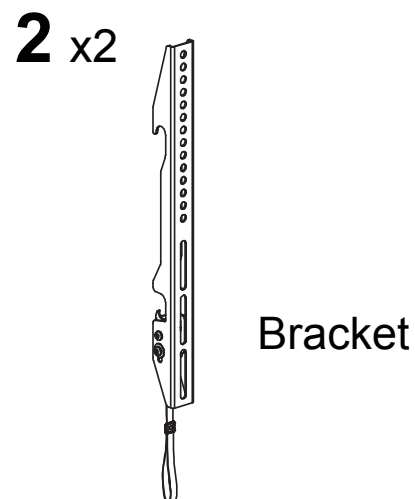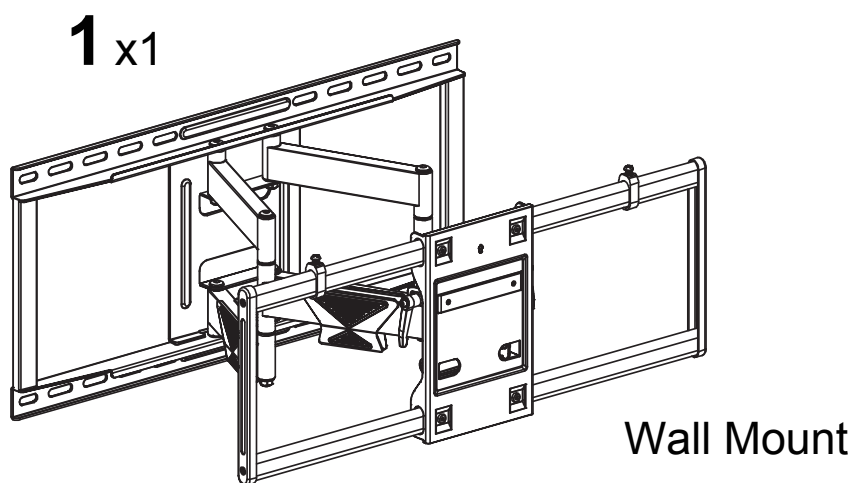

ID	Qty	Description
D	4	M4x12mm bolts
E	4	M5x12mm bolts
F	4	M6x12mm bolts
G	4	M8x25mm bolts
H	4	M4x30mm bolts
I	4	M5x30mm bolts
J	4	M6x35mm bolts
K	4	M8x35mm bolts
L	4	M8x50mm bolts

ID	Qty	Description
M	4	M5/M6 spacers
N	4	M8 spacers
O	4	10mm spacers
P	8	2.5mm spacers
Q	4	M4/M5 washers
R	4	M6 washers
S	4	M8 washers
T	1	Allen Wrench
U	1	Bubble Level

Step 1: Attach the left and right brackets to your TV



Do not force the bolts into the mounting holes on your TV. Do not use an electric drill to tighten these bolts on your TV. This could damage the equipment or cause personal injury.

CAUTION: Do not place the TV face down on a hard surface when installing the mounting plate on the TV. Placing the TV face down on a hard surface can result in equipment damage. Use a blanket or other suitable surface.

Check your TV manual to confirm the required bolt diameter according to the size, depth, and position of the mounting holes in your TV.

For correct installation, install the brackets with the hook on each bracket facing down

Center the Brackets (2) vertically on the rear of the TV. Attach the Brackets (2) to the rear of the TV using four of the bolts (D-L) with the proper size washers (Q-S) as shown in Fig. 1a. Do not over tighten.

If the back of the TV is not flat, or if the bolts are too long, it may be necessary to use Spacers (M-P) as shown in the Fig. 1B. Multiple Spacers can be used with each bolt to reach the proper length.

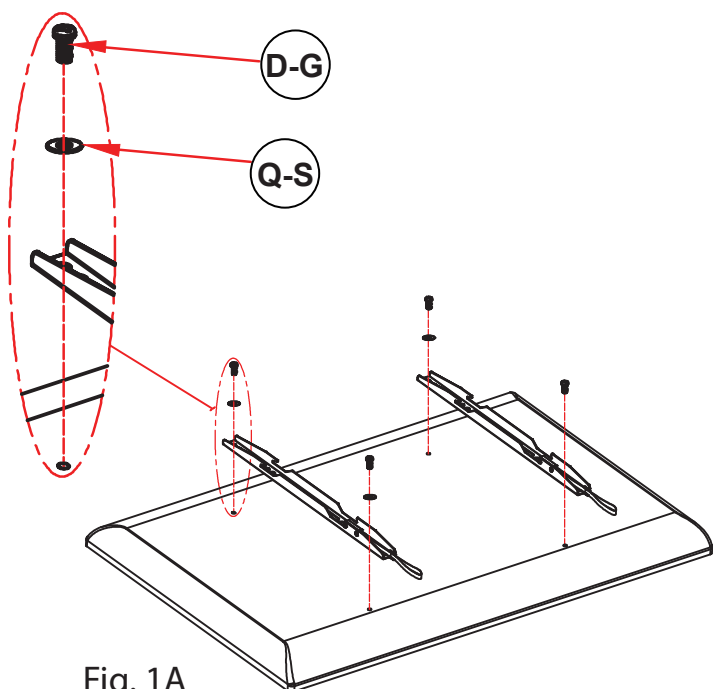


Fig. 1A

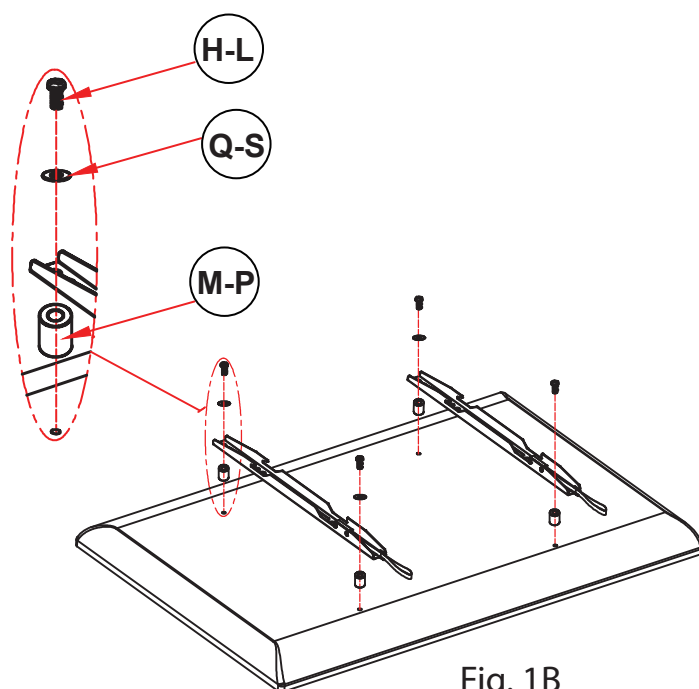


Fig. 1B

Step 2: Find and mark the best position for the wall mount on the wall.

The best viewing height is parallel to the eye level of a person sitting on a couch. Normally, this is about 4 feet above floor level.

In addition to your eye level height when you are seated, the following two measurements will help you determine the perfect height for your wall-mounted television (Fig 2):

- The distance from your viewing location to the wall.
- The vertical distance from eye level to the floor plus the distance from your viewing location to the wall when the viewing angle is 15 degrees.

For example:

- If distance 'a' is 5 to 7 feet (1.5 to 2.1 meters), distance 'b' is about 1 foot (0.3 meter)
- If distance 'a' is 8 to 13 feet (2.4 to 4 meters), distance 'b' is about 3 feet (0.9 meter)
- If distance 'a' is 14 to 17 feet (4.3 to 5.2 meters), distance 'b' is about 4 feet (1.2 meters)

Add the eye level height plus 'b' to get the ideal height of the center of the television display.

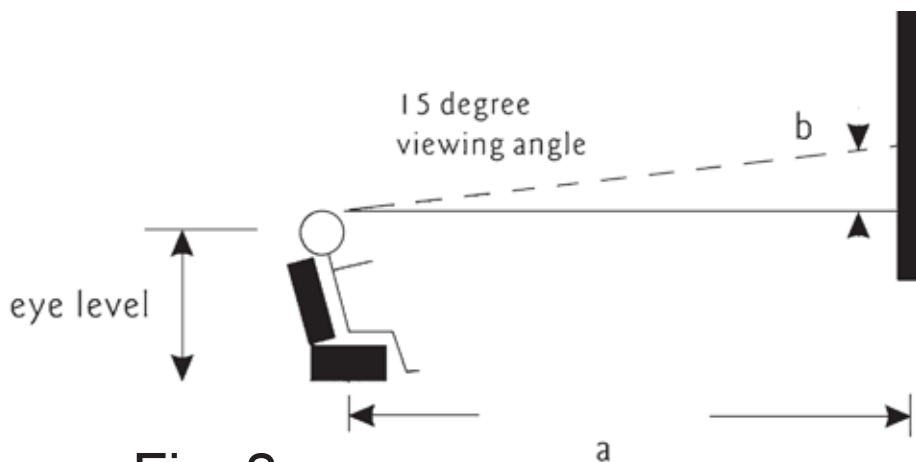


Fig. 2

Step 3: Attach the wall mount to the wall

After determining the ideal height on the wall for your television, follow the mounting instructions for your type of wall construction: wood stud or concrete walls.



Attaching this mount to wood studs or concrete walls requires special tools and hardware to ensure the mount is securely and safely attached to these materials. Concrete will break or crumble if special masonry drill bits and drill operating speeds are not properly used. Consult a professional if you are unsure or have any doubts about the safety of the installation. Personal injury or equipment damage can result if the mount is not properly installed.

Wood stud walls (Fig 3a)

1. Use a pencil, awl, or a nail to mark the location of the wall stud centers (Fig. 3a) after locating the stud with an electronic stud locator. The distance between the marks should not be less than 16 inches (Studs must not be less than 16" inches.)
2. Place the **Wall Plate (1)** flat against the wall with the center of the mount in the desired location, aligning the holes in the mount with the studs (Fig. 3b). Use the wall mount plate as a template to mark the location of the four mounting holes on the wall. Make sure that the mounting holes are level and are parallel using the built-in level on the front of the **Wall Plate (1)**.
3. Use a $7/32"$ (5.5mm) drill bit to pre-drill holes at least 2.5" deep at the marked locations (Fig. 3d).
4. Use a wrench, the four **Long Bolts (A)**, and **Washers (C)** to attach the wall mount to the wall as shown in Fig. 3c. Do not use wall anchors in wood stud walls.
5. Use the **Level** placed on the front of the **Wall Plate (1)** to level the wall mount, repositioning as necessary, then firmly tighten the bolts. Do not overtighten.

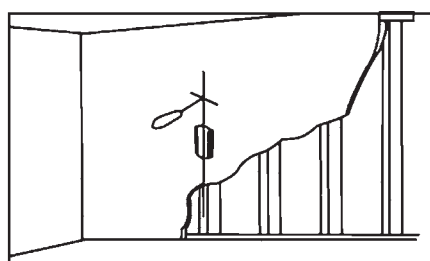


Fig. 3a

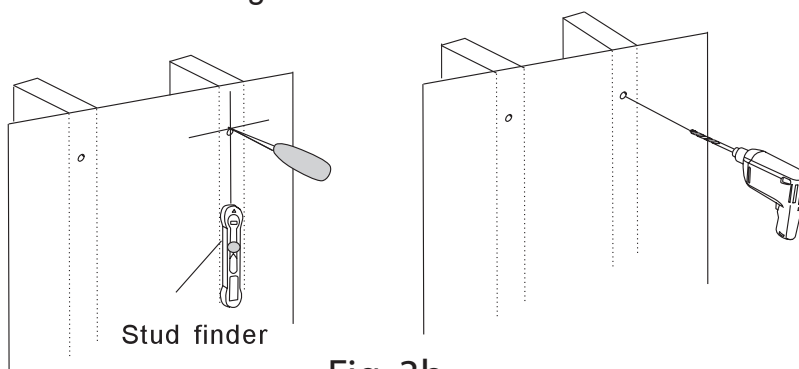


Fig. 3b

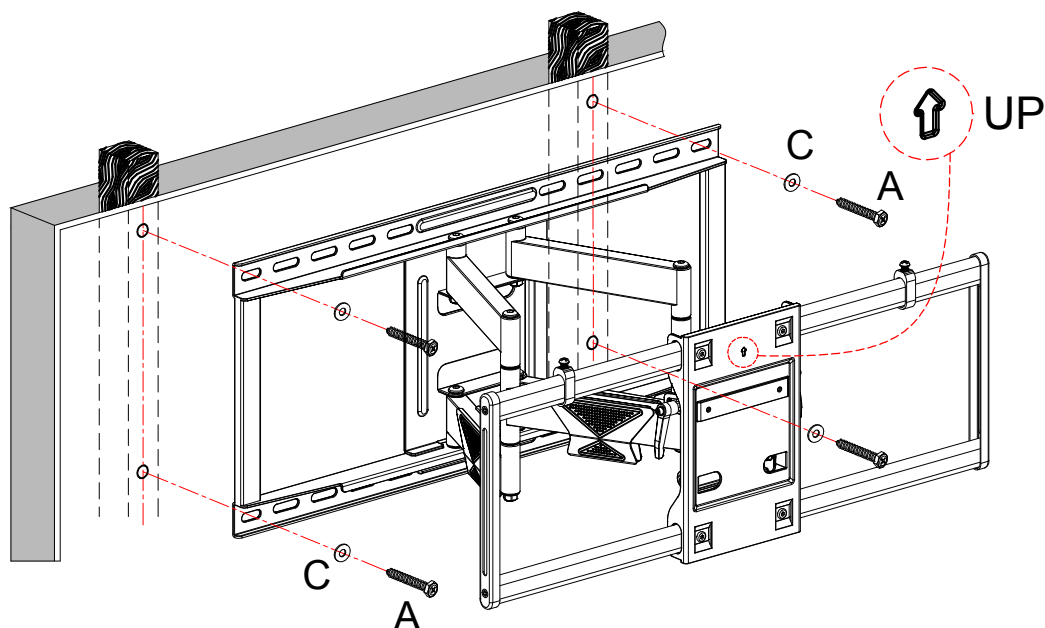
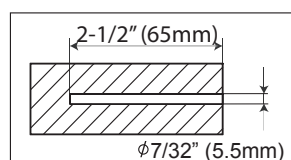


Fig. 3c

Concrete Walls:

1. Place the wall mount flat against the wall in the desired location. Use the wall plate as a template to mark the location of the four mounting holes on the wall. Make sure that the mounting holes are level and parallel. Make sure the horizontal holes are no closer than 16".
2. Use 3/8" (10mm) drill bit to pre-drill four holes at least 2.5" (65mm) deep (Fig 3d) at the marked locations.
3. Insert a wall anchor (B) into each pre-drilled hole and lightly tap it with a hammer until the wall anchor is flush with the wall.
4. Use a wrench, the four long bolts (A) and washers (C) to attach the wall mount to the wall with the wall anchors (Fig. 3e).
5. Use the magnet level placed on the front of the mounting plate to level the wall mount, repositioning as necessary, then securely tighten the bolts.

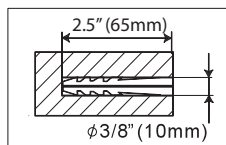
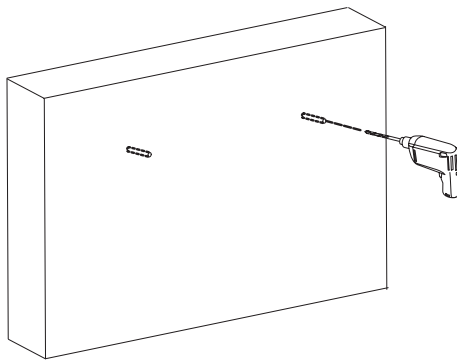


Fig. 3d

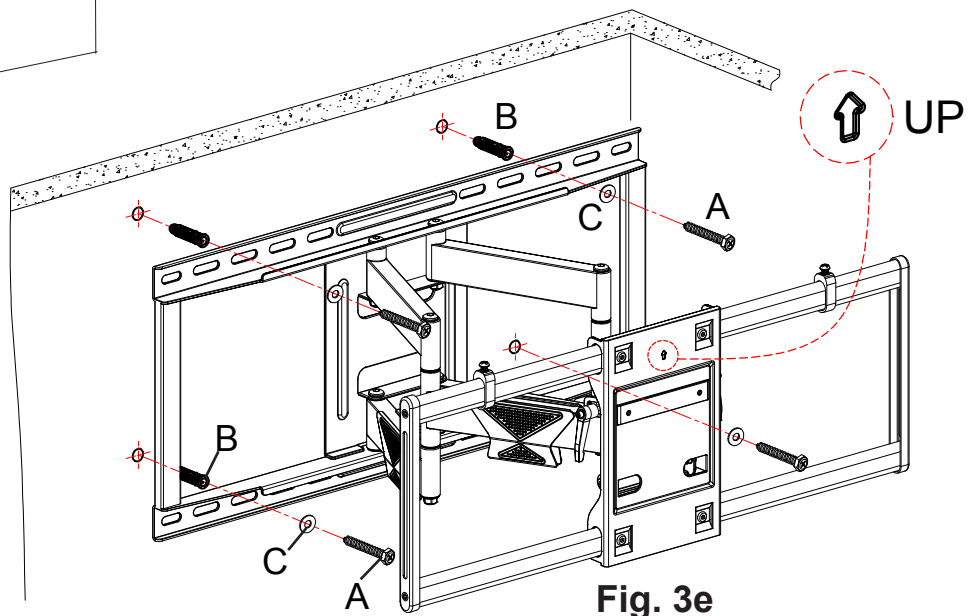


Fig. 3e


Step 4: Hang the television display



A large television requires two people to lift. Schoenfeld International Inc. and VIDAØ are not responsible for equipment damage or personal injury due to mishandling.

Do not release the TV until you are sure that it is securely mounted. Releasing the TV without first ensuring that it is securely installed can result in equipment damage or personal injury.

1. Lift the television display with the brackets securely attached up to the wall plate (Fig. 4a).
2. Hook the top of brackets (2) onto the top flange of the wall plate (Fig. 4b), then swing the screen carefully down.
3. As the TV swings down and the lower part of the brackets come in contact with the wall mount plate, secure each bracket to the Mount plate by pulling down on the attached ribbon (one bracket at a time) to open the spring-loaded lock (Fig. 4c). Release each ribbon to close and secure the lock mechanism. Test each lock by pulling gently upward from the bottom of the TV. If the lock is secure the TV will not pull upward.

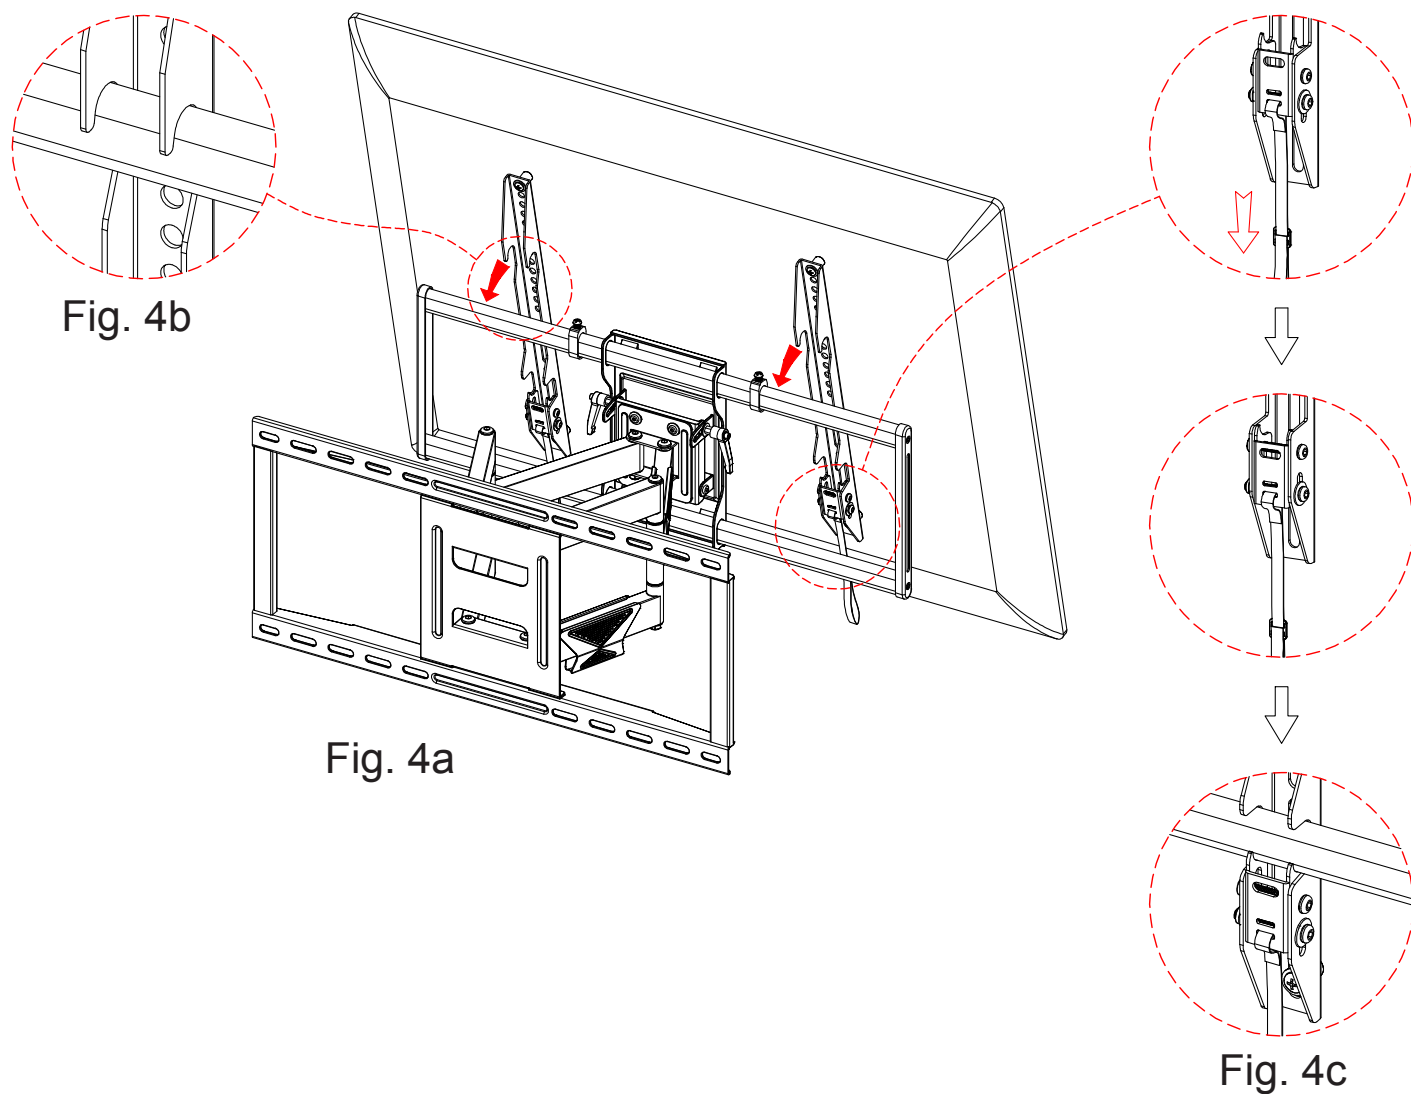

Remove the TV from the Wall plate

To remove the TV from the Wall plate pull down on each ribbon to release the security lock and gently pull the bottom of the TV away from the wall, then lift the TV off the top of the Wall plate.



A large television requires two people to lift. Schoenfeld International Inc. and VIDAÖ are not responsible for equipment damage or personal injury due to mishandling.

Step 5: Secure the TV Brackets

1. Find the two Stopping Blocks located on the Mounting Plate near the center as shown in Figure 5.
 2. Use a screwdriver to loosen the screw on the top of each Stopping Block.
 3. Slide one Stopping Block so it is firmly touching the Bracket (2) attached to the TV. Then slide the other Stopping Block so it is firmly touching the opposite Bracket (2). (Fig. 5A)
 4. Use a screwdriver to tighten the screws on the top of each Stopping Block. (Fig. 5B)
- This will ensure the TV remains firmly attached to the Wall Mount and will not slide off.

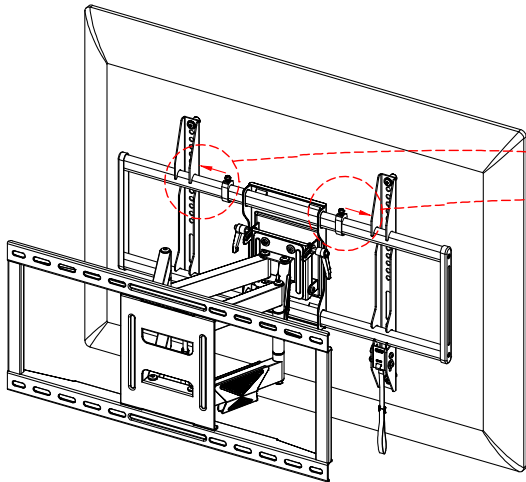


Figure 5

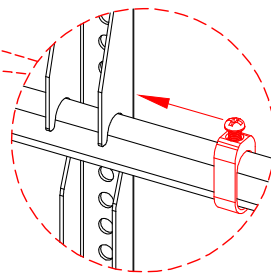


Figure 5A

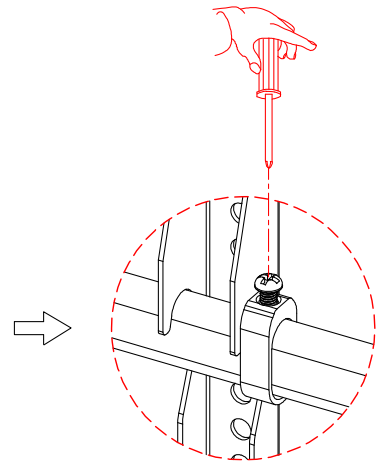


Figure 5B

Step 6: Adjusting the Rotation

1. If necessary, the TV can be rotated slightly by adjusting the two screws which connect the Wall Plate (1) to the TV Plate (2) as shown in Fig. 6.
2. To adjust the rotation, loosen these two screws with the Allen wrench (T) about 1/2 turn each, and gently slide the TV Plate (2) to the left or right depending on your needs.
3. Once the TV Plate (2) is in the correct position, re-tighten the screws by turning the Allen wrench (T) clockwise.


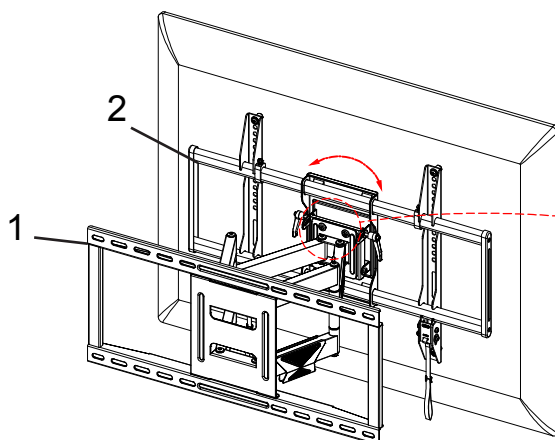


Figure 6

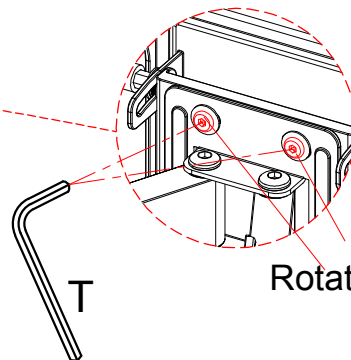

Rotation Adjustment
Screws

Step 7: Adjusting the Tilt

1. The Handles on the front of the Wall Plate mount arm are used to adjust the tilt angle of the TV to your desired angle.
2. These handles are tension levers. To loosen the tilt adjustment, turn each handle counterclockwise until the handle hits the TV Plate and can turn no more. Then pull the handle away from the mount arm to release the spring as shown in steps B & C, and while holding the handle away from the mount arm, turn the handle clockwise (Step D) and release the handle to engage the spring. Now you can turn the handle further counterclockwise to loosen the tilt adjustment more.
3. Adjust the tilt angle of the TV to your liking and re-tighten each handle.
4. To tighten the spring loaded handles and lock in the tilt, turn each handle clockwise and when the handle can turn no further, pull the handle away from the mount arm and then turn the handle counterclockwise and release. Now you can tighten the handle further to lock in the tilt.


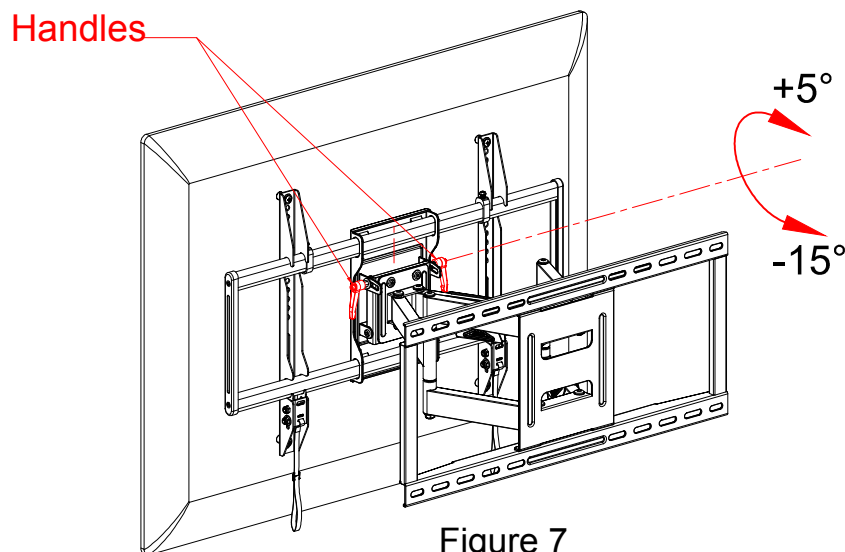


Figure 7



Step 8: Adjusting the Swivel

1. This wall mount can easily swivel left or right without needing to make any hardware adjustments.
2. To adjust the swivel angle, simply grab the sides of the TV with two hands and carefully slide the TV in the desired direction. When the TV is in the desired position, carefully let go of the TV.

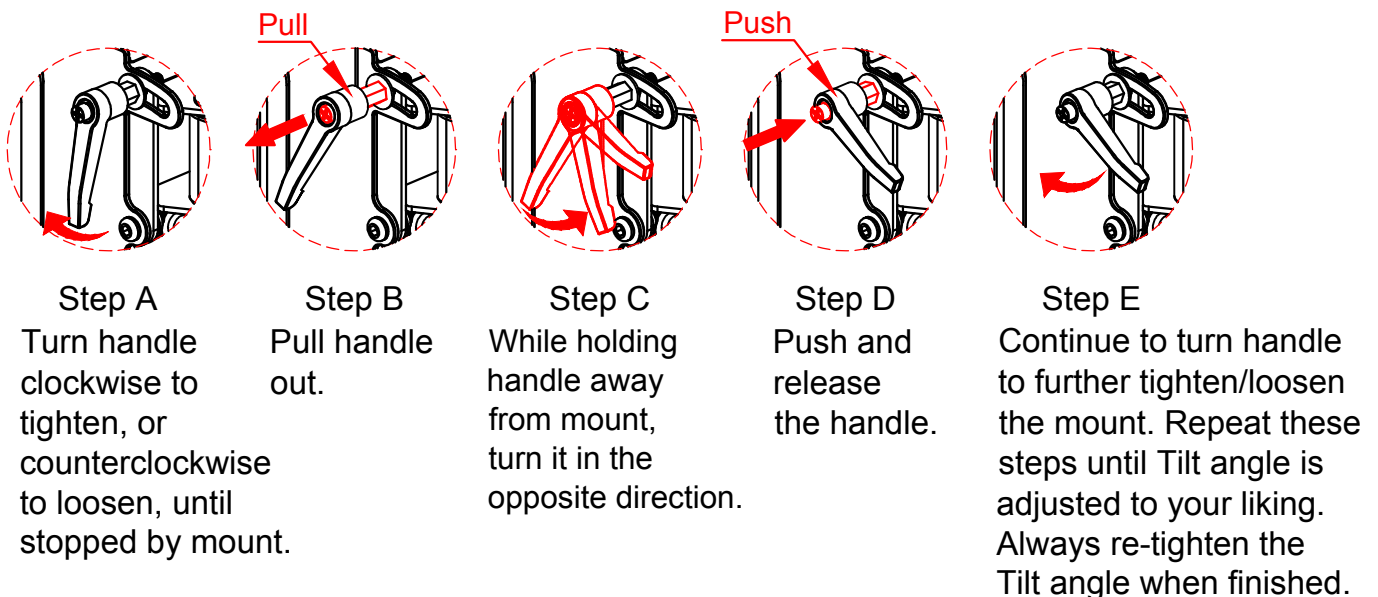

LIMITED SIX-YEAR WALL MOUNT WARRANTY

We warrant this product to you, the original purchaser at the time of purchase printed on a dated store receipt from an authorized VIDAO retailer and for a period of six-years thereafter that our wall mount product and all its parts and components are free of defects in material and workmanship under normal use. This warranty is subject to the provisions below. VIDAO's sole obligation and the purchaser's exclusive remedy pursuant to these warranties are limited to replacement at VIDAO's sole discretion. There are no other warranties except as expressly set forth below either expressed or implied, including any warranty of merchantability for any particular purpose.

Should you be missing any of the assembly parts or components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

For technical support, visit our website www.sibrandssupport.com or call the VIDAO Technical Support Center for technical assistance or troubleshooting at 1-855-998-4326, Monday to Saturday, 10:00AM to 7:00PM EST.

This warranty is expressly limited to the replacement of wall mount parts and components described in the parts list located in the Instruction Manual included with the product.

This warranty applies under conditions of normal use.

This warranty does not cover: any product, which has been subject to damage due to improper assembly or disassembly, products which were not assembled, installed, used, or maintained in accordance with the product assembly instructions & warnings, acts of nature, misuse, neglect, accidents, abuse, exposure to elements, outdoor use, extreme temperature ranges, damage during transit, commercial use, modification of, or to any part of the product or attachments to the product not approved by VIDAO. Also not covered are costs for assembly/dis-assembly labor, costs incurred in shipping the unit or parts for warranty repair/exchange or any products purchased from unauthorized VIDAO sellers. Under no circumstances shall VIDAO, be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product. Nor shall VIDAO have any responsibility for incidental or consequential damages resulting from the breach of this warranty including but not limited to inconvenience, purchase or rental of replacement products, loss of profits or commercial loss.

We reserve the right to request damaged parts or units be shipped to our offices for inspection or confirmation of any warranty claims.

This warranty does not cover product sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

Schoenfeld International Inc. and VIDAO

5001 American Boulevard West
Suite 275
Bloomington, MN 55437