



7" Touchscreen Tablet

User Manual

Model: V7TAB8KB

If you are experiencing a problem with the operation of this Tablet – Do not return it to the retailer!
Your Touchscreen Tablet includes Free Technical Support by Phone or Internet and we are glad to help you with any Problems.
For Technical Support by Internet, simply touch the Customer Help icon on the lower right–side of the home screen to immediately be directed to our Technical Support website. For Technical Support by Phone, please call 855-998-4326, Monday to Saturday 10:00 AM to 7:00PM.

Si tiene algún problema con la operación de esta tablet, no la devuelva al comercio minorista donde la compró.
Su tablet de pantalla táctil incluye soporte técnico gratuito por teléfono o a través de Internet y nos complacerá ayudarlo a resolver sus problemas.

Pulse aquí para la versión en español de este manual del usuario (página 25)

WARNINGS

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To reduce the risk of electric shock, do not open the cabinet. No user serviceable parts are inside. Refer servicing to qualified personnel.
- This product should not be exposed to excessive heat such as direct sunlight, fire, or other heat sources.
- Caution: Do not expose this appliance to dripping or splashing liquids. Do not put objects filled with liquid, such as vases on or near the appliance.

 THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE FRONT OR REAR COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.
--	---	---

FCC WARNINGS

WARNING: Changes or modifications to this unit not expressly approved in this manual could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and/or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the POWER cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as POWER-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Do not use this device while operating a motor vehicle.

1. Getting to know your device

Front



Back



Part Name	Description
1. Touch Screen	Use a finger to control the system & application.
2. Camera	A built-in webcam allows you to capture still images, record videos, chat online and capture panorama pictures.
3. Charge Indicator	A Red indicator light will appear while the device is charging. After the device has fully charged, the light will turn off.
4. Speakers	Produces sounds from music files, movies, games, system notifications and more.



Ports and Buttons

Port & Button Name	Description
1. Power button	Press and hold the power button for 2-3 seconds to power ON your device. Press and hold the power button for > 3 seconds to turn OFF the device. Press and release the power button if you want to put the tablet into a sleep mode. If the tablet is in a sleep mode, press and release the power button to wake the tablet from of sleep mode.
2. microSD® Card Slot	Supports SD or SDHC cards up to 32 GB (not included)
3. Mini-USB port	Connects peripherals such as mice, digital cameras, MP3 players, and more that use a Mini-USB connection. Use to charge your tablet from a Computer
4. Power Jack	Connects AC power supply to power the device and charge the battery.
5. Headphone Jack	For external headphone connection with a 3.5mm jack.
6. Microphone	Receives sounds and voice for recording.
7. Reset	When the system is not responding or is inoperative, insert a thin, straight object (such as a paper clip) in the manual reset hole to perform a soft reset on your device.
8. Home Button	Press to return to the Home screen. Press again to open the Application Drawer.

1.1. Accessories

The carton contains a 7" Touchscreen Tablet, a mini USB to USB cable, and an AC Power Adapter. If anything is missing or damaged upon opening the box, immediately return the tablet, all accessories, and all packaging to the dealer.

1.2. microSD Card

Your Tablet comes with 8GB of built-in memory for storage. Some of the preloaded programs and the operating system will use approximately 2-3GB of space. You can add up to an additional 32GB of storage space to your device by using a SD or SDHC microSD card (not included). Data can be saved to the built-in memory or to the microSD card. In addition files can also

be transferred to a microSD card from your personal computer and then imported into your Tablet.

- **To install the microSD card**
 - Insert the microSD card, making sure the gold contacts are facing down.
 - Push the microSD card in gently into the slot (2) until it locks into place.
- **To remove the microSD card**
 - Push in gently on the microSD card and it will pop out slightly from the slot. Pull the card out of the slot. (2)
 - **Warning:** Follow the instructions for safe removal of the microSD card from the tablet. Improper removal of the microSD card may cause data loss or unpredictable system issues. For safe removal, tap > Settings > Storage > Unmount microSD card.

1.3. Charging Battery

When you first receive your device the battery will only be partially charged. To fully charge the battery, allow it to charge for 5 hours to ensure it's fully charged before using the tablet.

1. Connect one end of the AC adaptor to the power jack (6) of the device.
2. Plug the other end of the AC adaptor into a wall outlet to start charging.
3. The red LED on the front of the device will turn off when it is fully charged.

Tips: To increase battery life

- Lower the screen brightness
- Reduce the time until the device enters the Sleep mode
- Turn off the Wi-Fi when an Internet connection is not required
- Close any applications when finished using them or they will continually run in the background.
- Turn your device completely off when finished using.

1.4. Turning the Device ON or OFF

- To turn ON your device:
 - Press and hold the Power button (1) for at least 2 seconds until an image appears on the screen.
- To turn Off your device:
 1. Press and hold the Power button (1) for at least 2 seconds
 2. A pop-up window will appear, tap **OK** to confirm power shutdown or tap **CANCEL** to return to the main screen.
- To put your device into the Sleep (Power Saving) mode:
 - Press & release the **Power** (1) button. This will turn the display off and put the tablet into a power saving Sleep mode.
 - To wake your device from the Sleep mode, press & release the **Power** button (1).


1.5. Common gestures:

- **Tap** - To select or activate something, lightly touch and release the selection.
- **Type** - To type something, such as a name, password, or search terms, just touch where you want to type and a keyboard pops up to let you type into the field.
- **Touch & hold** - Touch & hold. Touch an item and do not lift your finger until an action occurs.
- **Drag** - Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until the item reaches the target position.
- **Swipe or slide** - Quickly move your finger across the surface of the screen, without pausing after touching (so you don't drag something instead). For example, to slide the Home screen left or right to view the 4 alternative screens, just touch the home screen and move your finger left or right to rotate through the different screens.
- **Double-tap** – Quickly Tap twice on a webpage, map, or other screen to zoom. For example, double-tap a picture in Chrome to zoom in, and double-tap again to zoom out.
- **Pinch** - In some apps (such as Maps, Chrome, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen** - The screen image of most applications will rotate with your device as you turn it. Some apps may only display the screen image in one mode and not allow rotating.

1.6. Unlocking the Screen

By default, the screen automatically locks after a period of inactivity. You can set the length of time until the screen locks in the **System Settings**.

- **To unlock the screen**
 1. Press the **Power** button to turn the tablet ON or to wake the tablet from the Sleep mode.
 2. Tap and hold the  icon and slide it to the  symbol on the right side of the screen to unlock the device.

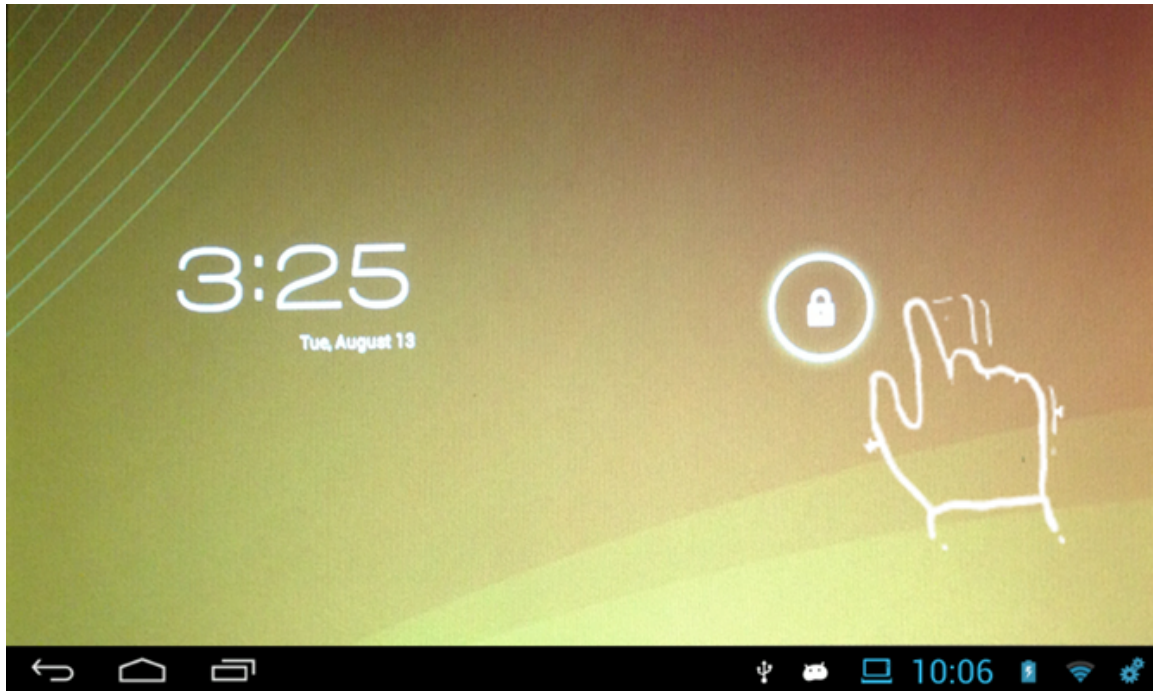

If you are having a problem with the operation of this Tablet – Do not return it to the retailer!

Your Touchscreen Tablet includes Free Technical Support by Phone or Internet and we are glad to help you with any problems.

For Technical Support by Internet, simply touch the Customer Help icon on the lower right–side of the home screen to immediately be directed to our Technical Support website. For Technical Support by Phone, please call 855-998-4326, Monday to Saturday 10:00 AM to 7:00PM.

2. Setting up your device for the first time

Note: For proper setup, make sure you have access to a wireless network and your device is fully charged.

Before attempting to setup your device, you will need the name and password (if used) of your wireless network. Please have all of this information handy before setting up your device.

Step 1 – Turn ON your Device

- Turn ON and unlock your device as described in the above section


Step 2 - Language Selection

- Tap the Language list to scroll through the list of available languages.

- Select the default language for your device by tapping it.
- Confirm your choice by tapping the Start button.
 - It may take a minute to set the language.

Step 3 – Setting the date and time

- Set the Time Zone by scrolling up & down until you find your correct Time Zone. Release your finger to confirm your selection.
- Set the Date by scrolling up & down the Month, Day and Year to set the proper date.
- Set the Time by scrolling up & down the Hour, Minute, & AM or PM to set the proper time.
- Automatic Date & Time
 - You can have the time and date set automatically by setting the Automatic Date & Time option to On.
 - **Note:** To automatically set the date & time, you must be connected to a Wi-Fi network and have your proper Time Zone chosen.
- Tap the NEXT Button to continue to the next screen

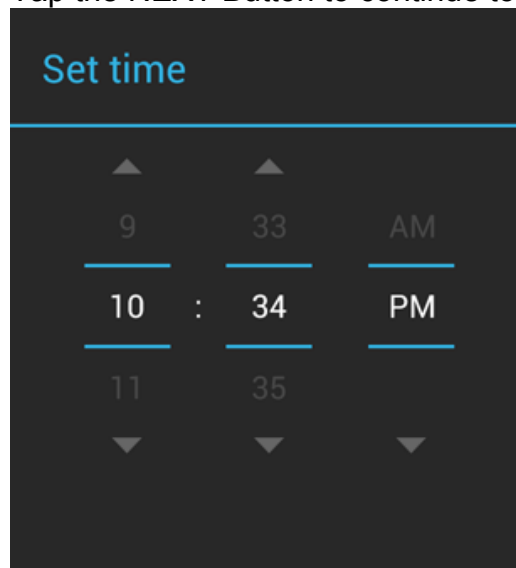

Step 4 – Got Google?

A Google Account lets you organize and access your personal information from any computer or mobile device:

- Never lose your contacts again. When you sign in to your device with a Google account, all the contacts you associate with that account in the People app are automatically backed up. As a result, they're always accessible through your Gmail account from any computer.
- Synchronize and back up everything. Whether you draft an email, add a contact's phone number, add an event to your calendar,

work gets backed up continuously by Google and synchronized with any computer where you use the same Google Account.

- Access from anywhere. Check your latest calendar, email, text messages, or social stream, wherever you are, no matter what computer or mobile device you're using.
- Use other Google services. Your Google Account also lets you take full advantage of any other Google apps and services that you may want to use, such as Gmail, Google Maps, Navigation, Google Play, YouTube, Google Talk, Messaging, and many more.

Note: If you do not already have a free Google account, it is strongly recommended you set-up a free Google account when using the Setup wizard on this device in order to get the optimum use from this tablet.

- Your device is designed to work with Google Mail (Gmail). If you don't have a free Google account it is recommended you sign up for one.
- If you already have a Google account tap the "Yes" icon
- If you do not have a Google account tap the "No" icon and you will be taken to the **Make it Google** screen.

Step 5 - Make it Google

- To create a free Google account, tap the "Get an Account" icon.
 - On the next screen you will create a Username for your Google account.
 - Your Google account Username can also be used as a new email address which will be (YourUsername)@gmail.com
 - Note: If you don't want to use Google Mail (Gmail) as your email provider, you can use a different email account from almost any provider with this tablet. This is explained fully in the **E-mail** section of this manual.
- If you don't want to create a Gmail account, tap the "Not Now" icon.
- After you made your selection you will be taken to the Wi-Fi setup.

If you are having a problem with the operation of this Tablet – Do not return it to the retailer!

Your Touchscreen Tablet includes Free Technical Support by Phone or Internet and we are glad to help you with any problems.

For Technical Support by Internet, simply touch the Customer Help icon on the

lower right–side of the home screen to immediately be directed to our Technical Support website. For Technical Support by Phone, please call 855-998-4326, Monday to Saturday 10:00 AM to 7:00PM.

Step 6 – Set-up your Wi-Fi

- A list of wireless networks your tablet is receiving will appear on the screen.
- Select the name of your WI-FI wireless network from the list by tapping it.
- If your wireless network is password protected, you will need to enter a password and a dialog box will appear for you to enter your password.
- Tap the password line to make the tablet keyboard appear.
 - Check the “Show Password” box if you want to view your password instead of seeing, *****
 - Passwords are case-sensitive and must be typed exactly as they were created.
- After you type your password, tap the “Connect” icon
 - Wait for the network to connect as this may take 15-20 seconds. You will know the connection is good when a blue check mark appears next to the name of your wireless network and it displays “Connected” under your network name.
 - If you are having problems connecting to your Wi-Fi network, contact our Customer Support Team.
- After your network is successfully connected, tap the “NEXT” icon.

Step 7- Sign in

- Type in your Gmail address and your password
- Tap the “NEXT” icon
 - Note: a dialog box will appear asking you to agree to the Google User License Agreement (ULA).
 - Tap “Yes” to agree
 - Tap “Cancel” to not agree and you will not be able to access the Google email system, or other related Google Apps.

Step 8 – Entertainment

You can quickly, easily, and securely purchase items from the Google Play store by safely storing your credit card information with 128-bit encryption in the Google Wallet System.

- Tap the “Setup Credit Card” icon to securely & safely enter your credit card information.

- Please review Google's Privacy Information by tapping the  icon before entering your personal information.
- Tap the "Not Now" icon if you do not wish to use the Google Wallet feature, and move on to the next screen.
 - Note: If you do not use Google Wallet you will need to enter your complete credit card information every time you wish to make a purchase from the Google Play Store.

Step 9 – Backup and restore

You can easily and automatically backup your apps, settings, music, photos, videos, books, website bookmarks, and other data to your Google account.

- Check the options you would like to use. You can change them in your **Settings** at anytime.
- When finished tap the "Right" arrow at the right hand bottom of the screen to continue.

Step 10 – Use Google location

You can use the Google location services to use the location data from your Wi-Fi network to help apps determine your approximate location when it's available. This location data is used to: provide driving directions, find the nearest shops, restaurants, movie theaters, & more.

- Check the options you would like to use. You can change them in your **Settings** at anytime.
- When finished tap the "Next" icon at the right hand bottom of the screen to continue.

Step 11 – Setup Complete


Your tablet is now setup and ready to use.

- Tap the "Back" arrow to make additional changes.
- Tap the "Finish" arrow to start using your tablet.

If you are having a problem with the operation of this Tablet – Do not return it to the retailer!

Your Touchscreen Tablet includes Free Technical Support by Phone or Internet and we are glad to help you with any problems.


For Technical Support by Internet, simply touch the Customer Help icon on the lower right-side of the home screen to immediately be directed to our Technical Support website. For Technical Support by Phone, please call 855-998-4326, Monday to Saturday 10:00 AM to 7:00PM.

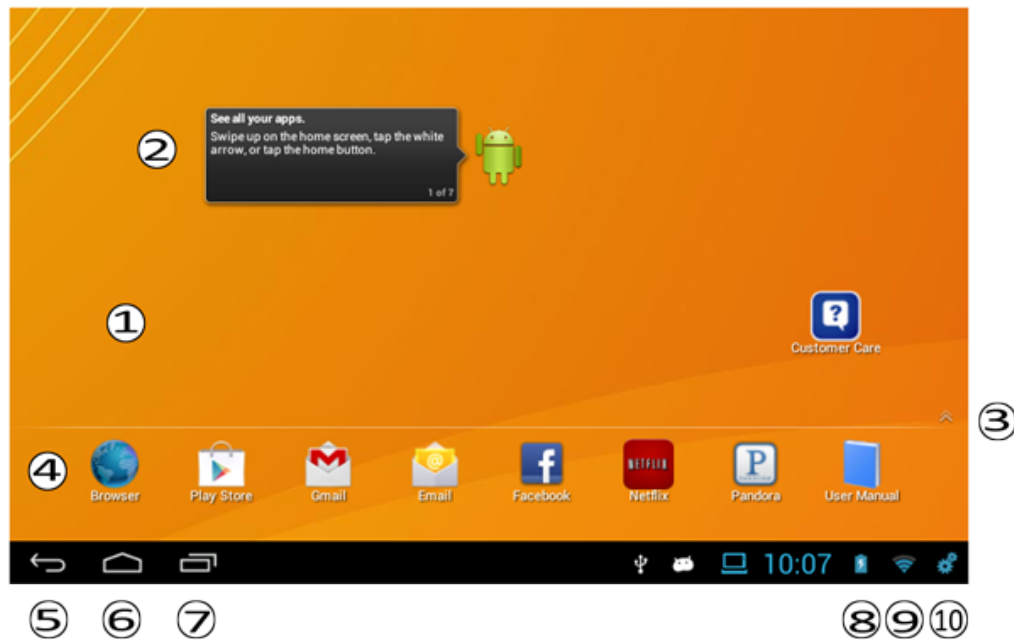

3. Identifying the Home Screen

The Home Screen consists of 5 areas, which can be customized to include different Apps and Widgets. The image above shows the layout of the Main Screen of the tablet. This image is labeled with many of the items on the Home Screen that are referred to throughout this manual.

Name	Descriptions
1. Home Screen	The Main screens for adding Apps and Widgets. There are 5 pages to the Home Screen which are reached by swiping the screen left or right.
2. Widget	A Widget is an application that can be placed on any of your home screens, for quick and easy access.
3. Application Drawer Arrow	Swipe upward, or Tap to reveal all your applications or apps
4. Favorites Bar	Apps that remain on your Home screen
5. Back Navigation Icon	Opens the previous screen you were viewing.
6. Home Navigation Icon	Returns you to the main Home Screen
7. Recent Apps Navigation Icon	Opens a list of thumbnail images of apps you've recently viewed and apps you frequently use.
8. Battery Status Icon	Current percentage of battery charge
9. Wi-Fi Connection Status Icon	Strength of Wi-Fi signal
10. Quick Settings Icon	Tap to open Quick Settings. Tap the icon again to open the full Settings app.

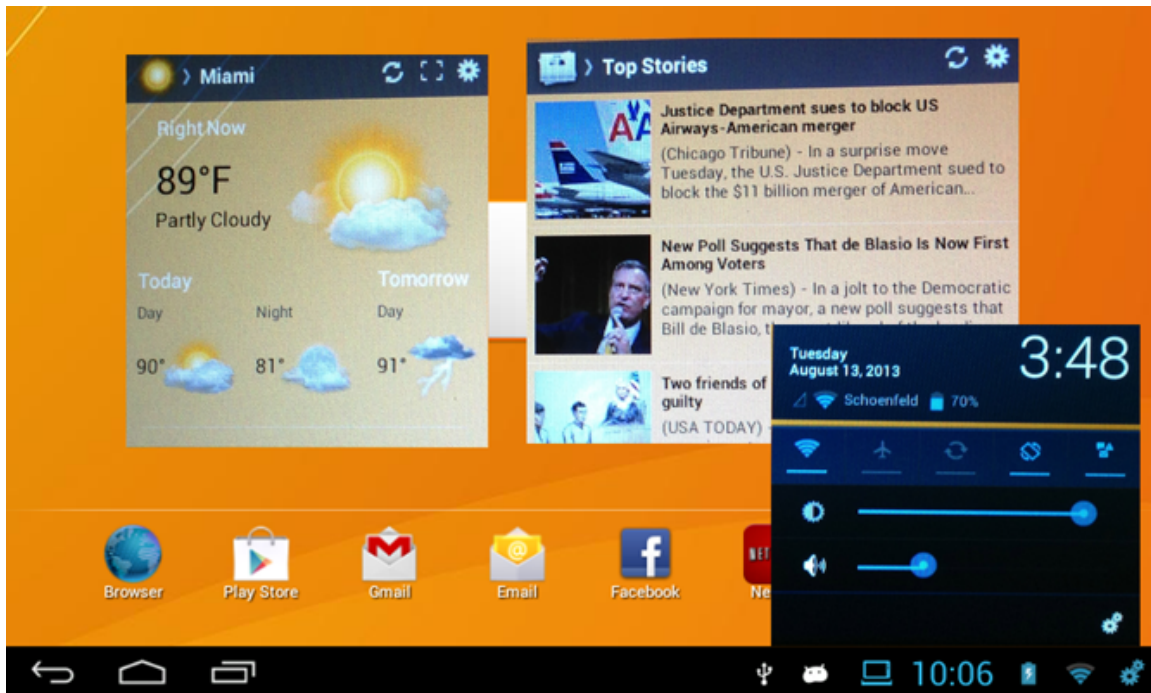

4. Quick Settings

The Quick Settings popup allows you to adjust or change your device settings quickly right from your home screen by tapping on the Quick Settings Icon (10) .

You can adjust the following items:

- Smart Wi-Fi Connect – Tap to turn your Wi-Fi On or Off right from your Home Screen
- Airplane Mode – Tap to turn On or Off
- Rotate Screen – Tap to rotate Screen
- Lock Screen rotation – Tap to stop screen from rotating when turned
- Notification – Tap to turn notifications On or Off
- Brightness – Drag left or right to increase or decrease screen brightness
- Volume – Drag left or right to increase or decrease sound volume

5. Using Applications

5.1. Browsing the World Wide Web on your device

Your device comes with two web browsers. A basic web browser app called, “**Browser**” and Google’s own web browser called “**Chrome**.”

Note: Make sure the device is connected to a Wi-Fi network

1. Open either Browser or Chrome by tapping on the app’s icon. **Note:** You can find the apps either on the Favorites Bar or in the App Drawer. Open the App Drawer by tapping the Application Drawer Arrow (3)
2. To visit a website touch the web Address box to access the keyboard and type the address of the website. You can also search for websites using search words or phrases. After you have typed in your website address or search word(s), tap the “**Go**” button on the keyboard.

3. You can **scroll** through the web page by dragging your finger up and down on the touchscreen to move the web page.
4. If the web page is too large to fully fit on your tablet screen, you can **pan** up, down, left, or right by dragging your finger on the touch screen just like scrolling.
5. To Zoom IN you can **pinch** the touchscreen by touching and holding two fingers on the screen and pinching the fingers toward each other. To Zoom OUT touch and hold two fingers on the screen and move your fingers away from each other.
6. To reload a webpage, tap the Refresh Icon  on the left of the Address box. When a webpage is loading from the Internet, an “X” icon will replace the Refresh Icon. Tap the “X” and the page will stop loading.
7. To “bookmark” a favorite page, tap the Favorite icon  to right of the favorite bar. The “Add Bookmark” window will appear and you can edit the bookmark name if you’d like to make it shorter, or to use an easier name to remember. When finished, tap the Save or OK button.
8. Setting a home web page
The *home page* is the first website you see when you start a web browser app.
 1. Browse to the page you want to set as your home page.
 2. Touch the Menu icon.
 3. Choose “Settings” and the Settings screen will appear.
 4. Choose the “General” category.
 5. Choose “Set Home Page” and the Set Home Page menu will appear.
 6. Touch the “Current Page” button and your home website is now set.

Note: Many places you visit on the web can be accessed directly using specific apps. Facebook, Gmail, Twitter, YouTube, and other popular web destinations have apps that you may find already installed on your tablet or are otherwise available from the Google Play Store.

5.2. Google Play

With hundreds of thousands of apps, the Google Play store has the right ones for you. When you download apps, they are delivered directly to your device. You can also find your next book, a hot new song, or a great movie from a catalog that includes everything from movie blockbusters and best selling e-books to millions of songs.

5.3. E-Mail

Your device comes with two e-mail readers. A basic E-Mail app called “**Email**” and Google’s own E-Mail called “**Gmail**.”

To get the best experience using this device, we recommend creating a free Gmail account and using Gmail for your e-mail.

5.4. Setting up a Non Gmail Email account

The Email app is used to access web-based e-mail, or webmail, from Yahoo! Mail, Windows Live, and others. It also lets you read e-mail provided by your Internet Service Provider (ISP) and even your work E-mail if allowed.

Note: Before you setup your E-Mail account you will need several key pieces of information. If you are setting up email from your work, you may need to contact your IT department to see if there are additional instructions or requirements you will need to follow as E-Mail settings and security will vary from company to company.

1. The Email app is located in the Apps Drawer. You may also find shortcuts to the apps on the Home screen or Favorite Bar.
2. Start the Email app by tapping on it.
3. The E-Mail Account Setup screen will appear.
4. Type the e-mail address you would like to setup on this device.
5. Type your password for this account.
6. Touch the Next button.
7. Select Account Type
 - You will need to know if your e-mail account is a Pop3, IMAP, or Microsoft Exchange.
 - Select the correct account type and follow the onscreen instructions to finish setting up your e-mail account.
 - Changing the Inbox Checking Frequency setting to something longer than 15 minutes will save battery life.

After tapping “Next” you will be taken to your E-Mail account inbox. Your tablet synchronizes any pending e-mail you have in your account. Depending on how much e-mail you have, it may take a few minutes to synchronize all your mail.

5.5. Adding more e-mail accounts

The Email app can be configured to have multiple accounts. (E.g. Personal, Work) Follow these steps to add an additional E-Mail account:

1. Start the E-mail app.
2. Choose Add Account from the Setting icon
3. Follow the steps 4-7 from the previous section to setup the additional E-Mail accounts.

5.6. Adding music, photos and video on to your device via a USB drive or microSD Card

1. Copy the files you would like to transfer to a USB or microSD card. These files can be photos, music files and video files.

Note: Your device can't display every type of media files but it will display the most popular formats. Please check the Technical Specifications section to make sure the file format is supported.

2. Insert the USB or microSD card into either the USB port or the microSD slot on the bottom of the device.
3. Open the Gallery or FileManager app to view, play, delete or copy files to your device.
4. Un-mount the USB drive or microSD card before removing it from your device. For safe removal, tap > Settings > Storage > Unmount Storage. You are now safe to remove your USB drive or microSD card.

5.7. Adding music, photos and video to your device from a Windows PC

1. Connect your device to your PC using the included USB cable.
2. Once you have connected the device to your PC, an AutoPlay dialog box will appear on the PC prompting you to choose how to add items to your device from the Windows storage system.
3. The simplest way to move files is to select “Open device to view files.”
4. Your device will show up on the PC as a mounted drive icon.
5. Double click the mounted drive icon and simply drag and drop the files you would like to copy from your PC, to the appropriate folder on your Tablet. (E.g. Photos, Music, Movies, etc.)
6. After the files have completed copying to your device, you can un-mount your device from your PC by following proper un-mount procedures and then disconnect the USB cord.

Note: You can also copy files from your device to your PC following the same steps.

5.8. Transferring files using a Mac OS

1. Install the Android File Transfer program from www.android.com/filetransfer, and follow the instructions on the website. (If you are using Android File Transfer for the first time, double-click it to open it. After the first connection, it opens automatically whenever you connect.)
2. Connect your device to your computer with the included USB cable. Android File Transfer starts, and opens a window that displays the contents of your device, along with storage space details at the bottom of the window.
3. In this window you can open and close folders, create new folders, and drag files to or from the Tablet and your Computer.
4. Quit the Android File Transfer application and unplug the USB cable from your Mac when you are finished.

5.9. Viewing your music, photos and video files on your device

1. Use the Gallery app to view your photo or video files
2. Open the Gallery app in the Application Drawer by tapping on it.
3. You will see your files are automatically organized into picture or movies folders.
4. To view a photo or video just tap on the item you wish to view.

5. If you have more than one picture or video you can slide right and left with your finger on the touchscreen to view them all.
6. To view a video, tap the **"Play"** icon. To pause a video, tap the video again.
7. To delete or edit a photo or video simply tap the photo, and then tap the setting icon that will appear in the upper right corner.
8. A series of editing features will appear. Choose the one you would like to perform.

If you are having a problem with the operation of this Tablet – Do not return it to the retailer!

Your Touchscreen Tablet includes Free Technical Support by Phone or Internet and we are glad to help you with any problems.

For Technical Support by Internet, simply touch the Customer Help icon on the lower right–side of the home screen to immediately be directed to our Technical Support website. For Technical Support by Phone, please call 855-998-4326, Monday to Saturday 10:00 AM to 7:00PM.


6. Using Your Device

6.1. Apps

Short for "Applications." Apps are the programs you can download to your device from the Google Play Store. Apps can either be free, or for sale.

- **To launch an App**

- To start an app simply tap it to open the item or launch it.

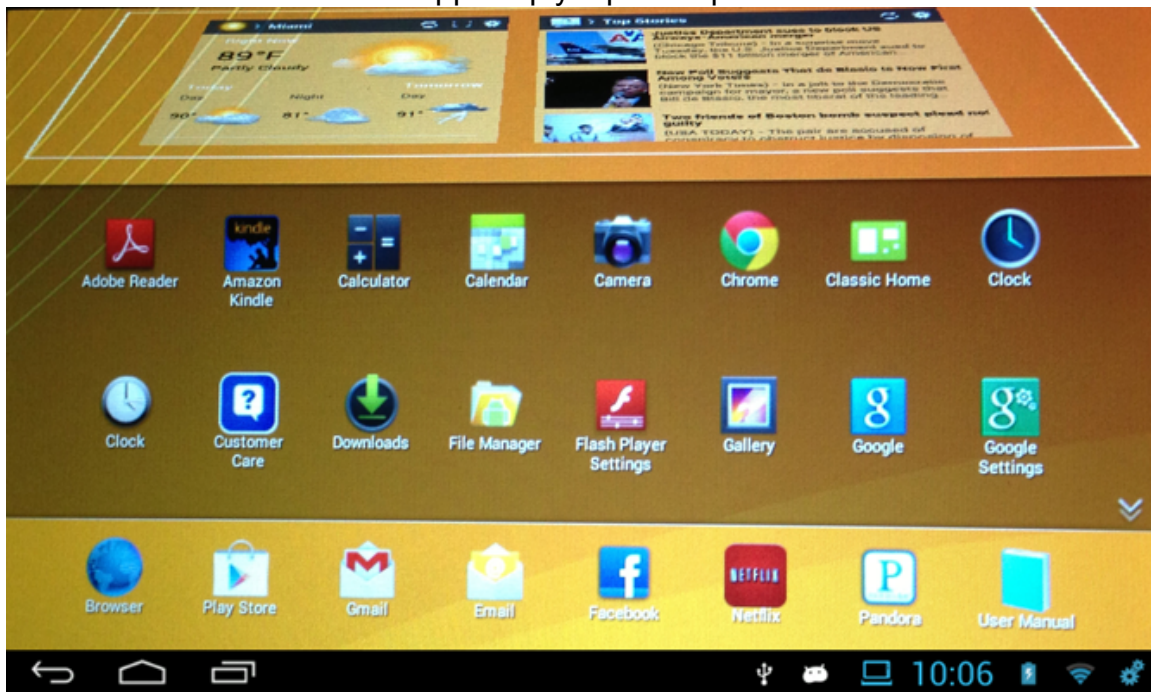


- **Application Drawer**
 - The Application or App Drawer is where all your applications are stored. It acts like a garage door and swings up to show you all your stored apps. You can access it two ways:
 1. Swipe upward or tap the Application drawer arrow (3) at the bottom right side of your screen to open the Application drawer.
 2. Or double tap the Home Navigation Icon (6) on the bottom of your screen. This will bring you back to the Home Screen and open the App Drawer.
- **To move an App from your App drawer to your Home Screen**
 - Open the Application drawer
 - Tap and hold down the App icon you would like to move.
 - The App icon will appear to float. Continue to hold down the icon and drag it up to the home screen.
 - Once you have selected the spot you would like to have the App sit on your Home Screen simply let go.
- **To move an app on the Home Screen**
 - Tap and hold down the App icon you would like to move.
 - The App icon will appear to float. A grid will appear on the Home Screen.
 - Continue to hold down the icon and drag it where you would like it on your Home Screen.
 - Once you have selected the spot simply let go.
- **To Close an App that is running in the background**

Apps running in the background slow down your device and drain your battery life. To properly close your apps follow these steps:

 1. Open the recent apps menu on your navigation bar
 2. Find the app you wish to close and swipe it horizontally off the screen. This method will close most apps but some will still run in the background in some capacity.
 3. To make sure the app is completely closed you can open the **Settings** App on your device.
 4. Click on the “**Apps**” settings
 5. Make sure you are viewing the “**Running**” apps by swiping the screen until “Running” is shown at the top of the screen.
 6. Tap the app you would like to close
 7. Tap the “**Stop**” icon.
- **To delete an App**
 - Tap and hold down the App icon you would like to delete.
 - The App icon will appear to float.
 - A trashcan  will appear in the bottom right hand corner of your Home Screen.

- Drag the App to the trashcan. The trashcan will turn red. 
Release your finger to delete the App.

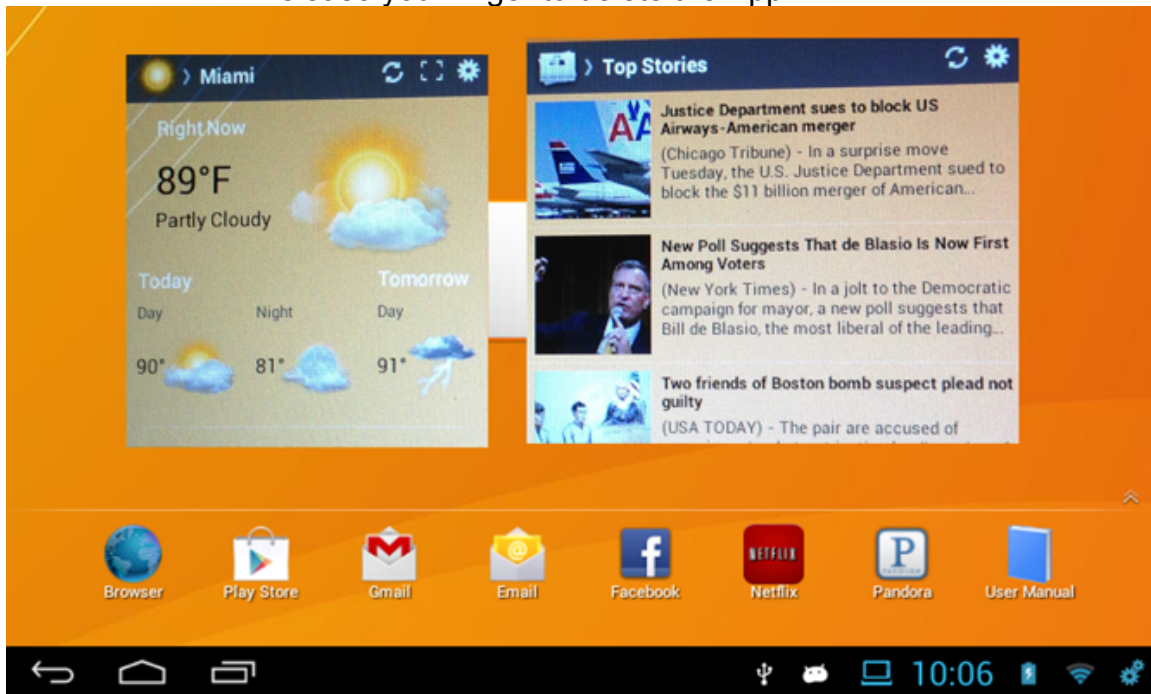

6.2. Widgets

A Widget is a view of an application that can be placed on your home screen, for quick and easy access. The news and weather apps on your device are examples of widgets. Other popular widgets you can install or download are Facebook and Twitter. These Widgets will update in real time showing your friend's most recent posts or tweets.

- **Adding Widgets**
 - Tap and hold your finger on the Home Screen. Make sure you are not touching an App or another Widget.
 - A dialog box will appear entitled "Add to Home Screen."
 - Tap the Widgets icon
 - A dialog box will appear entitled "Choose Widgets"
 - Tap the new widget you would like on your screen
 - The new Widget will appear on the screen you are on.
- **Adjusting the size of a Widget**
 - After you placed a new widget on your screen a blue line with small blue blocks will surround the Widget.
 - You can increase or decrease the size of the Widget by holding your finger down on one of the blue blocks and dragging.
 - When you have the Widget the size you want, just tap the Widget to finish.
- **To move a Widget on Home Screen**
 - Tap and hold down the Widget you would like to move.

- The Widget will appear to float. A grid will appear on the Home Screen.
 - Continue to hold down the Widget and drag it where you would like it on your screen.
 - You can drag it to another screen by moving the widget to the left or right side of the screen. Hold and wait until it moves to the next screen.
 - Once you have selected the spot you would like to have the Widget sit on your screen simply let go.
- **Removing Widgets**
 - Tap and hold down the Widget you would like to delete.
 - The Widget will appear to float. A trashcan will appear in the bottom right hand corner of your Home Screen.
 - Drag the Widget to the trashcan. The Widget and Trashcan will turn red. Release your finger to delete the Widget.



6.3. Favorite Bar

- **Customizing Favorite Bar**
 - You can customize your Favorite Bar so all your favorite Apps are just a tap away.
- **To move an App to your Favorite Bar**
 - Open the Application Drawer
 - Tap and hold down the App icon you would like to move until it appears to float.
 - Continue to hold down the icon and drag it to the Favorite Bar.

- Note: You can only have 8 apps in your Favorite Bar.
 - If you try to add too many Apps on the Favorite Bar the last app on the bar will move back to the Application Drawer.
 - Once you have selected where you want it to be on the Favorite Bar simply let go.
- **To move an App off your Favorite Bar**
 - Tap and hold down the App icon you would like to move until it appears to float.
 - An arrow  will appear in the bottom right hand corner of your Home Screen.
 - Drag the App to the arrow. The arrow will turn green. Release your finger and the App will return to the App Drawer.

6.4. Setting Wallpaper

- To change the wallpaper on your Home Screen
 - Tap and hold your finger on the Home Screen. Make sure you are not touching an App or another Widget.
 - A dialog box will appear entitled “Add to Home Screen.”
 - Tap the Wallpapers icon
 - A dialog box will appear entitled “Select wallpaper from”
 - Tap the different type of wallpapers from the different styles presented.
 - Select the wallpaper you would like and tap the “Set wallpaper” button to confirm your choice.

6.5. Display Rotation

- By default your screen will automatically rotate if you turn your device.
- If you do not like this functionality you can turn it off in the **Quick Settings** or in the full **Settings** App.
- Go to Settings > Accessibility > Auto-rotate screen.
- Uncheck the box to have the screen stop from automatically rotating when you change the tablet’s orientation.

7. Using your Camera

The Camera app is a combination camera and camcorder. You can view photos and videos you take with the Camera in the Gallery app. To take pictures and videos, first touch the Camera app icon  located in the Application Drawer.

• Taking Still Images

- With the Camera app open, point the camera lens at the object to be photographed until the object appears on the screen.
- To take a photo, tap the blue circle on the right side of the screen.

- **Note:** This device has a front facing camera designed to make video chat easy and simple. Turn the tablet around and point it at what you want to capture and tap the blue circle on the right side of the screen to take a still image.

- **Taking a Panorama Photo**

The Camera app can be used to take a panorama photo, automatically stitching multiple images together while you pan the camera across a scene.

- Touch the panorama icon
- Holding the tablet horizontally, frame the image on either the left or the right side of where you want the panorama photo to begin.
- Touch the green circle on the right side of the screen, and slowly move the tablet horizontally to the right or to the left, keeping the tablet level.
- A blue progress bar appears at the bottom of the screen, showing how much of the panorama has been recorded. The camera notifies you if you are moving too quickly.

NOTE: For best results, hold the tablet with both hands, keep it as level as possible, and move the tablet very slowly. When the panorama is finished recording, wait a moment for the image to be processed and saved. Touch the thumbnail image that appears in the upper right corner of the screen to view the panorama.

- **Recording videos**

The Camera app can also be used to take videos.

- With the Camera app open, touch the video camera icon  to switch to video recording.
- Once you have pointed the camera lens at the object you would like to record, tap the red circle on the right side of the screen to begin recording.

NOTE: While recording a video, you can take photos by touching the screen. The screen is momentarily outlined in red when the photo is taken. The video recording is not interrupted.

- Touch the red circle with a white square located on the right side of the screen to stop the recording.

- **Viewing your photos and videos in the Gallery app**

- When you take a picture or record a video on your tablet, the file is saved in the Gallery app.

8. Firmware Update

- This tablet is capable of receiving over the air updates. These updates can be Android operating system updates, user interface improvements, and product upgrade offers.

- Your purchase includes a limited number of operating system updates and user interface updates through December 31, 2014.
- You will continue to receive available update notifications beyond December 31, 2014 but the updates will not be free of charge.

NOTE: Not all Android operating system updates may be compatible with your specific device. You will only receive notifications with the updates that are workable with your tablet.

9. Using the Keyboard Case

- Step 1 - Secure the four corners of the tablet to the case using the four elastic straps.
- Step 2 - Plug the Mini USB cable from the keyboard into the Mini USB port (3) on the tablet.
 - **NOTE:** the cable can only be inserted in one direction. Do Not use excessive force to connect the cable into the Mini USB port.
- Step 3 - Turn the tablet ON to begin using the keyboard.
 - **NOTE:** the three LED lights located above the keys will indicate when Num Lock, Caps Lock, & Scroll Lock are in use.

10. Troubleshooting

- **No Power**
 - Make sure the device is properly charged (Section 1.3)
- **Tablet will not move past the Android screen after a Software Update**
 - In some instances software updates can take an hour or more to index all of the necessary operating system files needed to run the tablet.
 - Make sure to connect the AC adaptor during Software Updates to insure the battery does not die.
- **Screen is Frozen/Not Responding**
 - Restart the device by turning the Power OFF and then ON again.
 - If the device will not respond to the Power button, insert a thin, straight object (such as a paper clip) in the manual reset hole to perform a soft reset on your device.
- **Tablet is Slow**
 - Close any unused Apps that may be running in the background (Section 7.1)
- **Music/Movie file will not play**
 - Make sure the file format you are attempting to play is shown in the Compatible Audio/Video Format list in the Technical Specifications section of the manual (Section 12)
- **Tablet storage is full**
 - Add more storage by inserting a microSD card (Section 1.2)

- Transfer or Delete unused files using the FileManager App (Section 4)
- **Wi-Fi reception is poor**
 - Make sure you are not too far from the Wi-Fi router/hotspot. We recommend a distance between 0 – 65 Feet.
 - Restart your Wi-Fi router.
- **Backup & Reset**
 - Do not enable Factory Data Reset unless you have spoken to a customer support person first. Doing so could result in losing all your data stored on your device.

11. Customer Support

If you are having a problem with the operation of this Tablet – Do not return it to the retailer!

Your Touchscreen Tablet includes Free Technical Support by Phone or Internet and we are glad to help you with any problems.

For Technical Support by Internet, simply touch the Customer Help icon on the lower right-side of the home screen to immediately be directed to our Technical Support website. For Technical Support by Phone, please call 855-998-4326, Monday to Saturday 10:00 AM to 7:00PM.

BATTERY WARNINGS

- This product uses a rechargeable Lithium-Ion battery. Only use the supplied battery and charger for this device. Use of a battery or charger that is not made for this device can result in serious injury and/or damage to the product.
- This device must be disposed of properly, according to local laws and regulations. Contact your local authorities to learn about the correct recycling and disposal options.



7" Pantalla Táctil Tablet

Manual del usuario

Modelo: V7TAB8KB

Si tiene algún problema con la operación de esta tablet, no la devuelva al comercio minorista donde la compró.

Su tablet de pantalla táctil incluye soporte técnico gratuito por teléfono o a través de Internet y nos complacerá ayudarlo a resolver sus problemas.

Para obtener soporte técnico a través de Internet, simplemente pulse el icono "Customer Help" (soporte al cliente) en la parte derecha inferior de la pantalla de inicio para ser direccionado de inmediato a nuestro sitio de soporte técnico. Para obtener soporte técnico por teléfono, llame al 855-998-4326 de lunes a sábados de 10am a 7pm.


Tap Here to return to the English version of this User Manual

1. Conociendo a su dispositivo

Parte delantera



Parte trasera

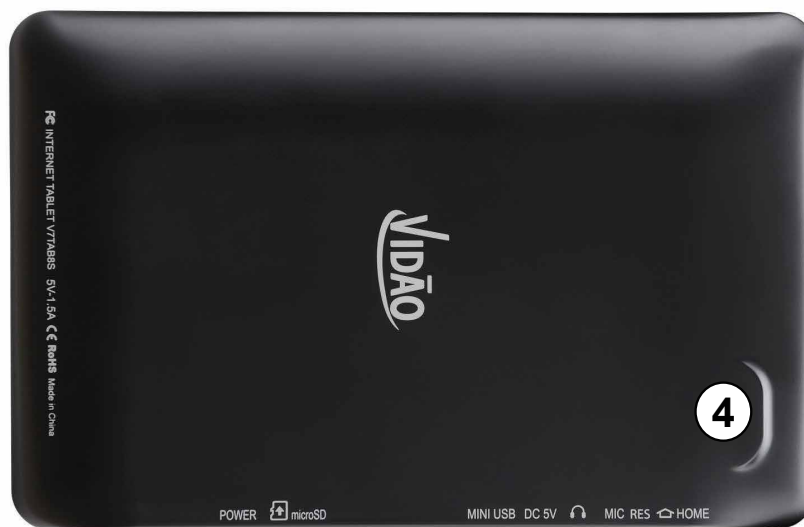

Número de parte	Descripción
1. Pantalla táctil	Use un dedo para controlar el sistema y la aplicación.
2. Cámara	La cámara incorporada le permite capturar imágenes estáticas, grabar videos, chatear en línea y capturar imágenes panorámicas.
3. Indicador de carga	La luz indicadora roja se encenderá mientras el dispositivo se esté cargando. Luego de que el dispositivo esté cargado por completo, la luz se apagará.
4. Parlantes	Reproducen sonidos de archivos de música, películas, juegos, notificaciones del sistema y más.



Puertos y botones

Puerto y nombre de botón	Descripción
1. Botón de encendido/apagado	Presione y mantenga el botón de encendido/apagado de 2 a 3 segundos y el dispositivo se encenderá. Presione y mantenga el botón de encendido/apagado durante más de 3 segundos y el dispositivo se apagará. Presione una vez el botón de encendido/apagado para poner a la tablet en modo de suspensión. Si la tablet se encuentra en modo de suspensión, presione una vez en botón de encendido/apagado para salir del modo de suspensión.
2. Ranura de tarjeta microSD®	La tablet soporta tarjetas SD o SDHC de hasta 32 GB (no incluida)
3. Puerto mini USB	Conecta periféricos como ratones, cámaras digitales, reproductores MP3 y otros dispositivos más que usen conexión de puerto mini USB. Utilícelo para cargar su tablet desde un computadora.
4. Conector de alimentación	Se conecta a una fuente de suministro eléctrico de corriente alterna (CA) para alimentar el dispositivo y cargar la batería.
5. Conector de auriculares	Para conectar auriculares externos con conectores macho de 3,5 mm.
6. Micrófono	Recibe sonidos y voz para su grabación.
7. Reset (restaurar)	Cuando el sistema no responde o deja de funcionar inserte un objeto fino y largo (como un clip) en el orificio de restauración manual para realizar una restauración manual del software.
8. Botón Home (inicio)	Presione este botón para volver a la pantalla de inicio. Presiónelo nuevamente para abrir el Application Drawer (cajón de aplicaciones)

1.1. Accesorios

La caja contiene una tablet de pantalla táctil de 7 pulgadas, un cable de mini USB a USB y un adaptador de alimentación de CA. Si nota que falta alguno de estos elementos al abrir la caja, devuelva inmediatamente la tablet, todos los accesorios y todos los empaques al distribuidor.

1.2. Tarjeta microSD

Su Tablet viene con 8 GB de memoria incorporada para almacenamiento. Algunos de los programas precargados y el sistema operativo utilizará aproximadamente 2-3GB de espacio. Usted puede agregar hasta un 64 GB adicionales de espacio de almacenamiento en el dispositivo mediante el uso de una tarjeta SDHC o SDXC microSD (no incluida). Los datos se pueden guardar en la memoria integrada o en la tarjeta microSD. Además archivos también se pueden transferir a una tarjeta microSD desde tu computadora personal y luego importados a su Tablet.

- **Para instalar la tarjeta microSD**
 - Inserte la tarjeta microSD, asegurándose de que los contactos dorados estén mirando hacia abajo.
 - Empuje la tarjeta microSD suavemente dentro de la ranura (2) hasta que encaje en su posición.
- **Para retirar la tarjeta microSD**
 - Empuje levemente la tarjeta microSD hacia adentro y ésta se eyectará parcialmente de la ranura. Retire la tarjeta de la ranura. (2)
 - **Advertencia:** Siga las instrucciones para retirar la tarjeta microSD de su tablet con seguridad. El retiro incorrecto de la tarjeta microSD puede causar pérdida de datos y problemas impredecibles del sistema. Para un retiro seguro, pulse Settings > Storage > Unmount microSD card (Configuraciones>Almacenamiento>Desmontar tarjeta microSD).

1.3 Carga de la batería

Al recibir su dispositivo por primera vez, la batería estará cargada sólo parcialmente. Para cargar la batería por completo, déjela cargando durante 5 horas para asegurarse de que esté totalmente cargada antes de usar la tablet.

1. Conecte un extremo del adaptador de alimentación de CA al conector de alimentación (6) del dispositivo.
2. Enchufe el otro extremo del adaptador de alimentación de CA al tomacorriente para comenzar a cargar.
3. La luz de LEDs roja en la parte delantera del dispositivo se apagará cuando la batería esté totalmente cargada.

Consejos: Para aumentar la vida de la batería

- Disminuya el brillo de la pantalla
- Reduzca el tiempo en que el dispositivo entra en modo de suspensión (Sleep mode).
- Apague el Wi-Fi cuando no necesite conectarse a Internet.
- Cierre las aplicaciones cuando haya terminado de usarlas, de lo contrario seguirán ejecutándose en segundo plano.
- Apague totalmente el dispositivo cuando haya terminado de usarlo.

1.4. Encendido y apagado del dispositivo

- Para encender su dispositivo:
 - Presione y mantenga presionado el botón de encendido/apagado (1) durante al menos 2 segundos hasta que aparezca una imagen en la pantalla.
- Para apagar su dispositivo:
 1. Presione y mantenga presionado el botón de encendido/apagado (1) durante al menos 2 segundos.
 2. A continuación, aparecerá una ventana emergente. Pulse en **OK** para confirmar el apagado o pulse **CANCEL** (cancelar) para volver a la pantalla principal.
- Para poner a su dispositivo en modo de suspensión (Power Saving):
 - Presione una vez el botón **Power** (encendido/apagado). Esto apagará la pantalla y pondrá a la tablet en modo de suspensión de bajo consumo de energía.
 - Para reactivar su dispositivo del modo de suspensión, presione una vez el botón **Power** (1) de encendido/apagado.

1.5. Gestos comunes:

- **Pulsar** - Para seleccionar o activar algo, toque su selección suavemente una sola vez.
- **Tipear** - Para tipear algo, como un nombre, una contraseña o un término de búsqueda, simplemente toque donde desee comenzara a tipear y aparecerá automáticamente para que comience a tipear en el campo.
- **Tocar y mantener** - Tocar y mantener el dedo. Toque un elemento y no levante su dedo hasta que se produzca la acción.
- **Arrastrar** - Toque y mantenga el dedo sobre un elemento durante un momento luego, sin levantar su dedo, mueva su dedo sobre la pantalla hasta que el elemento llegue a la posición deseada.
- **Deslizar** - Mueva su dedo rápidamente a través de la superficie de la pantalla, sin detenerse luego de tocar (para no arrastrar algo en cambio). Por ejemplo, para deslizar la pantalla de Inicio a la derecha o a la izquierda, simplemente toque la pantalla de inicio y mueva su dedo hacia la derecha o hacia la izquierda a través de las diferentes pantallas.
- **Doble toque** - Haga rápidamente dos toques seguidos sobre una página web, mapa u otra pantalla para ampliar o reducir la imagen. Por ejemplo, toque dos veces seguidas sobre una imagen en Chrome para ampliarla y vuelva hacerlo para reducirla.
- **Pellizcar** - En algunas aplicaciones, como Maps, Chrome y Gallery (Galería), podrá ampliar o reducir las imágenes posando dos dedos separados al mismo tiempo y luego uniéndolos para reducir o posando dos dedos juntos y luego separándolos para ampliar.
- **Rotar la pantalla** - La imagen de pantalla de la mayoría de las aplicaciones pueden rotar junto con su dispositivo. Algunas aplicaciones


pueden mostrar la imagen en pantalla de una sola forma y no se pueden rotar.

1.6. Desbloqueo de la pantalla

La pantalla se bloquea automáticamente en forma predeterminada luego de un período de tiempo de inactividad. Puede ajustar el tiempo de bloqueo de pantalla desde **System Settings** (configuraciones del sistema).

○ Bloqueo de la pantalla

1. Presione el botón Power (encendido/apagado) para encender la tablet o para sacarla del modo de suspensión.
2. Pulse y mantenga presionado el  icono y deslícelo hasta el  símbolo a la derecha de la pantalla para desbloquear el dispositivo.

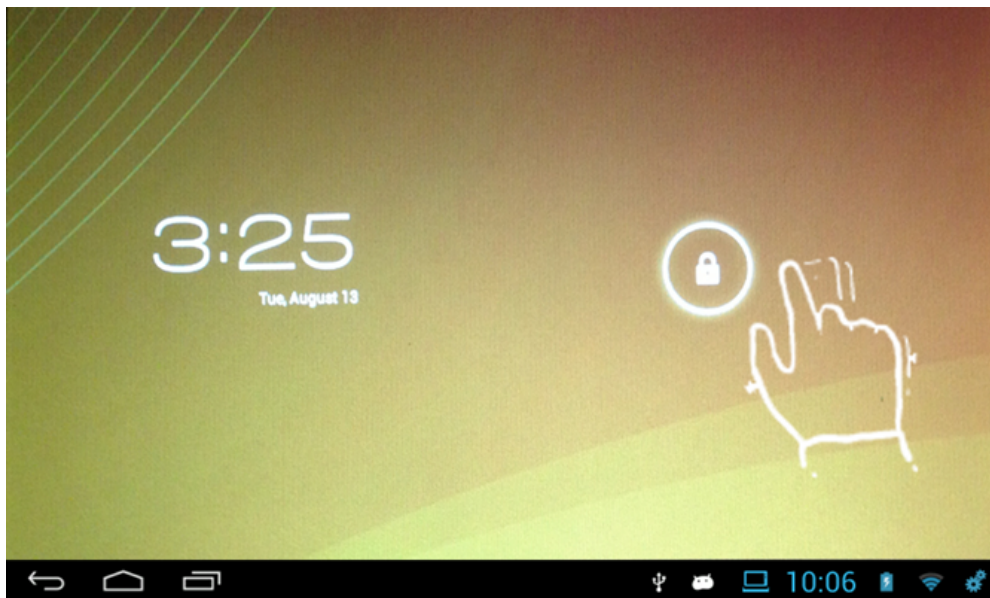

Si tiene algún problema con la operación de esta tablet, no la devuelva al comercio minorista donde la compró.

Su tablet de pantalla táctil incluye soporte técnico gratuito por teléfono o a través de Internet y nos complacerá ayudarlo a resolver sus problemas.

Para obtener soporte técnico a través de Internet, simplemente pulse el icono "Customer Help" (soporte al cliente) en la parte derecha inferior de la pantalla de inicio para ser direccionado de inmediato a nuestro sitio de soporte técnico. Para obtener soporte técnico por teléfono, llame al 855-998-4326 de lunes a sábados de 10am a 7pm.

2. Configuración de su dispositivo para su primer uso

Nota: Para una correcta configuración, asegúrese de tener acceso a una red inalámbrica y de que su dispositivo esté totalmente cargado.

Antes de intentar de configurar su dispositivo, necesitará el nombre y la contraseña de su red inalámbrica. Por favor, tenga esta información a mano antes de comenzar a configurar su dispositivo.

Paso 1 - Encienda su dispositivo

- Encienda y desbloquee su dispositivo como se describe en la sección anterior.


Paso 2 - Seleccione su idioma

- Pulse sobre la lista de idiomas (Language) y desplácese a lo largo de la lista de idiomas disponibles.
- Seleccione el idioma predeterminado para su dispositivo pulsándolo.
- Confirme su selección pulsando el botón Start (Inicio).
 - El proceso de selección de idioma puede demorar un minuto.

Paso 3 - Configuración de fecha y hora

- Ajuste la zona horaria (Time Zone) desplegándose de arriba a abajo hasta encontrar su zona horaria correcta. Suelte su dedo para confirmar su selección.
- Ajuste la fecha desplegándose de arriba a abajo en los campos de mes, día y año hasta ajustar su fecha correctamente.
- Ajuste la hora desplegándose de arriba a abajo en los campos de hora, minutos y AM o PM hasta ajustar su hora correctamente.
- Fecha y hora automática
 - Puede ajustar su fecha y hora automáticamente activando la opción de fecha y hora automática (Automatic Date & Time en posición On)
 - **Nota:** Para ajustar la fecha y hora automáticamente, debe estar conectado a una red Wi-Fi y debe haber seleccionado su zona horaria.

- Pulse el botón NEXT para continuar a la siguiente pantalla

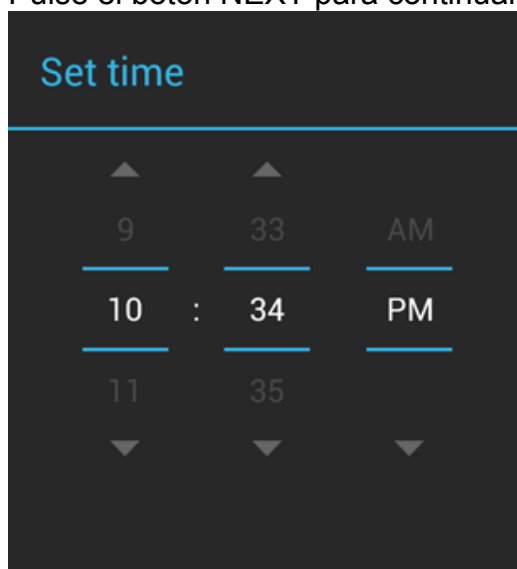

Paso 4 - ¿Tiene una cuenta de Google?

Una cuenta de Google le permite organizar y acceder a su información personal desde cualquier computadora o dispositivo móvil:

- Jamás vuelva a perder sus contactos. Cuando inicie sesión con su cuenta de Google en su dispositivo, todos los contactos que haya asociado con esa cuenta en la aplicación People (gente) serán automáticamente respaldados. Como resultado, siempre podrá acceder a ellos a través de su cuenta de Gmail desde cualquier computadora.
- Sincronice y respalde todo. Ya sea que escriba un borrador de un correo electrónico, agregue un número de teléfono de un contacto, agregue un evento en su calendario, todo su trabajo es respaldado continuamente por Google y es sincronizado con cualquier computadora en la que use la misma cuenta de Google.
- Acceso desde cualquier lugar. Revise las más recientes actividades de su calendario, correos electrónicos, mensajes de texto o publicaciones en redes sociales en cualquier lugar, sin importar qué computadora o dispositivo móvil esté usando.
- Use otros servicios de Google. Su cuenta de Google también le permite provechar cualquier otra aplicación o servicio de Google que quiera usar, como Gmail, Google Maps, Navigation, Google Play, YouTube, Google Talk, mensajería instantánea y mucho más.

Nota: Si todavía no tiene una cuenta gratuita de Google, le recomendamos encarecidamente que abra una usando el asistente de configuración (Setup wizard) en este dispositivo a fin de optimizar el uso de su tablet.

- Su dispositivo está diseñado para funcionar con Google Mail (Gmail). Si no tiene una cuenta gratuita de Google, le recomendamos que abra una.
- Si ya tiene una cuenta de Google, pulse el icono "Yes" (sí).
- Si no tiene una cuenta de Google, pulse el icono "No" y será redireccionado a la pantalla de **Make it Google** (crear cuenta de Google).

Paso 5 - Make it Google

- Para crear una cuenta de Google, pulse el icono "Get an Account" (crear una cuenta).
 - En la siguiente pantalla podrá crear su nombre de usuario para su cuenta de Google.
 - El nombre de usuario de su cuenta de Google puede usarse como su nueva dirección de correo electrónico, la cual tendrá el siguiente formato:
(SuNombreDeUsuario@gmail.com).
 - Nota: Si no desea usar a Google Mail como su proveedor de correo electrónico, podrá usar esta tablet con una cuenta de correo electrónico de casi cualquier otro proveedor. Esto se explica detalladamente en la sección **E-mail** de este manual.
- Si no quiere crear una cuenta de Gmail, pulse el icono "Not Now" (ahora no).
- Luego de haber hecho su selección será redireccionado a los ajustes de Wi-Fi.

Si tiene algún problema con la operación de esta tablet, no la devuelva al comercio minorista donde la compró.

Su tablet de pantalla táctil incluye soporte técnico gratuito por teléfono o a través de Internet y nos complacerá ayudarlo a resolver sus problemas.

Para obtener soporte técnico a través de Internet, simplemente pulse el icono "Customer Help" (soporte al cliente) en la parte derecha inferior de la pantalla de inicio para ser direccionado de inmediato a nuestro sitio de soporte técnico. Para obtener soporte técnico por teléfono, llame al 855-998-4326 de lunes a sábados de 10am a 7pm.

Paso 6 - Ajuste su red Wi-Fi

- En la pantalla de su tablet aparecerá una lista de las redes inalámbricas disponibles.
- Seleccione el nombre de su red inalámbrica Wi-Fi desde la lista pulsándola.
- Si su red inalámbrica está protegida por contraseña, necesitará ingresar la contraseña en el campo de ingreso de contraseña que aparecerá al intentar conectarse.

- Pulse la línea de contraseña para que aparezca el teclado de la tablet.
 - Marque la casilla "Show Password" (mostrar contraseña) si quiere que su contraseña sea visible.
 - Las contraseñas que diferencian entre mayúsculas y minúsculas deben ser ingresadas exactamente como fueron creadas.
- Luego de ingresar su contraseña, pulse el icono "Connect" (conectar).
 - Espere unos 15-20 segundos hasta que el dispositivo se conecte a la red. A continuación aparecerá un tilde azul junto al nombre de la red inalámbrica que indica que la conexión fue exitosa, y se mostrará como "Connected" (conectado) bajo en el nombre de red.
 - Si tiene problemas para conectarse a su red Wi-Fi, contacte a su equipo de asistencia al cliente.
- Una vez que se haya establecido la conexión, pulse el icono "Next" (siguiente).

Paso 7 - Inicie sesión

- Ingrese la dirección de correo electrónico Gmail y su contraseña.
- Pulse el icono "Next" (siguiente).
 - Nota: aparecerá un diálogo que le preguntará si está de acuerdo con el contrato de licencia para usuario final (ULA) de Google.
 - Pulse "Yes" (sí) para aceptar.
 - Pulse "Cancel" (cancelar) si no acepta el contrato, pero no podrá acceder al sistema de correo electrónico de Google o a otras aplicaciones relacionadas.

Paso 8 - Entretenimiento

Puede comprar aplicaciones en la tienda de Google Play en forma rápida, sencilla y segura guardando la información de su tarjeta de crédito en el sistema con encriptado de 128 bits de Google Wallet.

- Pulse el icono "Setup Credit Card" (configurar tarjeta de crédito) para ingresar la información de su tarjeta de crédito en forma segura.
 - Por favor, lea la información de privacidad de Google pulsando el  icono antes de ingresar su información personal.
- Pulse el icono "Not Now" (ahora no) si no desea usar la función Google Wallet y continúe a la siguiente pantalla.

- Nota: Si no usa Google Wallet tendrá que ingresar la información completa de su tarjeta de crédito cada vez que quiera comprar en la tienda de Google Play.

Paso 9 - Respaldo y restauración

Puede realizar en forma fácil y automática respaldos de sus aplicaciones, configuraciones, fotos, vídeos libros, favoritos y otros datos en su cuenta de Google.

- Marque las opciones que desee usar. Podrá cambiarlas desde **Settings** (configuraciones) en cualquier momento.
- Cuando termine, pulse la flecha derecha en el extremo inferior derecho de la pantalla para continuar.

Paso 10 - Use los servicios de ubicación de Google

Puede usar los servicios de ubicación de Google para utilizar los datos de ubicación de su red Wi-Fi a fin de ayudar a las aplicaciones a determinar su ubicación aproximada cuando esté disponible. Esta información de ubicación es utilizada para: brindar instrucciones para llegar a su destino mientras conduce, encontrar restaurantes, comercios y cines cercanos, etc.

- Marque las opciones que desee usar. Podrá cambiarlas desde **Settings** (configuraciones) en cualquier momento.
- Cuando termine, pulse el icono "Next" (siguiente) en el extremo inferior derecho de la pantalla para continuar.

Paso 11 - Configuración finalizada


Su tablet está configurada y lista para usar.

- Pulse la flecha de atrás (Back) para realizar cambios adicionales.
- Pulse la flecha "Finish" (finalizar) para comenzar a usar su tablet.

Si tiene algún problema con la operación de esta tablet, no la devuelva al comercio minorista donde la compró.

Su tablet de pantalla táctil incluye soporte técnico gratuito por teléfono o a través de Internet y nos complacerá ayudarlo a resolver sus problemas.

Para obtener soporte técnico a través de Internet, simplemente pulse el icono "Customer Help" (soporte al cliente) en la parte derecha inferior de la pantalla de inicio para ser direccionado de inmediato a nuestro sitio de soporte técnico. Para obtener soporte técnico por teléfono, llame al 855-998-4326 de lunes a sábados de 10am a 7pm.

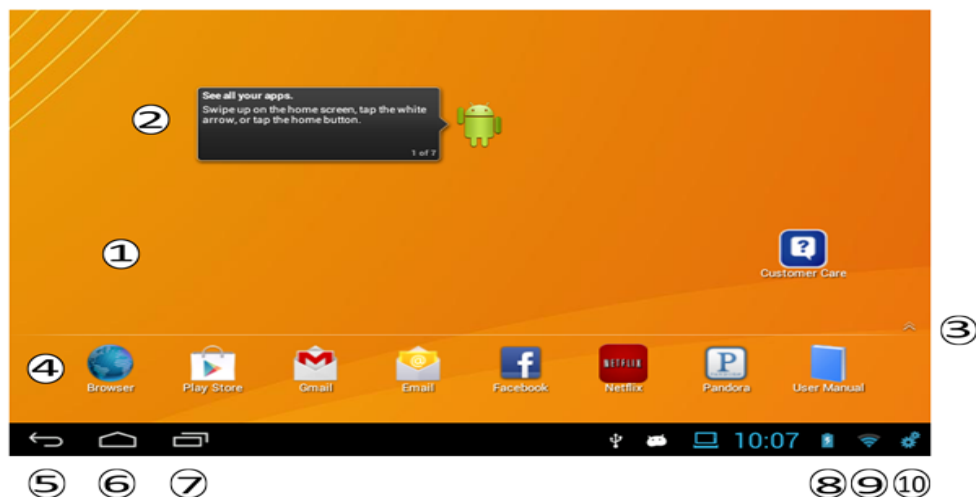


3. Identificación de la pantalla de Inicio

La pantalla de Inicio (Home) consiste de 5 áreas, las cuales se pueden personalizar para incluir diferentes Apps y Widgets. La siguiente imagen muestra el diseño de la pantalla principal de la tablet. Esta imagen muestra varios de los elementos de la pantalla de Inicio (Home), lo cuales son mencionados a lo largo de este manual.

Nombre	Descripciones
1. Pantalla de Inicio (Home)	La pantalla principal para agregar Apps y Widgets. Hay 5 páginas en la pantalla de Inicio que se acceden deslizando su dedo a la izquierda o la derecha.
2. Widget	Un "Widget" es una aplicación que se puede ubicar en cualquiera de las pantallas de inicio, para un fácil y rápido acceso.
3. Flecha del "Application Drawer" (cajón de aplicaciones)	Deslice su dedo hacia arriba o pulse para revelar todas sus aplicaciones o Apps.
4. Barra de Favoritos	Apps que permanecen en su pantalla de Inicio.
5. Icono de navegación hacia atrás	Abre la pantalla previa que estaba viendo.
6. Icono de navegación a inicio	Lo envía a la pantalla principal de inicio (Home).
7. Icono de navegación a Apps recientes	Abre una lista de imágenes en miniatura de las Apps que usó recientemente y las que usa con frecuencia.
8. Icono de estado de batería	Muestra el porcentaje de la carga de la batería.
9. Icono de estado de conexión Wi-Fi	Muestra la intensidad de la señal Wi-Fi.

10. Icono de configuraciones rápidas (Quick Settings)	Pulse para abrir las configuraciones rápidas (Quick Settings). Pulse el icono nuevamente para abrir la aplicación completa de Settings (configuraciones).
---	---

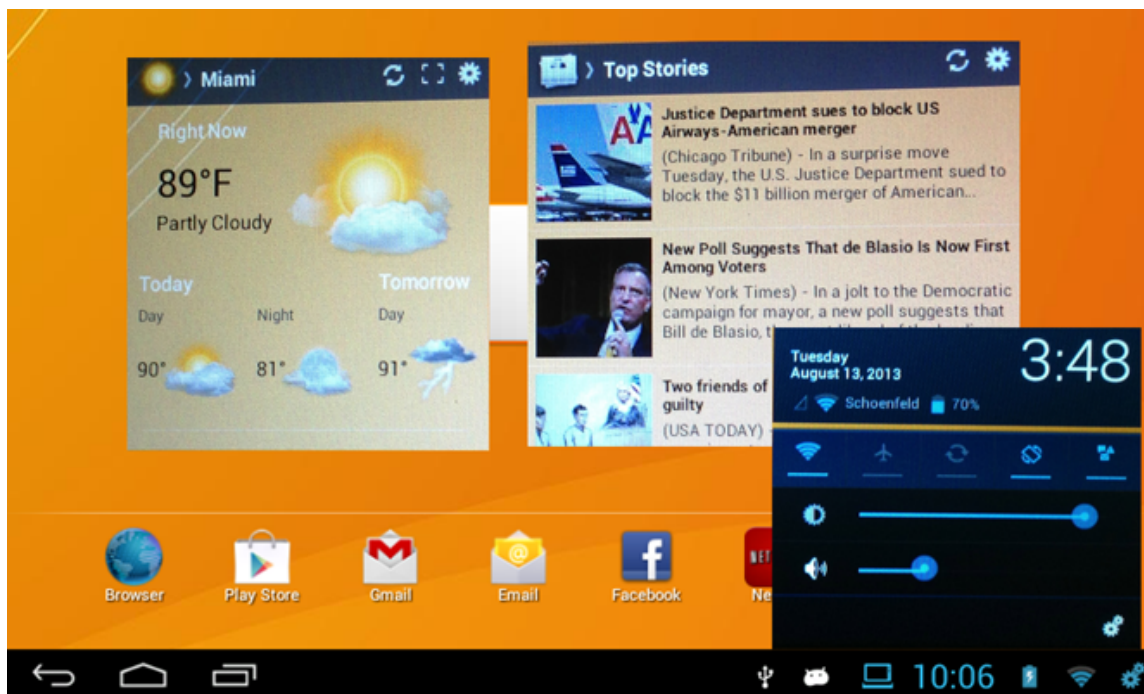

4. Configuraciones rápidas (Quick Settings)

La ventana emergente de Quick Settings (configuraciones rápidas) le permite ajustar o cambiar las configuraciones de su dispositivo en forma rápida desde su pantalla de Inicio pulsando el icono de Quick Settings (10).

Podrá ajustar los siguientes elementos:

- Smart Wi-Fi Connect (Conexión Wi-Fi inteligente) – Pulse para encender o apagar su Wi-Fi desde la pantalla de inicio (Home).
- Airplane Mode (Modo de avión) – Pulse para activar o desactivar.
- Rotate Screen (Rotar pantalla) – Pulse para rotar la pantalla.
- Lock Screen rotation (Bloquear rotación de pantalla) – Pulse para detener la rotación de pantalla cuando esté activada.
- Notification (Notificación) – Pulse para activar o desactivar las notificaciones.
- Brightness (Brillo)– Arrastre su dedo de izquierda a derecha para aumentar o disminuir el brillo de la pantalla.
- Volume (Volumen)– Arrastre su dedo de izquierda a derecha para aumentar o disminuir el volumen del sonido.

5. Uso de las aplicaciones

5.1. Navegación en Internet con su dispositivo

Su dispositivo viene con dos navegadores web. Un navegador web básico llamado "**Browser**" (navegador) y el navegador propio de Google llamado "**Chrome**".

Nota: Asegúrese de que el dispositivo esté conectado a una red Wi-Fi.

1. Abra el navegador Browser o Chrome pulsando el icono del navegador elegido. **Nota:** Puede encontrar los navegadores tanto en la barra de favoritos como en el App Drawer (cajón de aplicaciones). Abra el App Drawer pulsando la flecha del Application Drawer (3).
2. Para visitar un sitio web, toque el campo de dirección web para acceder al teclado y tipee la dirección del sitio web. También puede buscar sitios web usando palabras o frases de búsqueda. Luego de tipear su dirección web o de realizar su búsqueda, pulse el botón "**Go**" (ir) en el teclado.
3. Puede **desplazarse** a través de la página web arrastrando su dedo de arriba a abajo sobre la pantalla táctil para mover la página web.
4. Si la página web es muy grande para caber completamente en la pantalla de su tablet, podrá hacer un **paneo** hacia arriba, abajo, izquierda o derecha arrastrando su dedo sobre la pantalla táctil como lo hace para desplazarse.
5. Para ampliar la imagen en pantalla, puede **pellizcar** la pantalla táctil tocando la pantalla con dos dedos separados para luego unirlos. Para reducir la imagen en pantalla, toque la pantalla con dos dedos unidos para luego separarlos.
6. Para volver a cargar una página web, pulse el icono "Refresh" (actualizar)  a la izquierda del campo de dirección. Cuando una página web se esté cargando desde Internet, el icono "Refresh" se reemplazará por el icono "X". Pulse el icono "X" para detener la carga de la página web en el navegador.
7. Para agregar una página a Favoritos, toque el icono "Favorites" (favoritos)  a la derecha de la barra de favoritos. A continuación, aparecerá la ventana de "Add Bookmark" (agregar a favoritos) y podrá editar el nombre de la página si desea un nombre más corto o uno más fácil de recordar. Al finalizar, pulse el botón "Save" (guardar) u "OK".
8. Configuración de la página de inicio
La *página de inicio* es el primer sitio web que verá al iniciar su navegador.
 1. Navegue a la página que desee configurar como su página de inicio.
 2. Pulse el icono "Menu" (menú).
 3. Elija "Settings" (configuraciones) y aparecerá la pantalla de Settings.
 4. Elija la categoría "General".

5. Elija "Set Home Page" (configurar página de inicio) y aparecerá el menú de "Set Home Page" (página de inicio configurada).
6. Pulse el botón de "Current Page" (página actual) y su página de inicio se habrá establecido exitosamente.

Nota: Muchas de las páginas que visita en la web se pueden acceder directamente usando aplicaciones específicas. Facebook, Gmail, Twitter, YouTube y otros destinos web populares disponen de sus propias aplicaciones que podrá encontrar ya instaladas en su dispositivo o bien podrá descargar desde la tienda Google Play.

5.2. Google Play

Con cientos de miles de aplicaciones, Google Play tiene las indicadas para usted. Cuando descarga aplicaciones, éstas son descargadas directamente a su dispositivo. También podrán encontrar su próximo libro, una nueva canción o incluso una gran película en el catálogo que lo incluye todo, desde películas de taquilla y libros de éxito editorial, hasta millones de canciones.

5.3. Correo electrónico

Su dispositivo viene con dos lectores de correo electrónico. Una aplicación de correo electrónico básica llamada "**Email**" y la aplicación de correo electrónica propia de Google llamada "**Gmail**".

Para obtener la mejor experiencia usando este dispositivo, le recomendamos que cree una cuenta gratuita de Gmail y use Gmail como su aplicación de correo electrónico.

5.4. Configuración de una cuenta de correo electrónico distinta a Gmail

La aplicación Email se usa para acceder a cuentas de correo electrónico basadas en la web, o webmail, desde Yahoo! Mail Windows Live y otros. También le permite acceder a su cuenta de correo electrónico provista por su proveedor de servicios de Internet o incluso a su correo electrónico laboral, si está permitido.

Nota: Antes de configurar su cuenta de correo electrónico necesitará varios datos. Si está configurando una cuenta de correo electrónico laboral, necesitará comunicarse con su departamento de informática para saber si existen instrucciones o requerimientos adicionales para la configuración de su cuenta, ya que las configuraciones de correo electrónico y de seguridad pueden variar entre compañías.

1. La aplicación de correo electrónico se encuentra en el Apps Drawer (cajón de aplicaciones). También podrá encontrar accesos directos a la aplicación en la pantalla de inicio (Home) y en la barra de favoritos (Favorites).
2. Inicie la aplicación de correo electrónico pulsándola.
3. A continuación, aparecerá la pantalla de configuración de cuenta de correo electrónico (E-Mail Account Setup).

4. Ingrese la dirección de correo electrónico que desee configurar en este dispositivo.
5. Ingrese la contraseña para esta cuenta.
6. Pulse el botón "Next" (siguiente).
7. Seleccione el tipo de cuenta.
 - Necesitará saber si su cuenta de correo electrónico es POP3, IMAP o Microsoft Exchange.
 - Seleccione el tipo de cuenta que corresponda y siga las instrucciones en pantalla para finalizar la configuración de su cuenta de correo electrónico.
 - Al cambiar la frecuencia de verificación de nuevos correos electrónicos a más de 15 minutos podrá ahorrar vida de batería.

Luego de pulsar "Next" (siguiente), se lo llevará a la bandeja de entrada de su cuenta de correo electrónico. Su tablet sincroniza todos los correos electrónicos pendientes en su cuenta. Dependiendo de cuantos nuevos correos electrónico tenga, la sincronización puede demorar unas cuantos minutos.

5.5. Agregar más cuentas de correo electrónico

La aplicación de correo electrónico Email se puede configurar para varias cuentas. (p. ej., personal, laboral) Siga estos pasos para agregar una cuenta de correo electrónico adicional.

1. Inicio de la aplicación de correo electrónico
2. Elija "Add Account" (agregar cuenta) desde el icono de Settings (Configuraciones).
3. Siga los pasos 4 a 7 de la sección anterior para configurar las cuentas de correo electrónico adicionales.

5.6. Agregar música, fotos y vídeos a su dispositivo por USB o tarjeta microSD

1. Copie los archivos que quiera transferir a una unidad de almacenamiento USB o una tarjeta microSD. Estos archivos pueden ser fotos, archivos de música o archivos de vídeo.
Nota: Su dispositivos no soporta todos los tipos de archivos de medios, por mostrará los formatos más populares. Por favor, lea la sección de Especificaciones técnicas para asegurarse cuáles son los formatos de archivo soportados.
2. Inserte la unidad de almacenamiento USB en el puerto USB o la tarjeta microSD en el puerto de tarjetas microSD en la parte inferior del dispositivo.
3. Abra la aplicación "Gallery" (galería) o "File Manager " (gestor de archivos) para ver, reproducir, eliminar o copiar archivos a su dispositivo.

4. Desmonte la unidad de almacenamiento USB o la tarjeta microSD antes de retirarla de su dispositivo. Para un retiro seguro, pulse Settings > Storage > Unmount Storage (Configuraciones>Almacenamiento>Desmontar unidad de almacenamiento). Ahora podrá proceder a retirar su unidad USD o tarjeta microSD con seguridad.

5.7. Agregar música, fotos y video a su dispositivo desde una PC con Windows

1. Conecte su dispositivo a su PC usando el cable USB provisto.
2. Una vez que haya conectado su dispositivo a la PC, aparecerá un diálogo emergente en la PC que le pedirá que elija la forma de agregar elementos a su dispositivo desde el sistema de almacenamiento de Windows.
3. La forma más simple de mover archivos es seleccionando "Open device to view files" (abrir dispositivo para ver los archivos).
4. Su dispositivo se mostrará en su PC como un icono de unidad de disco montada.
5. Haga doble clic sobre el icono de la unidad de disco montada y simplemente arrastre y suelte los archivos que desee copiar de la PC a la carpeta de destino en su dispositivo. (P. ej., Photos (fotos), Music (música), Movies (películas), etc.)
6. Después de que los archivos han completado la copia de su dispositivo, puede des-montar el dispositivo de su PC siguiendo los procedimientos des-montaje adecuados y luego desconecte el cable USB.

Nota: También podrá copiar archivos de su dispositivo a su PC siguiendo estos mismos pasos.

5.8. Transferencia de archivos usando Mac

1. Instale el programa Android File Transfer (transferencia de archivos Android) desde www.android.com/filetransfer y siga las instrucciones en el sitio web. (Si está usando el programa Android File Transfer por primera vez, haga doble clic sobre el icono para abrirlo. Después de la primera conexión, se abrirá automáticamente cada vez que conecte su dispositivo.)
2. Conecte su dispositivo a su computadora usando el cable USB provisto. Se iniciará el programa Android File Transfer y se abrirá una ventana que mostrará el contenido de su dispositivo, junto con los detalles de espacio de almacenamiento en la parte inferior de la pantalla.
3. En esta ventana podrá abrir y cerrar carpetas, crear nuevas carpetas y arrastrar archivos desde la computadora hacia la tablet y viceversa.
4. Cierre la aplicación Android File Transfer y desconecte el cable USB de su Mac cuando haya finalizado.

5.9. Visualización de archivos de música, imágenes y vídeo en su dispositivo

1. Use la aplicación Gallery (galería) para visualizar sus fotos y vídeos.
2. Abra la aplicación Gallery en el Application Drawer (cajón de aplicaciones) pulsándola.
3. Podrá ver que sus archivos estarán automáticamente organizados en las carpetas para imágenes o películas.
4. Para ver una foto o un vídeo, simplemente pulse el elemento deseado.
5. Si tiene más de una imagen o vídeo, podrá deslizarse de izquierda a derecha con su dedo sobre la pantalla táctil para ver todos los elementos.
6. Para ver un vídeo, pulse el icono "**Play**" (reproducir). Para pausar un vídeo, pulse el vídeo nuevamente.
7. Para eliminar o editar una foto o vídeo, simplemente pulse el elemento y luego pulse el icono de configuración que aparecerá en la esquina superior derecha.
8. A continuación, aparecerá una serie de opciones de edición. Elija la que desee aplicar.

Si tiene algún problema con la operación de esta tablet, no la devuelva al comercio minorista donde la compró.

Su tablet de pantalla táctil incluye soporte técnico gratuito por teléfono o a través de Internet y nos complacerá ayudarlo a resolver sus problemas.

Para obtener soporte técnico a través de Internet, simplemente pulse el icono "Customer Help" (soporte al cliente) en la parte derecha inferior de la pantalla de inicio para ser direccionado de inmediato a nuestro sitio de soporte técnico. Para obtener soporte técnico por teléfono, llame al 855-998-4326 de lunes a sábados de 10am a 7pm.


6. Uso de su dispositivo

6.1. Apps

Es la abreviatura de "Applications" (aplicaciones). Las Apps son programas que se pueden descargar a su dispositivo desde la tienda de Google Play. Las Apps pueden ser gratuitas o pagas.

- **Para abrir una App**

- Para iniciar una App, simplemente púlsela para abrir el elemento o iniciarlo.

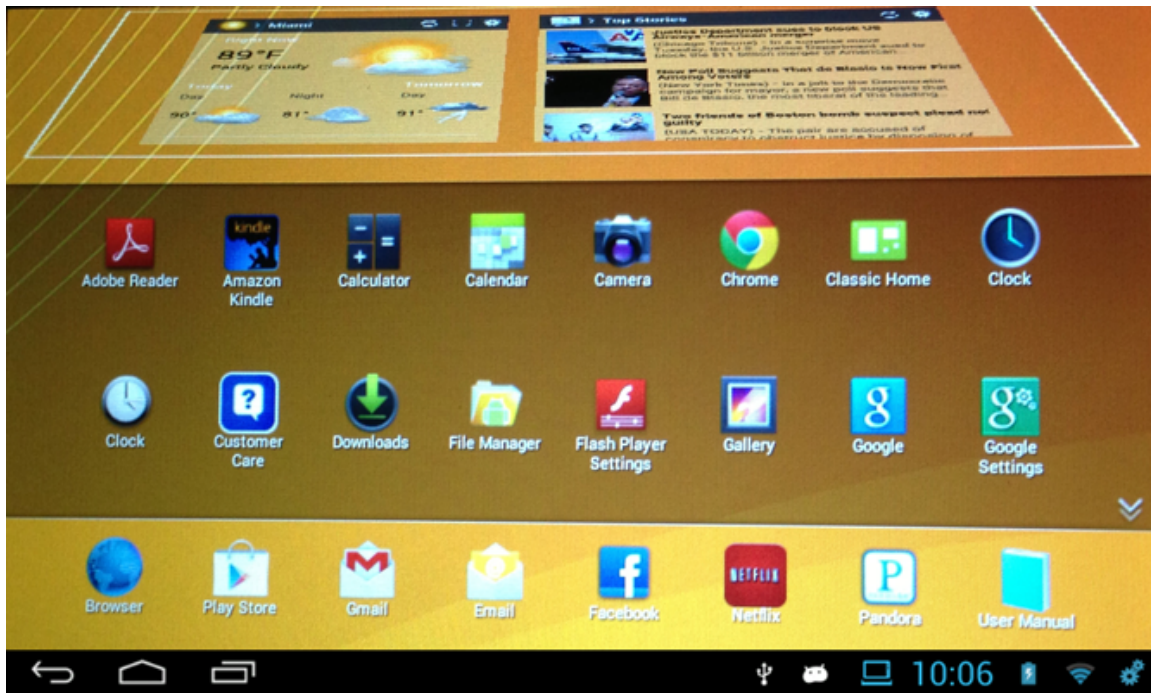

- **Application Drawer (cajón de aplicaciones)**
 - El Application Drawer (o App Drawer) es donde se guardan todas las aplicaciones. Este "cajón de aplicaciones" funciona como la puerta de un garaje, la cual se levanta para mostrarle todas sus aplicaciones almacenadas. Podrá acceder a ella de dos maneras:
 1. Deslizando su dedo hacia arriba o pulsando la flecha del Application Drawer (3) en la parte inferior de su pantalla para abrir el Application Drawer.
 2. O puede pulsar dos veces seguidas el icono de Home Navigation (navegación de inicio) en la parte inferior de su pantalla. Esto lo llevara de vuelta a la pantalla de inicio (Home) y abrirá el App Drawer.
- **Para mover una App de su App Drawer a su pantalla de inicio**
 - Abra el Application Drawer (cajón de aplicaciones)
 - Pulse y mantenga presionado el icono de la aplicación que desea mover.
 - El icono de la App parecerá flotar. Continúe manteniendo presionado el icono y arrástrelo hasta la pantalla de inicio.
 - Una vez que haya seleccionado la ubicación deseada para su App en la pantalla de inicio, simplemente suéltela.
- **Para mover una aplicación a la pantalla de inicio**
 - Pulse y mantenga presionado el icono de la aplicación que desea mover.
 - El icono de la App parecerá flotar. Aparecerá una cuadrícula en la pantalla de inicio.

- Continúe pulsando el icono y arrástrelo hasta donde desee ubicarlo en su pantalla de inicio.
- Una vez que haya seleccionado la ubicación, simplemente suelte el icono.


- **Para cerrar una App activa en segundo plano**

Las aplicaciones activas en segundo plano afectan el rendimiento de su dispositivo y reducen la vida de la batería. Para cerrar sus Apps siga los siguientes pasos:

1. Abra el menú de aplicaciones recientes en su barra de navegación.
2. Encuentre la aplicación que desee cerrar y deslice el dedo horizontalmente hacia fuera de la pantalla. Este método cerrará la mayoría de las aplicaciones, pero algunas seguirán ejecutándose en segundo plano en alguna medida.
3. Para asegurarse de que la aplicación se cierre completamente, deberá abrir la aplicación de configuraciones (**Settings**) de su dispositivo.
4. Haga clic sobre las configuraciones de las **"Apps"**
5. Asegúrese de ver las aplicaciones en ejecución (**"Running"**) deslizando su dedo sobre la pantalla hasta que "Running" se muestre en la parte superior de la pantalla.
6. Marque la aplicación que desee cerrar.
7. Pulse el icono **"Stop"** (detener).

- **Para eliminar una App**

- Pulse y mantenga presionado el icono de la aplicación que desea eliminar.
- El icono de la App parecerá flotar.
- Una papelera  aparecerá en la esquina inferior derecha de su pantalla de inicio (Home).
- Arrastre la aplicación hasta la papelera. La papelera se pondrá roja.  Suelte su dedo para eliminar la App.

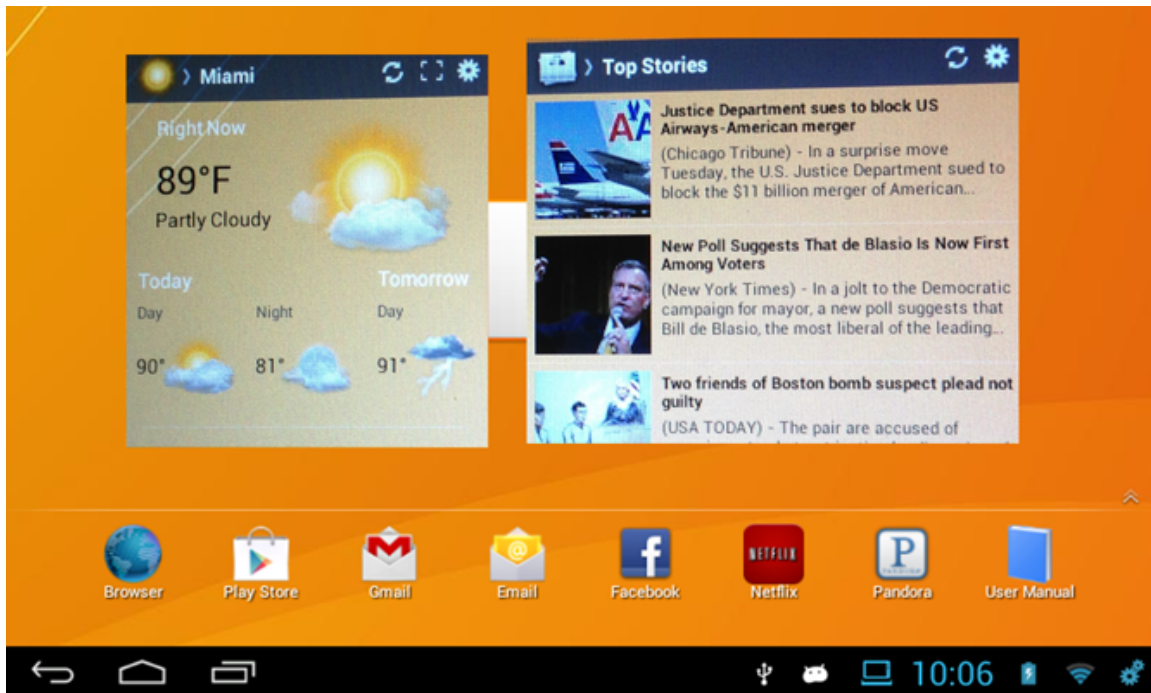

6.2. Widgets

Un "Widget" es una vista de una aplicación que se puede ubicar en su pantalla de inicio, para un fácil y rápido acceso. Las aplicaciones de noticias y clima en su dispositivo son algunos ejemplos de Widgets. Otro popular Widget que puede instalar o descargar es el de Facebook y Twitter. Estos Widgets se actualizan en tiempo real, mostrándole las publicaciones o tweets más recientes de sus amigos.

- **Agregar Widgets**
 - Pulse y mantenga presionado su dedo en la pantalla de inicio (Home). Asegúrese de no tocar una aplicación u otro Widget.
 - Aparecerá un diálogo titulado "Agregar a la pantalla de inicio (Add to Home Screen)".
 - Pulse el icono "Widgets".
 - Aparecerá un diálogo titulado "Choose Widgets" (seleccionar Widgets).
 - Pulse el nuevo Widget que desee sobre su pantalla.
 - El nuevo Widget aparecerá en la pantalla en que se encuentre.
- **Ajuste del tamaño del Widget**
 - Luego de colocar un nuevo Widget en su pantalla, una línea con pequeños bloques azules rodeará a su Widget.
 - Puede aumentar o reducir el tamaño del Widget sosteniendo su dedo sobre uno de los bloques para luego arrastrarlo.
 - Una vez que haya ajustado el Widget al tamaño deseado, simplemente pulse el Widget para finalizar.

- **Para mover un Widget a la pantalla de inicio**
 - Pulse y mantenga presionado el icono del Widget que desea mover.
 - El icono del Widget parecerá flotar. Aparecerá una cuadrícula en la pantalla de inicio.
 - Continúe pulsando el Widget y arrástrelo hasta donde desee ubicarlo en su pantalla.
 - Podrá moverla hasta otra pantalla moviendo el Widget a la izquierda o a la derecha de la pantalla. Mantenga el dedo presionado y espere hasta que el Widget se mueva a la siguiente pantalla.
 - Una vez que haya seleccionado la ubicación deseada para su Widget en su pantalla, simplemente suéltelo.
- **Eliminación de Widgets**
 - Pulse y mantenga presionado el icono del Widget que desea eliminar.
 - El icono del Widget parecerá flotar. Una papelera aparecerá en la esquina inferior derecha de su pantalla de inicio (Home).
 - Arrastre el Widget hasta la papelera. El Widget y la papelera se pondrán rojos. Suelte su dedo para eliminar el Widget



6.3. Barra de favoritos

- **Personalización de la barra de favoritos**
 - Puede personalizar su barra de favoritos para que todas sus aplicaciones favoritas se encuentren a un toque de distancia.
- **Para mover una aplicación a su barra de favoritos**
 - Abra el Application Drawer (cajón de aplicaciones)
 - Pulse y mantenga presionado el icono de la aplicación que desea mover hasta que parezca flotar.
 - Siga manteniendo su dedo sobre el icono y arrástrelo hasta la barra de favoritos (Favorite Bar).
 - Nota: Sólo puede tener hasta 8 aplicaciones en su barra de favoritos.
 - Si intenta agregar demasiadas aplicaciones en su barra de favoritos, la última aplicación en la barra volverá al Application Drawer (cajón de aplicaciones).
 - Luego de seleccionar la ubicación deseada en la barra de favoritos, simplemente suéltela.
- **Para quitar una aplicación de su barra de favoritos**
 - Pulse y mantenga presionado el icono de la aplicación que desea mover hasta que parezca flotar.
 - Una flecha  aparecerá en la esquina inferior derecha de su pantalla de inicio (Home).
 - Arrastre la aplicación hacia la flecha. La flecha se pondrá verde. Suelte su dedo y la aplicación volverá al App Drawer (cajón de aplicaciones).

6.4. Configuración del fondo de pantalla

- Para cambiar el fondo de pantalla en su pantalla de inicio (Home):
 - Pulse y mantenga su dedo sobre la pantalla de inicio. Asegúrese de no tocar una aplicación u otro Widget.
 - Aparecerá un diálogo titulado "Add to Home Screen" (agregar a la pantalla de inicio).
 - Pulse el icono "Wallpapers" (fondos de pantalla).
 - Aparecerá un diálogo titulado "Select wallpaper from" (seleccionar fondo de pantalla de).
 - Pulse los diferentes tipos de fondos de pantalla de los diferentes estilos presentados.
 - Seleccione el fondo de pantalla deseado y pulse el botón "Set wallpaper" (Configurar fondo de pantalla) para confirmar su selección.

6.5. Rotación de pantalla

- La pantalla rotará automáticamente en forma predeterminada si gira su dispositivo.

- Si prefiere no usar esta funcionalidad, puede desactivarla desde **Quick Settings** (configuraciones rápidas) o desde la aplicación completa de **Settings** (configuraciones).
- Vaya a Settings (configuraciones) > Accessibility (accesibilidad) > Auto-rotate screen (autorotar pantalla).
- Desmarque la casilla para que la pantalla no rote automáticamente cuando cambie la orientación de la tablet.

7. Uso de la cámara

La aplicación Camera (cámara) es una combinación de cámara y videocámara. Podrá ver las fotos y los vídeos capturados con su cámara en la aplicación Gallery (galería). Para tomar fotos y grabar vídeos, primero toque el icono de la aplicación Camera (cámara)  que se encuentra en el Application Drawer (cajón de aplicaciones).

• Captura de imágenes estáticas

- Con la aplicación Camera (cámara) abierta, enfoque el lente de la cámara al objeto a ser fotografiado, hasta que el objeto aparezca en la pantalla.
- Para tomar una foto, pulse el círculo azul a la derecha de la pantalla.
- **Nota:** Este dispositivo tiene una cámara frontal diseñada para facilitar el videochat. Dé vuelta la tablet y enfoque lo que desea capturar, pulse el círculo azul a la derecha de la pantalla para capturar una imagen estática.

• Captura de imágenes panorámicas

La aplicación Camera (Cámara) se puede usar para capturar imágenes panorámicas, colocando múltiples imágenes juntas automáticamente mientras panea la cámara a lo largo de un paisaje.

- Toque el icono Panorama (panorámica)
- Mantenga la tablet en posición horizontal, encuadre la imagen en el lado izquierdo o derecho de donde desea que comience la foto panorámica.
- Toque el círculo verde a la derecha de la pantalla, mueva lentamente la tablet en posición horizontal hacia la derecha o hacia la izquierda manteniendo a la tablet nivelada.
- Aparecerá una barra azul de progreso en el extremo inferior de la pantalla, la cual mostrará cuánto se ha grabado de la vista panorámica. La cámara le notificará si se mueve demasiado rápido.

NOTA: Para obtener mejores resultados, sostenga la tablet con ambas manos, manténgala tan nivelada cómo sea posible, y mueva la tablet lentamente. Cuando se termine de grabar la panorámica, espere un momento para que la imagen se procese y se grave. Toque la imagen en

miniatura que aparece en la esquina superior derecha de la pantalla para ver la panorámica.

- **Grabación de vídeos**

La aplicación Camera (cámara) se puede usar para grabar vídeos.

- Con la aplicación Camera abierta, toque el icono de video cámara  para cambiar al modo de grabación de vídeos.
- Luego de enfocar el lente de la cámara al objeto que desea grabar, pulse el círculo rojo a la derecha de la pantalla para comenzar a grabar.

NOTA: Mientras graba un vídeo, puede tomar fotos tocando la pantalla. La pantalla se enmarcará momentáneamente con una línea roja cuando se tome una foto. la grabación del vídeo no será interrumpida.

- Toque el círculo rojo con el cuadrado blanco que se encuentra a la derecha de la pantalla para detener la grabación.

- **Ver sus fotos y vídeos en la aplicación Gallery (galería)**

- Cuando toma un foto o graba un vídeo en su tablet, el archivo se graba en la aplicación Gallery.

8. Actualización del Firmware

- Esta tablet puede recibir actualizaciones por aire. Estas actualizaciones pueden ser actualizaciones del sistema operativo Android, mejoras de la interfaz de usuario y ofertas de mejoras de productos.
- Su compra incluye un número limitado de actualizaciones del sistema operativo e interfaz de usuario hasta el 31 de diciembre del 2014.
- Seguirá recibiendo notificaciones de actualizaciones disponibles pasado el 31 de diciembre del 2014, pero no serán gratis.

NOTA: No todas las actualizaciones del sistema operativo Android serán compatibles con su dispositivo. Sólo recibirá notificaciones sobre las actualizaciones que se puedan usar en su tablet.

9. Uso de la caja del teclado

- Paso 1 - Asegure las cuatro esquinas de la tableta a la caja usando las cuatro correas elásticas.
- Paso 2 - Conecte el cable mini USB del teclado en el puerto Mini USB (3) en la tableta.
 - **NOTA:** el cable sólo se puede insertar en una dirección. No use fuerza excesiva al conectar el cable en el puerto USB Mini.
- Paso 3 - Gire la tableta ON para comenzar a usar el teclado.
 - **NOTA:** las tres luces LED situados encima de las teclas se indican cuando Bloq Num, Bloq Mayús y Bloq Despl están en uso.

10. Resolución de problemas

- **Batería sin carga**
 - Asegúrese de que su dispositivo esté cargado correctamente (Sección 1.3)
- **Tablet no se mueve más allá de la pantalla de Android después de una actualización de software**
 - En algunos casos, las actualizaciones de software pueden tomar una hora o más para indexar todos los archivos del sistema operativo necesarios necesarios para ejecutar el tablet.
 - Asegúrese de conectar el adaptador de CA durante las actualizaciones de software para asegurarse de que la batería no se muere.
- **La pantalla está inmóvil/no responde**
 - Reinicie el dispositivo apagándolo y luego encendiéndolo nuevamente.
 - Si el dispositivo no responde al botón de encendido/apagado (Power), inserte un objeto fino y largo (como un clip) en el orificio de restauración manual para realizar una restauración manual del dispositivo.
- **La Tablet está lenta**
 - Cierre las aplicaciones que no esté usando y que estén ejecutándose en segundo plano (Sección 7.1).
- **El archivo de música/película no se reproduce**
 - Asegúrese de que el formato del archivo que intenta reproducir se encuentre en la lista de formatos compatibles de audio/vídeo, en la sección de especificaciones técnicas del manual (Sección 12)
- **La unidad de almacenamiento de la Tablet está llena**
 - Agregue más espacio para almacenamiento insertando una tarjeta microSD (Sección 1.2)
 - Transfiera o elimine los archivos que no esté usando utilizando la aplicación File Manager (gestor de aplicaciones) (Sección 6)
- **La recepción Wi-Fi es débil**
 - Asegúrese de no estar demasiado lejos del router/punto de acceso Wi-Fi. Recomendamos mantener una distancia de entre 0 a 65 pies (de 0 a 20 metros).
 - Reinicie el router Wi-Fi.
- **Respaldo y restauración**
 - No active la restauración de los datos de fábrica a menos que se haya comunicado previamente con una persona de asistencia al cliente. Si lo hace, podría perder todos los datos guardados en su dispositivo.

11. Asistencia al cliente

Si tiene algún problema con la operación de esta tablet, no la devuelva al comercio minorista donde la compró.

Su tablet de pantalla táctil incluye soporte técnico gratuito por teléfono o a través de Internet y nos complacerá ayudarlo a resolver sus problemas.

Para obtener soporte técnico a través de Internet, simplemente pulse el icono "Customer Help" (soporte al cliente) en la parte derecha inferior de la pantalla de inicio para ser direccionado de inmediato a nuestro sitio de soporte técnico. Para obtener soporte técnico por teléfono, llame al 855-998-4326 de lunes a sábados de 10am a 7pm.

12. Technical Specifications

Screen	7.0 (inches) (800x480) Capacitive touch screen, 5 point touch
Battery	Lithium-ion polymer battery (3.7V 2600mAh) Standby Time: ~100 hours Play video Time: ~ 3 hours
Camera	0.3 Mega Pixel Front Facing camera Video Panorama
Memory	8 GB
CPU	Allwinner A13 (ARM Cortex A8 at 1.1GHz, 512KB L2 Cache, GPU Mali400, HD Video Decoding
GPU	Mali400
RAM	512 MB
Wi-Fi	802.11 b/g/n
Removable Memory Storage	microSD Card max 32 GB (not included)
Connectivity	
Mini USB	USB 2.0
Audio / headphone jack	3.5mm
Android OS Version	Android 4.1 (Jellybean)
Compatibility File Types	
Video Format	MEPG 1/2/4, H.263/H.264, RMVB, WMV/VC-1, MVC, AVS, MJPEG. (UP TO 2160P)
Audio Format	MP3, WMA, WAV, OGG, FLAC, ALAC, APE, AAC, AC-3



LIMITED ONE-YEAR TABLET WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a one-year period from the original date of purchase from an authorized VIDAO dealer.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

We will repair or replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the one-year warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-998-4326.

This warranty applies only under conditions of normal use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, outdoor use, commercial use, or modification of, or to, any part of the product, including rooting the operating system and other software. Damage to any external media such as SD, microSD, USB devices, and/or other memory devices, or loss of data are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall VIDAO be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

VIDAO makes no guarantee, express or implied, as to the capability, performance, or quality of any third-party software or equipment used with this product.

UNDER NO CIRCUMSTANCES WILL VIDAO BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

